

Denali Ignition Relocation

Triumph Bonneville, Thruxton & Scrambler

MBK.11.10000 Instructions Rev:00

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

 
All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5	3.5 ft-lbs (5 Nm)
M6	7 ft-lbs (9.6 Nm)
M8	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Distributed by:		
Twisted Throttle LLC	phone: 855.255.5550	
570 Nooseneck Hill Rd	fax: 401.223.6955	
Exeter, RI 02822	www.twistedthrottle.com	



Installation Instructions



Step One: Bolt the ignition to the mounting bracket (#1) using the screws washers and bolts provided (#2,3,4). Remove the OEM upper right hand side frame bolt. Use the spacer washer and bolt (#5,6,7) to attached the ignition bracket to the motorcycle.

