

FITTING INSTRUCTIONS FOR CP0204BL/WH CRASH PROTECTORS KAWASAKI ZX6R '07-'09



PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – the rubber washers should be thrown away!

For 2009 model please see latter part of document

2007-2008 models only

Offside (right side as you sit on the bike)

PLEASE NOTE THAT THE EXISTING ENGINE BOLT ON THIS SIDE CAN SOMETIMES BE HARD TO REMOVE. WE RECOMMEND THAT YOU USE A VERY HIGH QUALITY HEX DRIVE BIT OR HAVE YOUR LOCAL DEALER INSTALL THE KIT.

- Loosen right-side engine bolt from the bike located in the middle of the castellated adjuster nut (do not remove the castellated adjuster nut) This is made easier by loosening the fairing, (there is no need to remove it completely)
- Replace the fairing and secure with all of the necessary screws
- Pull the bolt out until it touches the fairing, and mark the position on the edge of the fairing.
- Carefully start to cut the fairing on your mark, using a Dremel tool or similar, until the hole is large enough to allow the OEM bolt to be removed.
- Take one of the R&G bolts and place a washer behind the head followed by a shake proof washer
- Pass the bolt through the crash protector
- Offer the assembly to the bike and where the neck of the protector touches the fairing draw around it with a pencil.
- Remove the assembly from the bike.
- Using a Dremel tool or similar, gradually cut the fairing until the hole is large enough to accept the neck of the crash protector
- When you are happy with the hole (it will not be totally round), deburr the edges
- Place the R&G castellated spacer on the end of the bolt, with the teeth facing away from the protector
- Install R&G components, ensuring that the lugs on the castellated spacer face towards the bike and locate over the grooves on the existing adjuster nut, Note the large diameter of the protector faces towards the front of the bike
- Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not over tighten as damage can occur to the bike. Do not exceed 40nm of torque.
- When happy that everything is correct, place the blanking cap into the end of the protector.

R&G Racing



Nearside (left side as you sit on the bike)

- Take one of the R&G bolts and place a washer behind the head followed by a shake proof washer
- Pass the bolt through the crash protector
- Place the R&G spacer on the end of the bolt, with the large diameter next to the protector
- Remove left-side engine bolt from the bike.
- Install R&G components, ensuring that the small diameter of the spacer faces towards the bike and locates in the recess in the frame. Note the large diameter of the protector faces towards the front of the bike.
- Tighten, but, as above, do not over tighten.
- When happy that everything is correct, place the blanking cap into the end of the protector.

Due to the risk of cross threading of bolts etc; we always recommend that our products be fitted by one of our official dealers or a qualified mechanic.

2009 models only





PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – the rubber washers should be thrown away!

Offside (right side as you sit on the bike)

- Loosen right hand side mid fairing (there is no need to remove it completely).
- Loosen right-side engine bolt from the bike located in the middle of the castellated adjuster nut as arrowed above right (do not remove the castellated adjuster nut).
- Secure the fairing with all of the necessary screws.
- Paint end of bolt with paint or tippex and unscrew the bolt until it touches the fairing, and mark the position on the edge of the fairing.
- Carefully start to cut the fairing on your mark, using a Dremel tool or similar, until the hole is large enough to allow the OEM bolt to be removed.
- Take one of the R&G bolts and place a washer behind the head followed by a shake proof washer.
- Pass the bolt through the crash protector.
- Offer the assembly to the bike and where the neck of the protector touches the fairing draw around it with a pencil.
- Remove the assembly from the bike.
- Using a Dremel tool or similar, gradually cut the fairing until the hole is large enough to accept the neck of the crash protector.
- When you are happy with the hole (it will not be totally round), deburr the edges.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com



- Place the R&G castellated spacer on the end of the bolt, with the teeth facing away from the protector
- Install R&G components, ensuring that the lugs on the castellated spacer face towards the bike and locate over the grooves on the existing adjuster nut. Note the large diameter of the protector faces towards the front of the bike
- Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not over tighten as damage can occur to the bike. Do not exceed 40nm of torque.
- When happy that everything is correct, place the blanking cap into the end of the protector.





Nearside (left side as you sit on the bike)

- Loosen left hand side mid fairing (there is no need to remove it completely).
- Remove inner cover pictured above left.
- Position cover over template as shown above right and using Dremel or similar remove area as shaded on template (it is recommended that you first trim cover 3-4mm away from line and carefully remove remaining portion after trial-fitting with new bolt, bobbin and spacer).
- Loosen left-side engine bolt from the bike located as arrowed above left this is made easier by loosening the fairing (there is no need to remove it completely).
- Secure the fairing with all of the necessary screws.
- Paint end of bolt with paint or tippex and unscrew the bolt until it touches the fairing, and mark the position on the edge of the fairing.
- Carefully start to cut the fairing on your mark, using a Dremel tool or similar, until the hole is large enough to allow the OEM bolt to be removed.
- Take one of the R&G bolts and place a washer behind the head followed by a shake proof washer.
- Pass the bolt through the crash protector.
- Place the R&G spacer on the end of the bolt, with the large diameter next to the protector.
- Remove left-side engine bolt from the bike.
- Install R&G components, ensuring that the small diameter of the spacer faces towards the bike and locates in the recess in the frame. Note the large diameter of the protector faces towards the front of the bike.
- Tighten, but, as above, do not over tighten.
- When happy that everything is correct, place the blanking cap into the end of the protector.

Due to the risk of cross threading of bolts etc; we always recommend that our products be fitted by one of our official dealers or a qualified mechanic.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com



any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorised (if not pre-authorised the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in resellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P - at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.