

## PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE

## Fitting instructions for CP0118BL Crash Protectors Ducati 749/999

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away*!

- Remove both fairings
- Undo nut holding engine bolt located at centre of bike (this is on the right side as you sit on the bike)
- Take the R&G 12mm engine bar and hold bar against end of bolt from which you have just removed the nut
- With a soft hammer, tap engine bar through, removing original bolt at the same time
- When bar is protruding equally each side of the frame, take one of the R&G aluminium blocks and place over the bar with 12mm drilled hole and boss going into frame
- Note for the 749 "basic" model, you will not need to use the two spacers supplied for all other models place the spacers over the engine bar before fixing the aluminium blocks in place
- Note the 2 drilled 6mm holes go towards rear of bike & 12mm tapped hole towards top (see images above)
- Place 12mm washer and nut onto bar
- Repeat above procedure for other side
- Tighten both nuts equally take care not to overtighten the nyloc nuts will hold the assembly tight once they lock up
- Take one of the clamps and fit to block using two of the 6mm cap head bolts and two washers tighten equally. Make sure no wires are trapped before tightening the assembly
- Note there is a right and a wrong way for the clamps looking from bottom of clamp, small diameter of taper faces rear of bike. For bikes that are 05' onwards the hook shaped clamp should be used on the RHS.
- Repeat on other side
- On the left hand side, the clutch feed pipe can be lifted to run over the top of the aluminium block see left hand picture above this does not affect clutch operation
- Insert short bolt (marking tool) into 12mm tapped hole on outside of aluminium block on one side (leave about 26mm (1 inch) protruding
- Paint middle of the bolt head
- Refit fairing
- Gently push fairing against the bolt head to leave a small paint mark on the inside of the fairing
- Remove fairing
- Centre drill on mark left by paint, working from inside of fairing outwards
- Refit fairing and check position
- Remove fairing and cut using 28mm hole cutter (work from outside inwards)
- Clean up the hole to leave it looking smooth. Trim the foam on the inside of the fairing around the hole
- Repeat for other side, using same short bolt marking tool as used before
- Replace fairings
- Place a washer behind the head of one of the M12 bolts and pass through one of the protectors
- Pass assembly through the hole in the fairing and locate into tapped hole of aluminium block
- Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the bike. Do not exceed 40nm of torque.
- Repeat on other side

Due to the risk of cross-threading of bolts etc; we always recommend that our products be fitted by one of our official dealers or a qualified mechanic.



## CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

## **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorised (if not pre-authorised the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.