

## Denali Horn Mount

Triumph Bonneville & Thruxton

HMT.11.10500 Instructions Rev:00

### PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.



**Distributed by:**

Twisted Throttle LLC  
570 Nooseneck Hill Rd  
Exeter, RI 02822

phone: 855.255.5550  
fax: 401.223.6955  
www.twistedthrottle.com



### Installation Instructions

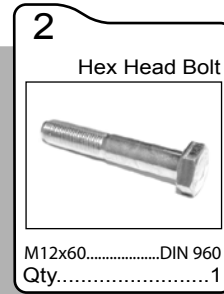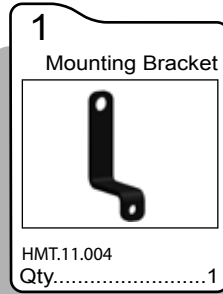

**Step One:** Remove the OEM bolt from upper motor mount and replace with the included M12 Bolt (#2). Slip the bracket (#1) between the motor mount and intake boots and onto the M12 Bolt. Use the OEM nut to re-tighten the entire assembly. Finally, mount the horn to the bracket, the nut can be tightened from the other side of the motorcycle using a long extension.

