




Scan the QR code to watch the video



**AX1610**  
Honda CRF300L  
Linkage guard

2 NE01-01-008 - Tbhc 6x25mm  
2 NE01-03-001 - M6 Washers

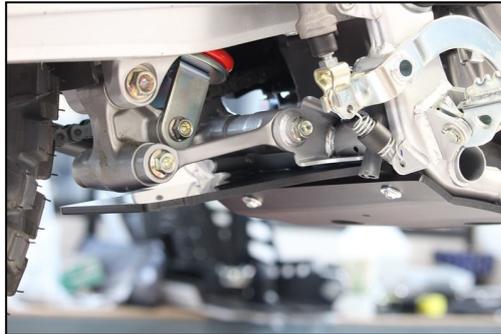

If you already have our skid plate, remove the 8mm spacers and add the linkage guard inside of the plate using the same alloy spacers and bolts.  
If you don't have our skid plate, fit directly the linkage guard in the frame with the supplied screws and washers




Scan the QR code to watch the video



**AX1610**  
Honda CRF300L  
Linkage guard

2 NE01-01-008 - Tbhc 6x25mm  
2 NE01-03-001 - M6 Washers

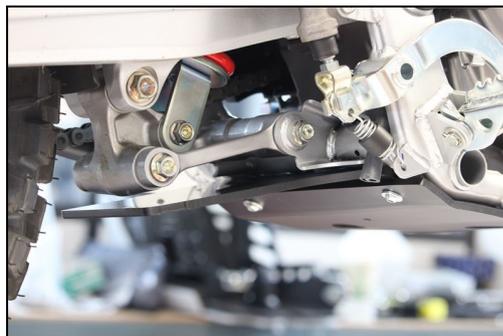

If you already have our skid plate, remove the 8mm spacers and add the linkage guard inside of the plate using the same alloy spacers and bolts.  
If you don't have our skid plate, fit directly the linkage guard in the frame with the supplied screws and washers