



- 1 NE10-01-005 - Threaded ring
- 1 NE10-01-006 - Alloy spacer
- 3 NE01-04-003 - Em6f
- 3 NE01-03-001 - M6 Washers
- 3 NE01-02-009 - Tfhc 6x55mm



AX1612

Chain guide

KTM-Sherco-HVA-GasGas



www.axp-racing.com

TUTORIAL VIDEO :

Scan with your iPhone Camera OR

Use «QR Code Reader» app' for Android's




Remove the OEM chain guide
Enlever le guide chaîne d'origine



Place the alloy smooth spacer as indicated on the pictures
Placer l'entretoise lisse comme indiqué sur les photos



Place the threaded ring as indicated on the pictures
Placer la bague taraudée comme indiqué sur les photos

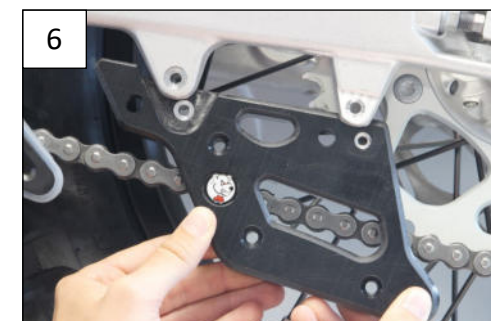

Use OEM screws
Utiliser les vis d'origine



Place the second bloc, clip it and tight with the Tfhc 6x55mm screws, M6 Washers and em6f



Placer le second bloc, clipser et serrer le tout avec les tfhc 6x55 + Rondelles M6 et les Em6f