

Part Numbers: HD-23CVO-DT(E), HD-23CVO-DT-T(E),
HD-23CVO-DT-FI, HD-23CVO-WB(E),
HD-23CVO-WG-B(E) & HD-23CVO-GL(E)



Description: Dual Tour, Tall Dual Tour, Wall, Widowmaker Saddles and Gunfighter & Lady


Fitment: 2023 Harley-Davidson Road Glide & Street Glide

Revision: 4

Tools Required	Parts List
	ELECTRIC OPTION: 1 #HD-23-CVO WIRING HARNESS

1. Begin by removing your stock seat. Refer to your owners manual if necessary.
2. If you are installing a NON-heated seat, skip to step 5.
3. Installing the pigtail is simple. Just plug the provided pigtail into the Molex connector (*Figure 1*), then plug the other end of the pigtail (*Figure 2*) into the Corbin saddle.
4. Your heated seat is ready for a test drive. The heater is controlled by the switch along the side of the saddle. Temperature will be controlled by an internal thermostat. The rider area is operated by the single switch. Heat will only operate when motorcycle ignition is ON and takes a couple minutes to warm up.
5. Install the dual tour saddle on your motorcycle like stock using the tongue in the front and the tab in the back (*Figure 3*). Slip the nose tab of the seat into the front slot. Be sure the saddle slides all the way forward on your bike, then lower the rear of the saddle and secure with the stock rear screw.

NOTE: New saddles are sometimes a little sticky to install because of the rubber bumpers on the bottom that have not broken in yet. You may need to apply a little pressure to get it to slide forward properly or you can use a little lubricant like WD40 or similar product.

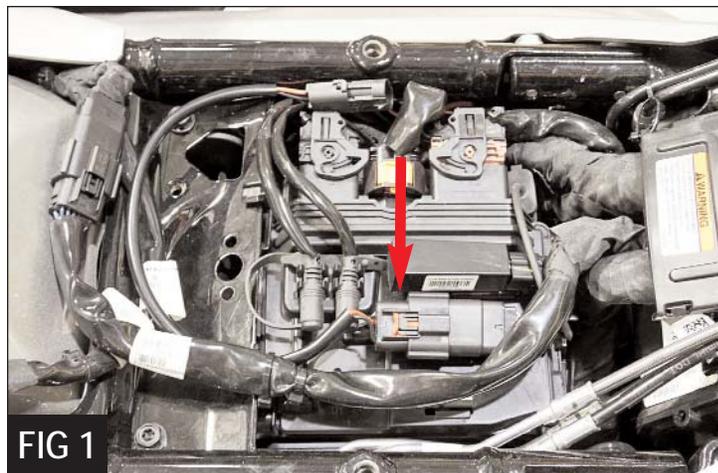

Questions? Give us a holler...
800-223-4332
tech@corbin.com