

**Part Number:** HD-VRSCF-9



**Description:** Front Saddle

**Fitment:** 20010-2011 Harley-Davidson VRSCF V-Rod Muscle

**Revision:** 1

Tools Required	Parts List
10mm Socket wrench 10mm Open wrench 1/2" or 7/16" Socket wrench 7/32" Allen Key	1 #A01120 Front seat latch plate 2 SP01080 Chrome flat washer 1 m6 Nylock nut

**NOTE:** We recommend the use of Loctite® or other threadlock compound when assembling parts on your motorcycle.

1. Remove your stock seat. See owner's manual if necessary.

2. Remove the bolt that holds the fender to the chassis, using a 7/32" Allen wrench. (Figure 1)



FIG 1

3. Remove the latch pin, using a 1/2" or 7/16" socket wrench (Figure 2).



FIG 2

4. Install the Corbin latch plate by first putting on the supplied flat washer where the latch pin was (Figure 3), then place the bracket on top and secure with the stock bolt on the fender (Figure 4). Do not tighten yet.



FIG 3


5. Place the supplied flat washer and nylock nut on the stud (Figure 5).

6. Pull the bracket towards you and tighten the nylock nut with a 10mm socket wrench (Figure 6).

7. Go back and tighten the stock bolt on the fender.

8. Slide front seat in place where you removed the stock seat and secure with the stock plastic clip (Figure 7).

9. Attach the cable on the saddle to the frame, securing with the stock bolt, using a T-20 torx wrench (*Figure 8*).

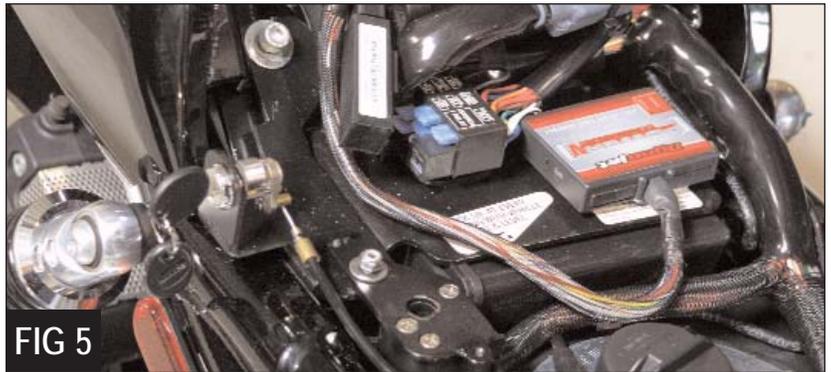

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com