

**Part Number:** HD-XLN-22-S & HD-XLN-22-H

**Description:** Classic Solo, Hollywood Solo Saddles & Pillions

**Fitment:** 2022 Harley Davidson Nightster

**Revision:** 2



Tools Required	Parts List
3/32 Allen Wrench 5/32 Allen Wrench	<b>FRONT SEAT</b> 1 #A01327 10 1/4" Long Cable Stop 1 #SP00201 8/32" Button Head Allen Bolt <b>REAR SEAT</b> 2 #SP01080 6mm Flat Washers 2 #SP00997 1/4" x 20 x 3/4" Allen Bolts 2 #SP01084 1/4 x 20 HD Fender Nut Insert



1. Start by removing the stock seat. Refer to owner's manual if necessary.

2. Install the Corbin saddle onto the stock location and secure with the stock bolts (Figure 1).



**NOTE:** Snug the bolts in place, close the saddle to get it properly aligned. Once aligned, then go back and tighten the bolts.

3. Loop the cable stop under the frame (Figure 2), then secure the other end to the saddle, using the supplied 8/32" button head Allen bolt, using a 3/32 Allen wrench (Figure 3).

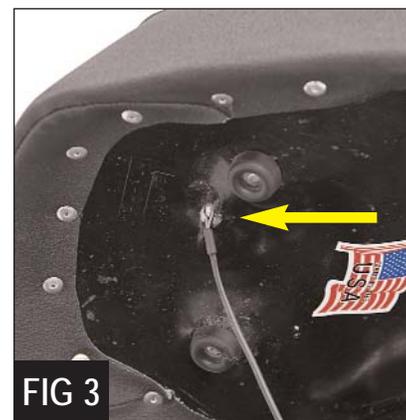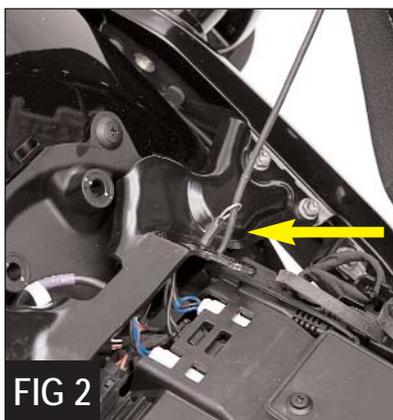

4. To install your pillion seat, simply insert the supplied fender nuts under the fender and secure with the supplied Allen bolts and flat washers, using a 5/32 Allen wrench (Figure 4).

**NOTE:** If the fender hole is hard to access, try threading a wire through the fender, hook the wire onto the fender nut and pull it up through the hole in the fender and secure with the "C" clip.



Enjoy!

Questions? Give us a holler...  
**800-223-4332**  
tech@corbin.com

# HD-XLN-22-

H  
CH  
S  
CS

## PUT ON seat

A00497  
QTY (1) Corbin bag hing  
black finish



P11352  
QTY (1) hinge mounting bracket  
aluminum finish



SP01606  
QTY (1) 1/4 x 20 latch pin  
stainless



SP00272  
QTY (1) flat washer  
zinc finish



SP00139  
QTY (4) 1/4 x 20 x 1/2 btn head allen  
zinc finish



SP00267  
QTY (4) 1/4 star washer  
zinc finish



SP00285  
QTY (1) 1/4 lock washer  
zinc finish



## SEND w/ front seat

A01327  
QTY (1) 10 1/2" long cable stop  
with shrink tube finish



SP00201  
QTY (1) 8-32 x 1/2 btn head allen  
zinc finish



## SEND w/ rear seat

SP00997  
QTY (2) 1/4 x 20 x 3/4 btn head allen  
zinc finish



SP01080  
QTY (2) 6mm washer  
zinc finish



SP01084  
QTY (2) 1/4 x 20 HD nut insert  
zinc finish

