

Part Number: HD-XLS-21-G & HD-XLS-21-GAM

Description: Gunfighter & Gambler Saddles

Fitment: 2021 Harley Davidson Sportster S

Revision: 1



Tools Required	Parts List
T-25 Torx Wrench 4mm Allen Wrench 3mm Allen Wrench	1 #A01321 Mounting Bracket 2 #SP02116 5m x 8m Allen Bolts 4 #SP00214 1/4" Flat Washers 4 #SP00997 1/4" x 20 x 3/4" Allen Bolts 2 #SP00102 3/16" Flat Washers 1 ABS Tray

1. Start by removing the stock seat by using the OEM key (*Figure 1*), then unsnap the cowling cap (*Figure 2*).



FIG 1

2. Remove four bolts on the side panels (two bolts per panel), using a T-25 torx wrench (*Figures 3 & 4*), then pop off side panels by gently pulling outward (*Figure 5*).



FIG 2

3. To install the Corbin bracket, place the bracket on the frame (*Figure 6*) and secure from underneath the fender, using the supplied 1/4" x 20 x 3/4" Allen bolts and flat washers, using a 4mm Allen wrench.

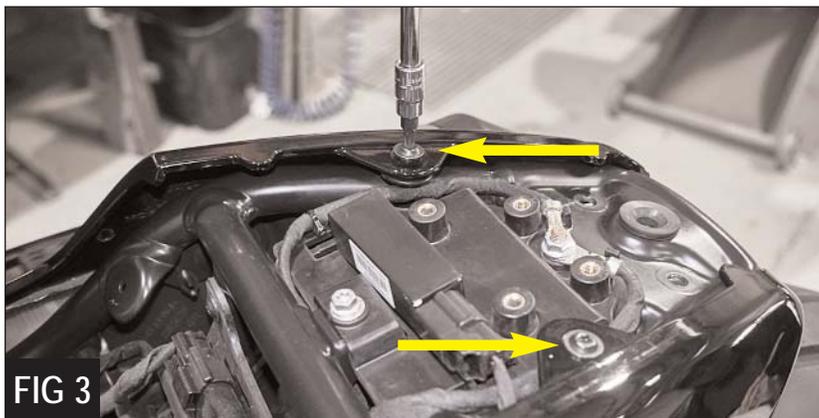


FIG 3

NOTE: If you have the Corbin undertail kit installed, use the 1" bolts and flat washers that came with your undertail kit.

4. Secure the Corbin seat onto the bracket, using the supplied 1/4" x 20 x 3/4" Allen bolts and flat washers, using a 4mm Allen wrench (*Figure 7*).



FIG 4

NOTE: It would be helpful to have a second pair of hands to hold onto the seat while installing it onto the bracket.

5. Next, put the Corbin tray in place and secure with the supplied 5mm Allen bolts and flat washers, using a 3mm Allen wrench (*Figure 8*).

6. Lower seat and push down until you hear it click.

Enjoy!



FIG 5

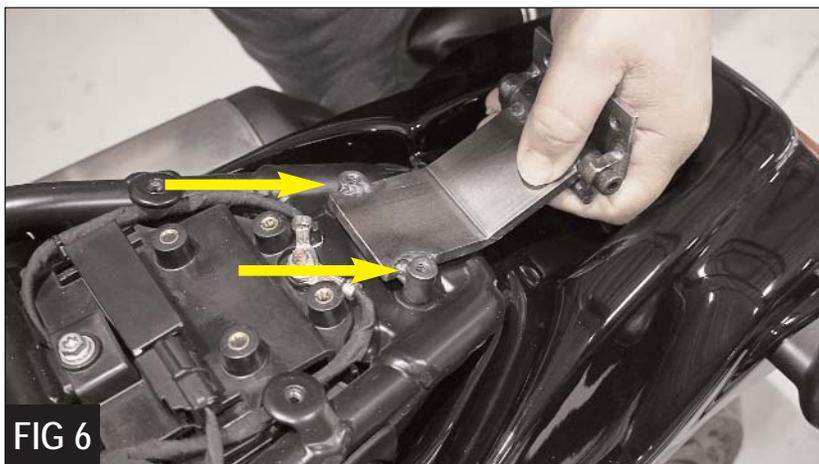


FIG 6



FIG 7



FIG 8

Questions? Give us a holler...
800-223-4332
tech@corbin.com