



**EVOTECH**®  
P E R F O R M A N C E

**Kawasaki Z650  
Crash Protection**


**Installation Instructions**






**Product No: PRN013644**


**Kit Contents**

- A** 1 x Long Spacer L/H Side
- B** 1 x Short Spacer R/H Side
- C** 2 x M10 x 190 Caphead
- D** 2 x Bobbin Head
- E** 2 x M10 Washer
- F** 2 x Polyurathane Washer

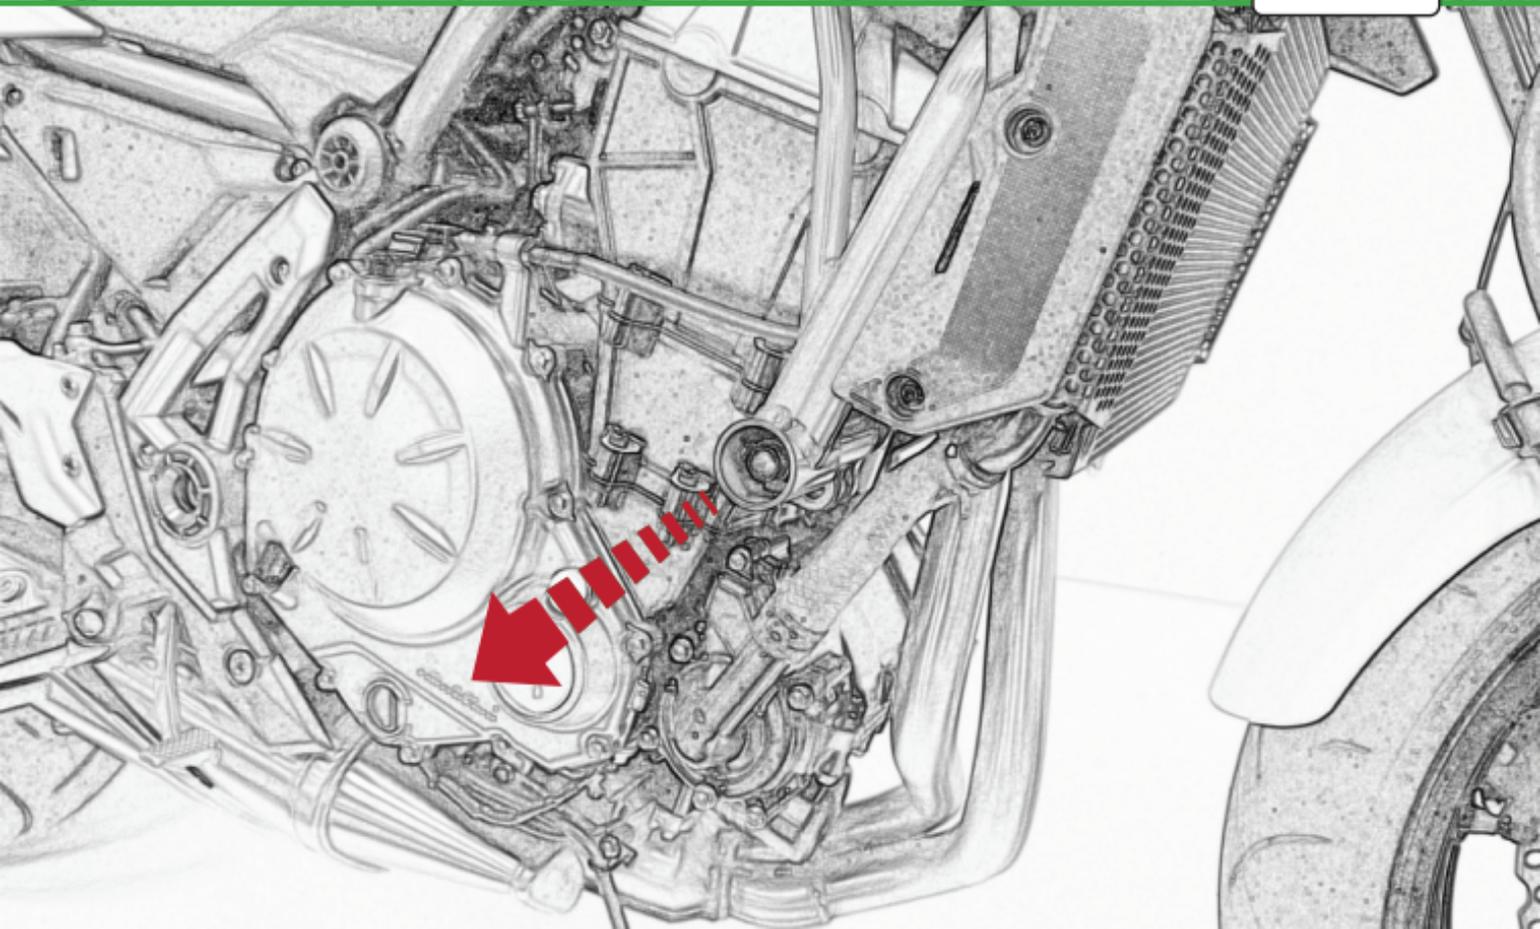


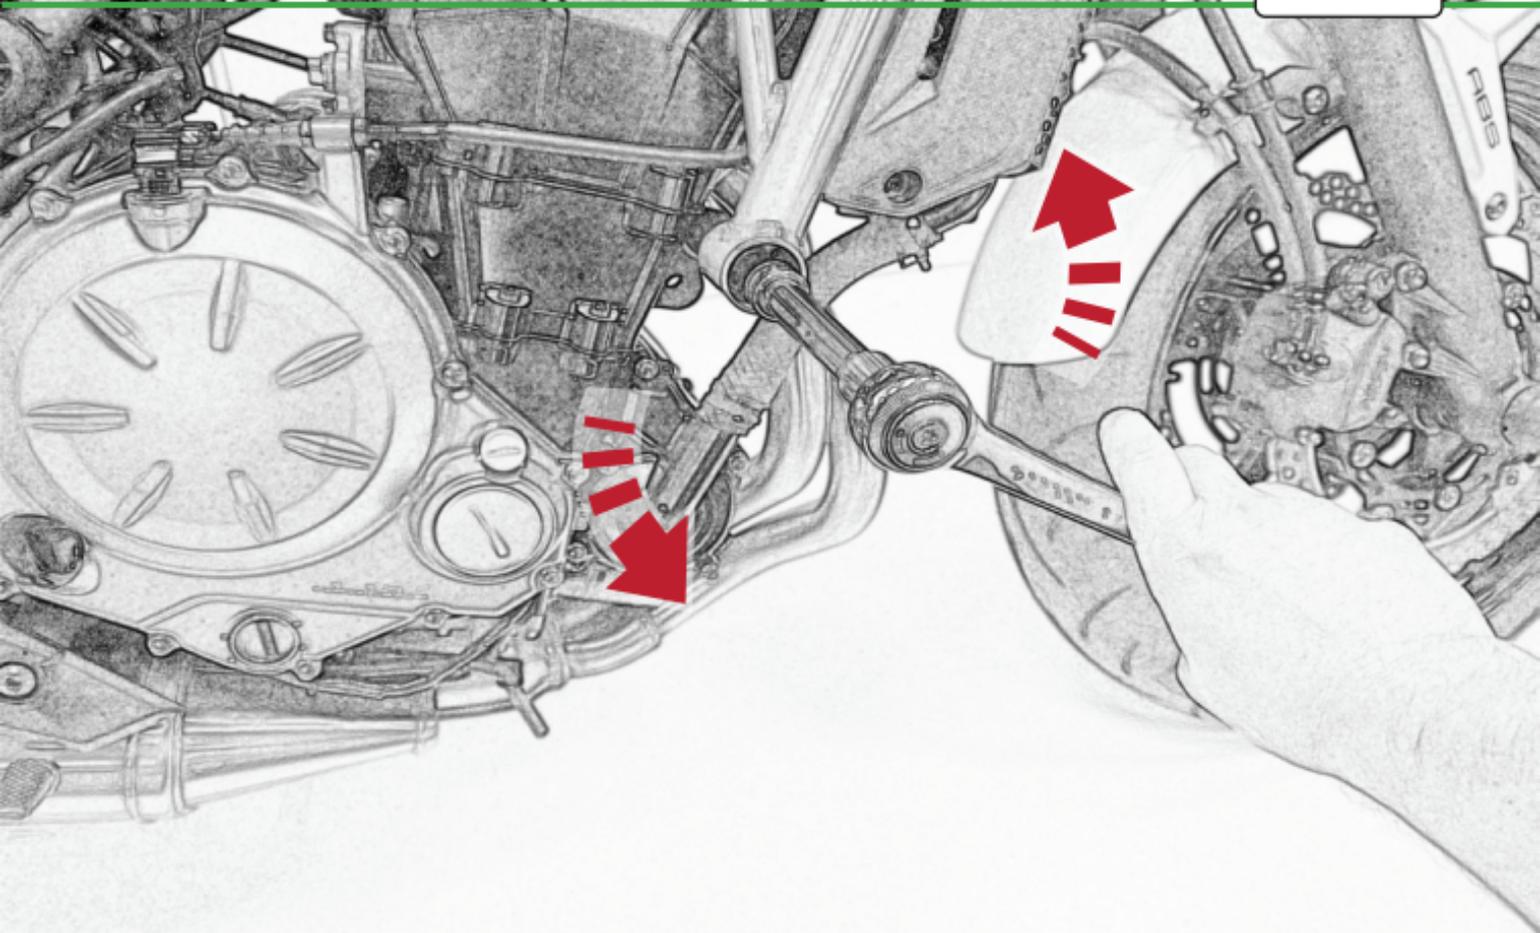

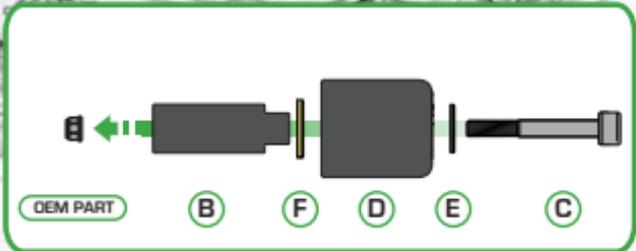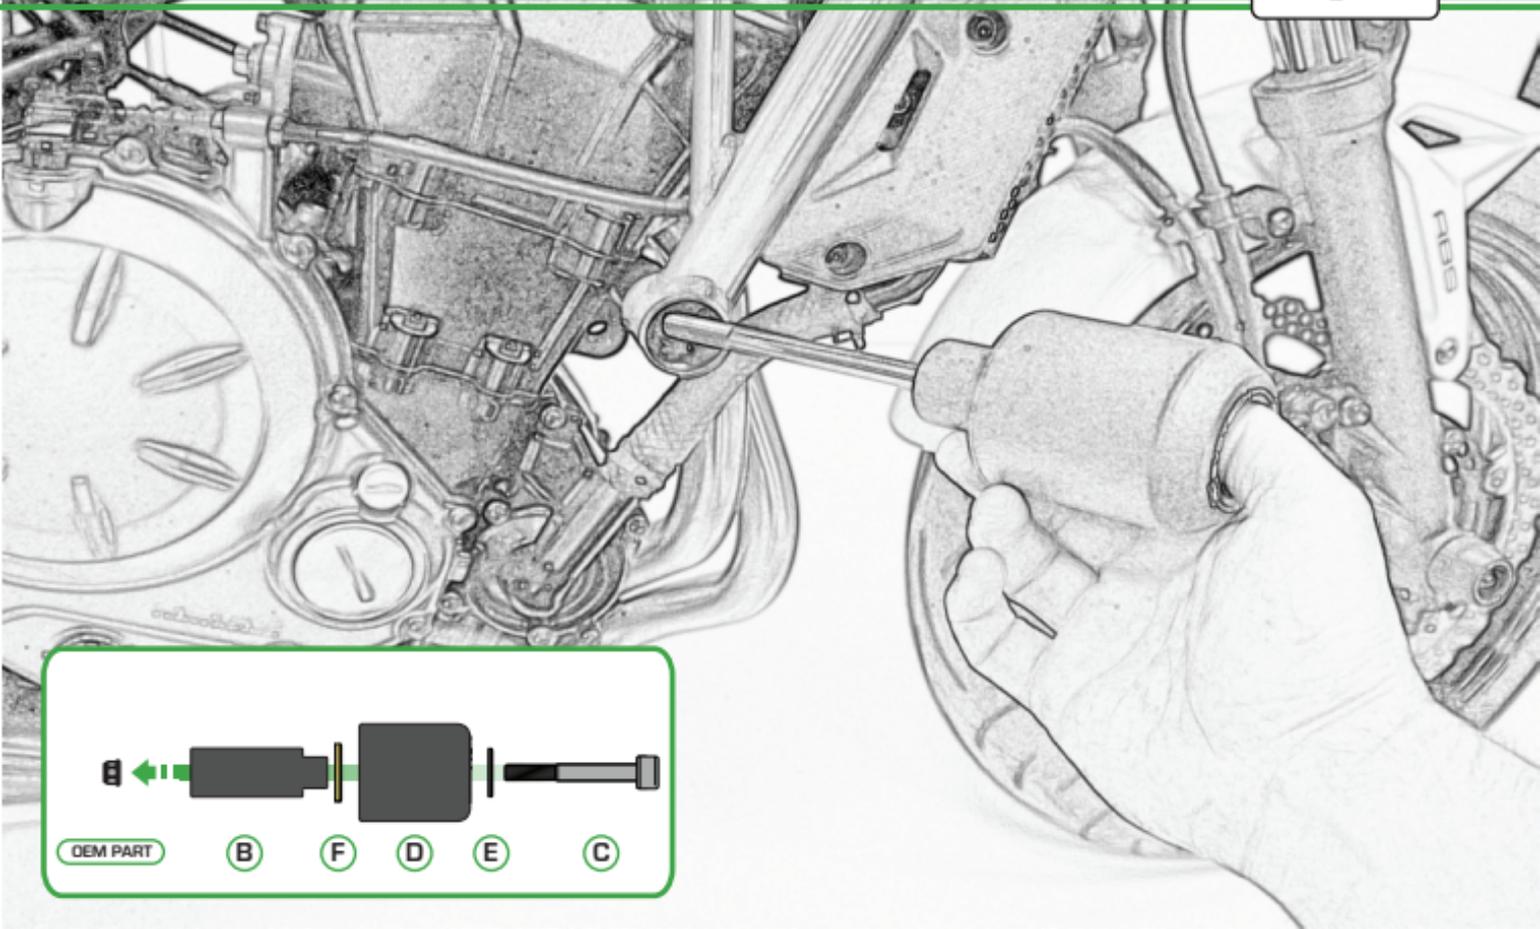


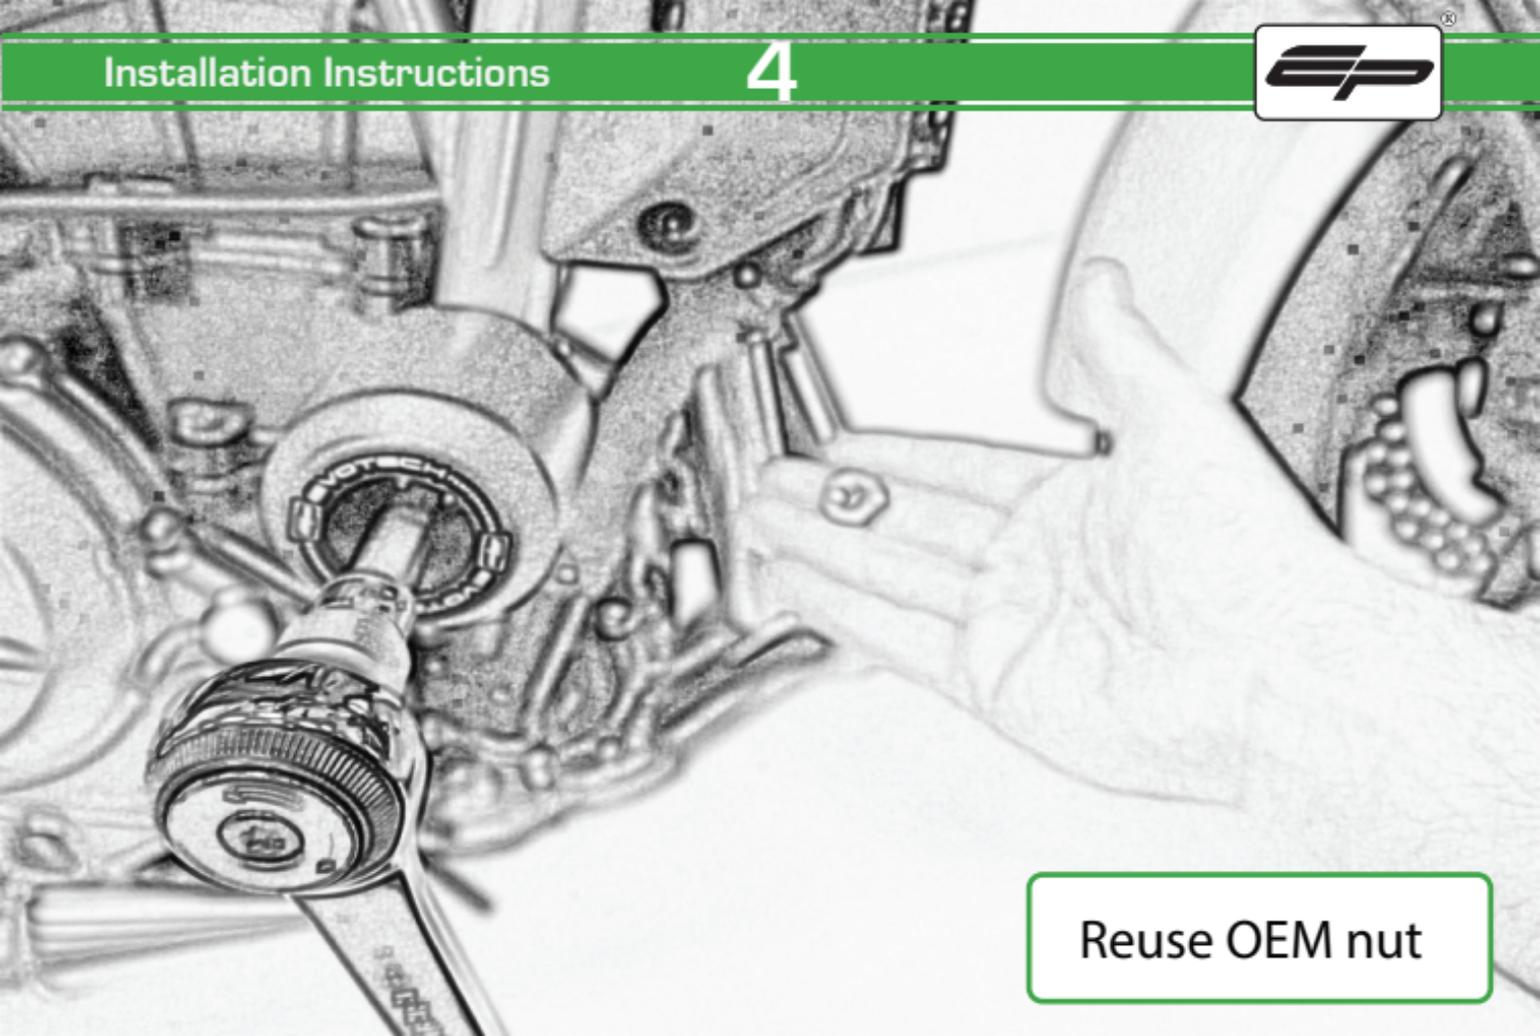


Reuse OEM nut

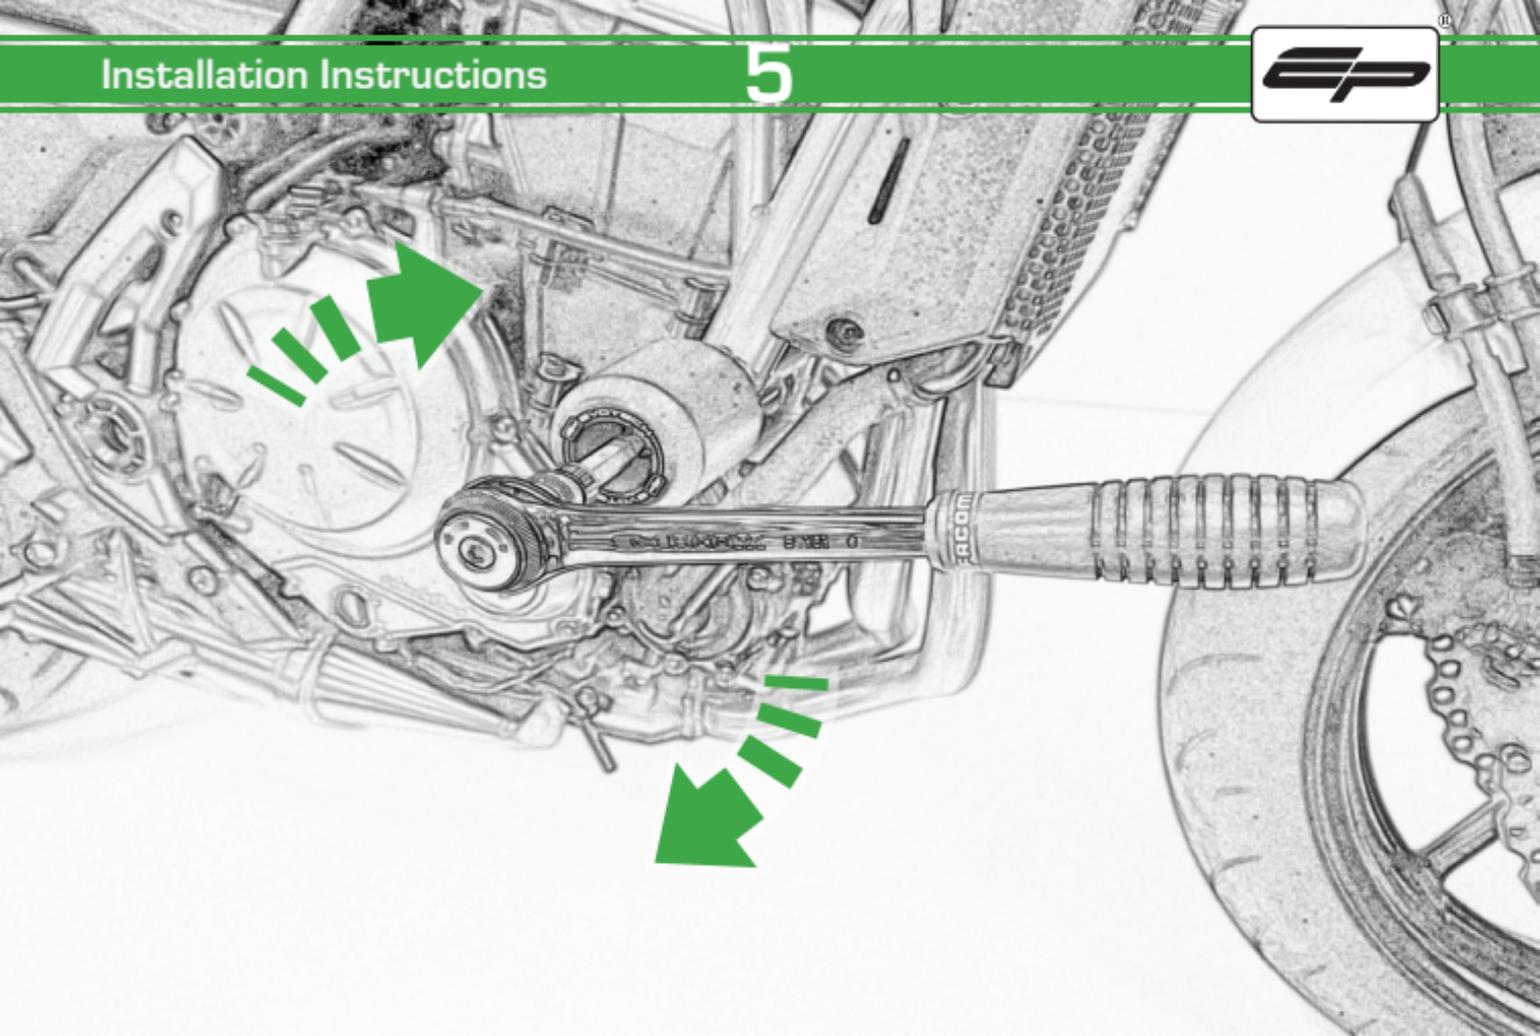



Repeat stages  
1 - 5 for the left  
hand side

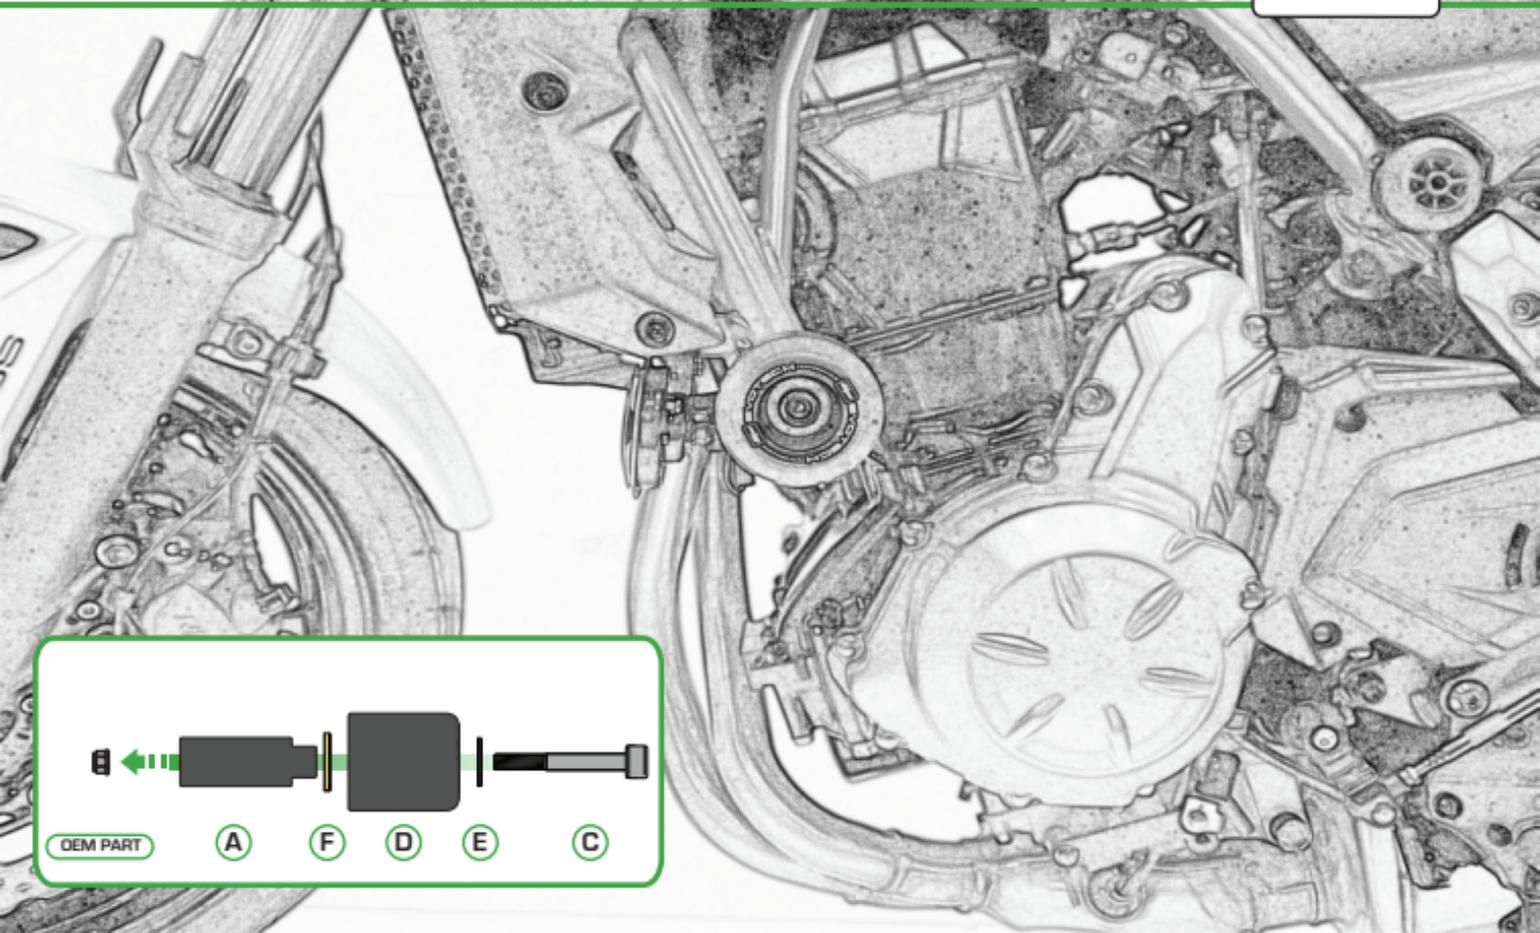

OEM PART

A

F

D

E

C



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced