

Husqvarna Vitpilen/Svartpilen Tail Tidy

Installation Instructions

Installation Instructions




Kit Contents PRN014052


- A 1 x Reflector Kit
- B 1 x Rubber Cap
- © 1 x Grommet

 D 1 x Chain Adjuster Block
- © 2 x Indicator Stem
- © 2 x Indicator Nut
- © 2 x M5 x 10 Caphead Bolts
- (H) 2 x M5 x 12 Caphead Bolts
- ① 2 x M5 x 10 C/sink Screws
- ① 2 x 4mm Dowel Pins
- © 4 x M8 x 20 Black Button Head Bolts (Vitpilen Only)
- (L) 4 x M8 x 30 Black Button Head Bolts (Svartpilen Only)



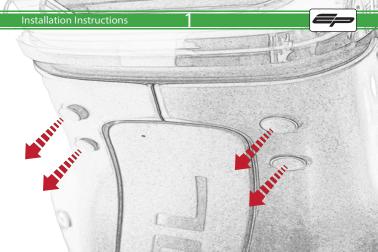




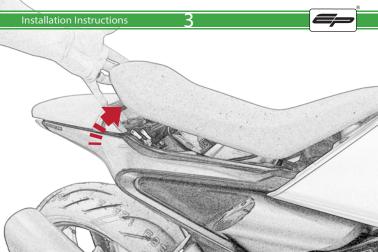











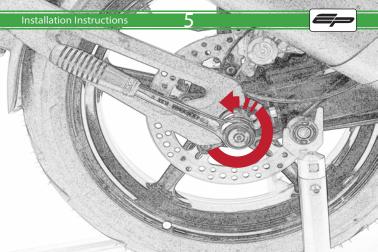


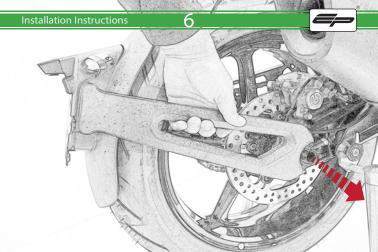


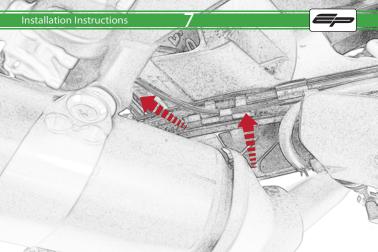


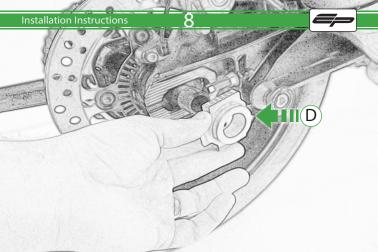


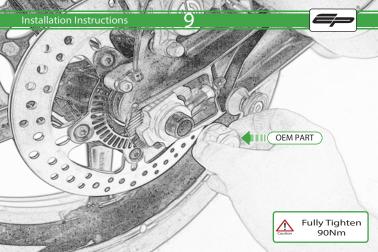


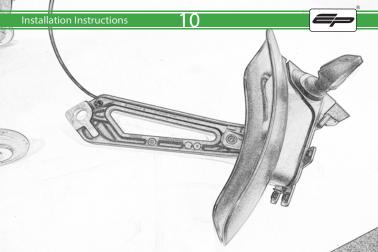


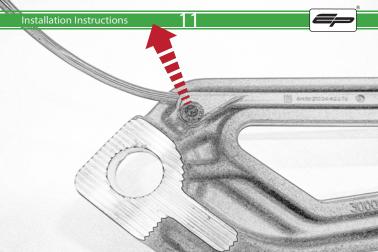


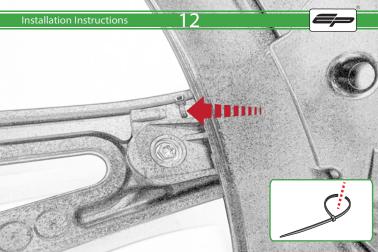


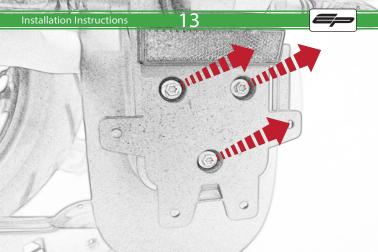


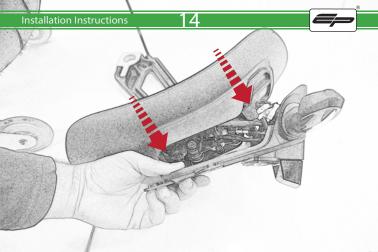

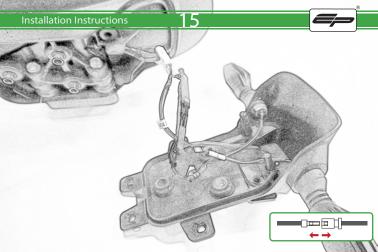

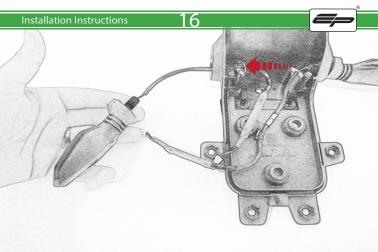

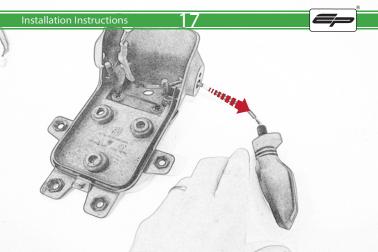


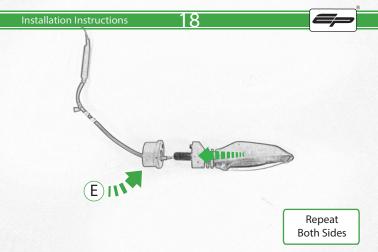

Installation Instructions

19



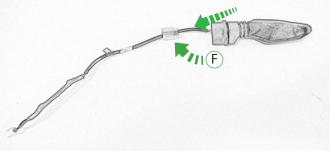


Repeat Both Sides










Repeat Both Sides

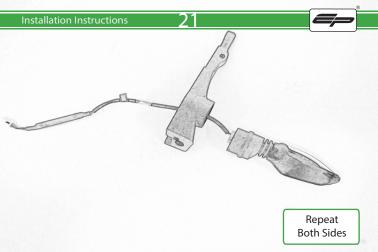


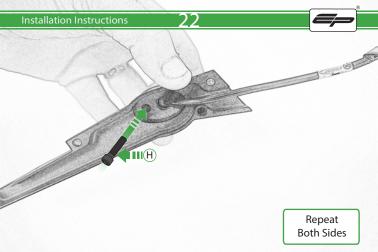

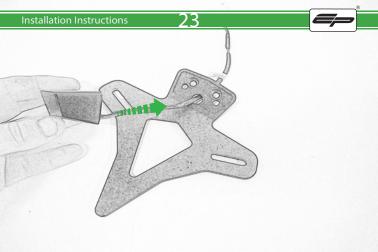

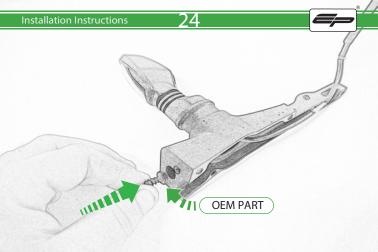





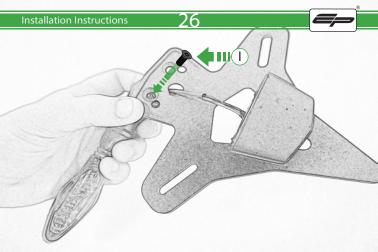








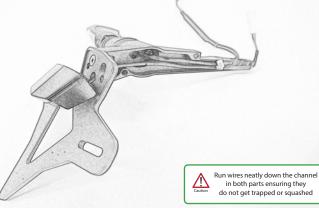


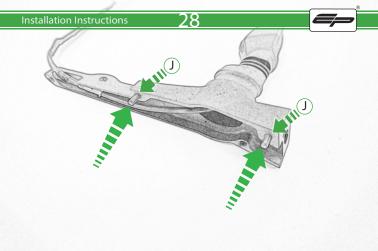


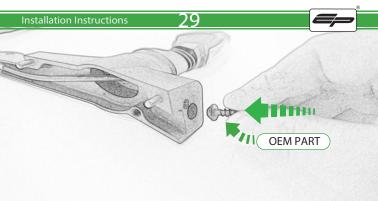


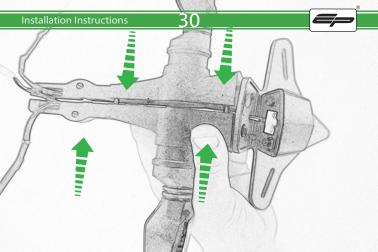


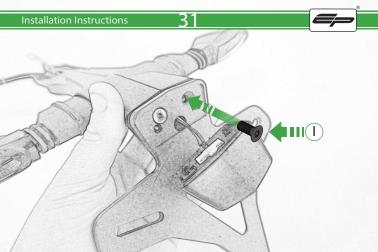


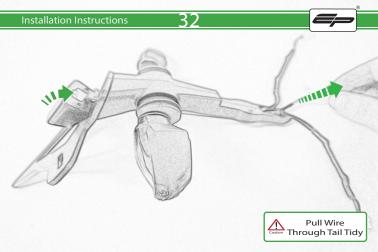


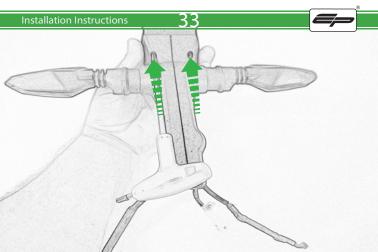


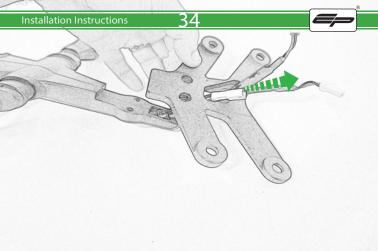


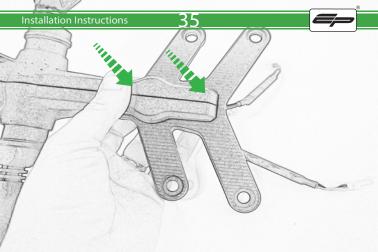


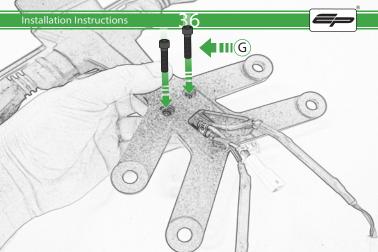


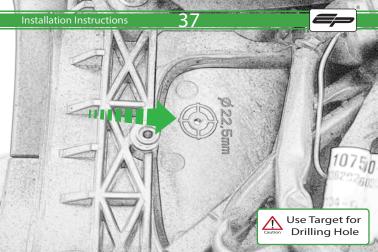


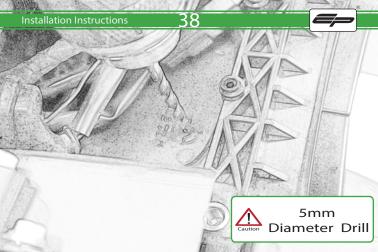


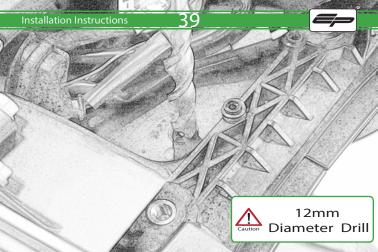


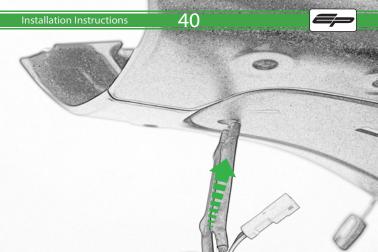


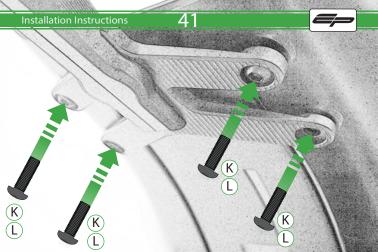

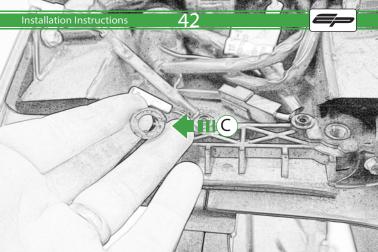

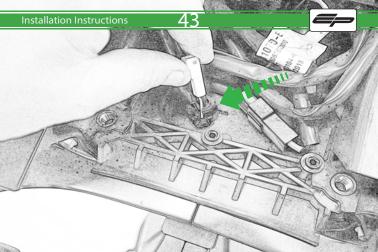

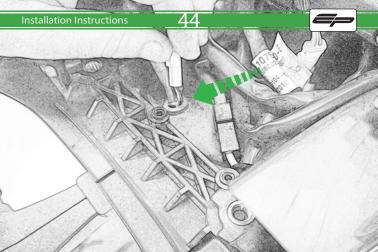

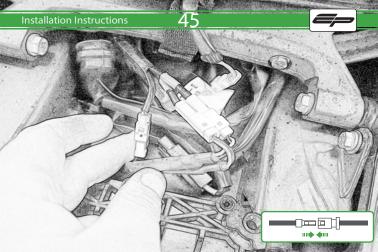




Reverse Stages






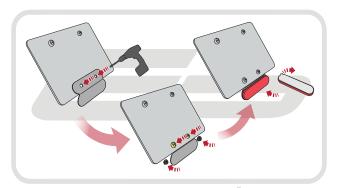



Installation Instructions



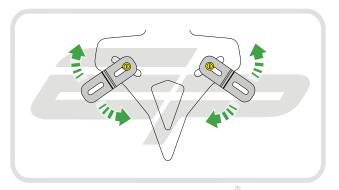







After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light

and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com