



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Generic Bar Clamp


Garmin Sat Nav Mount Instruction




Kit Contents

- Ⓐ 1 x Pivot Plate
- Ⓑ 1 x Left Hand Arm
- Ⓒ 1 x Right Hand Arm
- Ⓓ 1 x Garmin Plate
- Ⓔ 2 x Lobe Screw
- Ⓕ 2 x M5 x 8mm Black Button Head Bolt
- Ⓖ 2 x Spacer
- Ⓗ 2 x M5 x 12 Caphead Bolt
- Ⓘ 2 x M8 Caphead Bolt
- Ⓙ 4 x M4 x 10mm Black Button Head Bolts

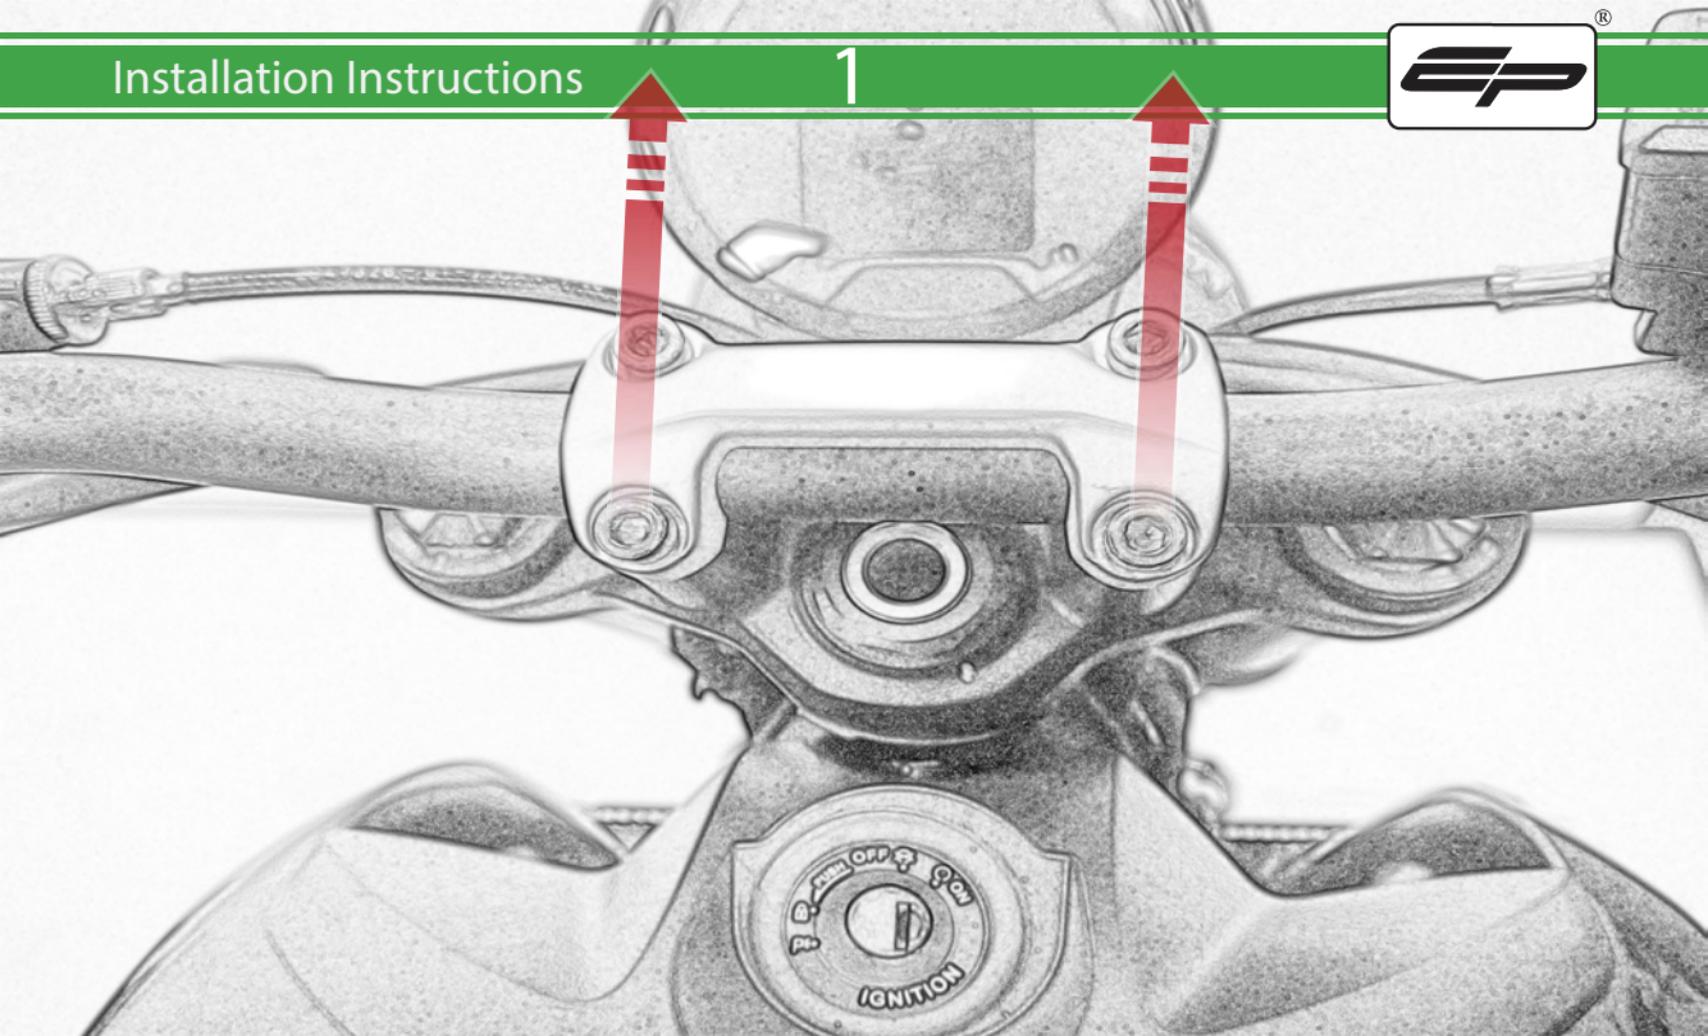


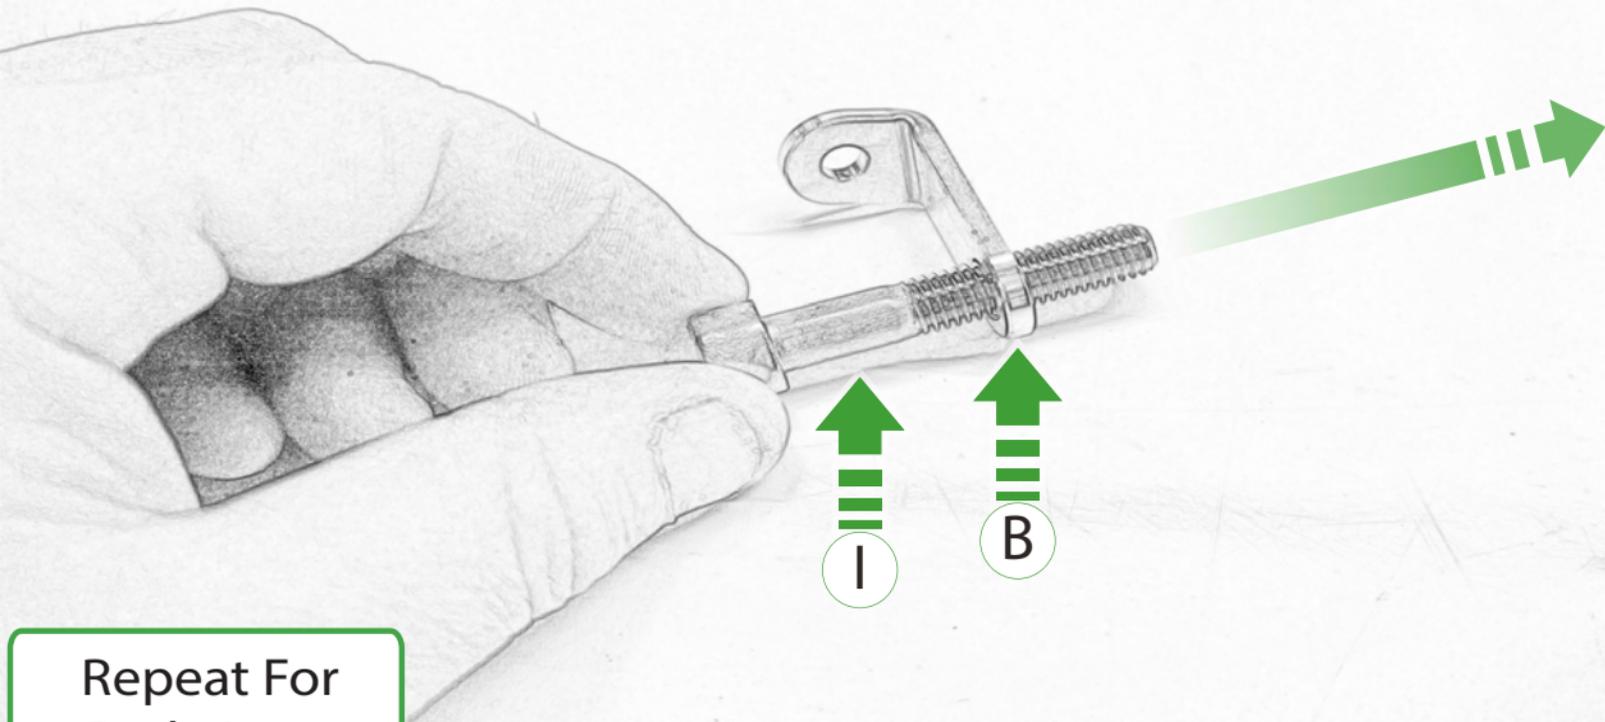


Repeat For
Both Arms

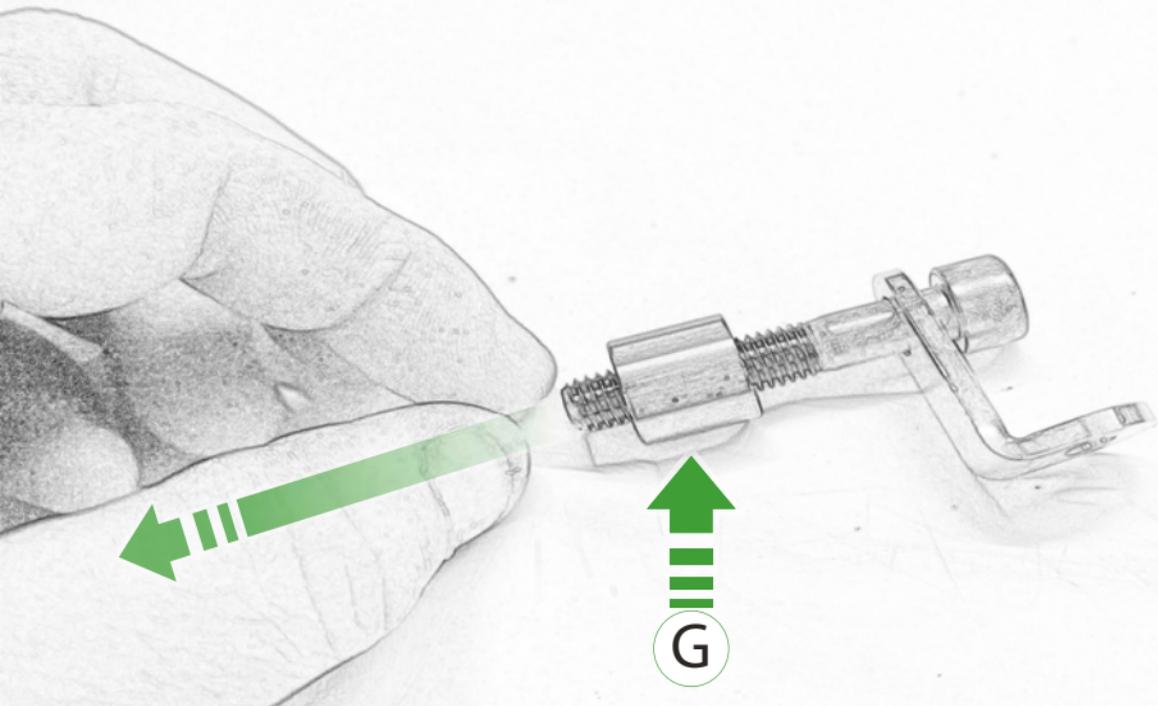

Repeat For
Both Arms

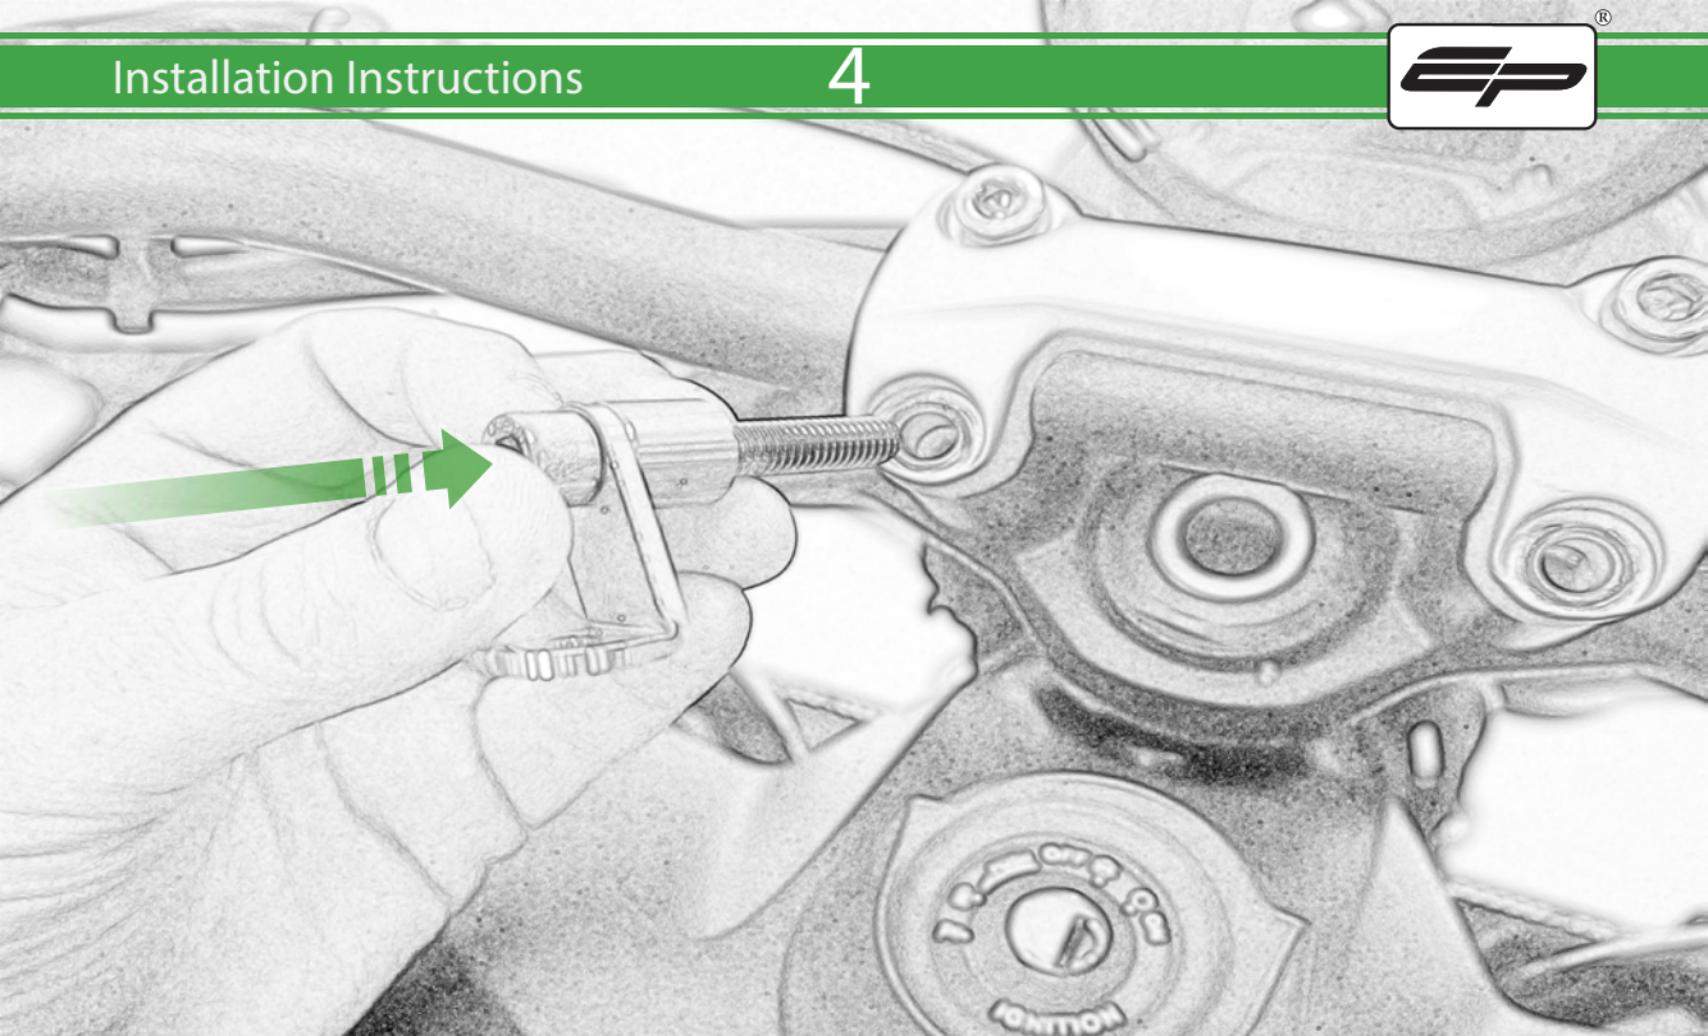





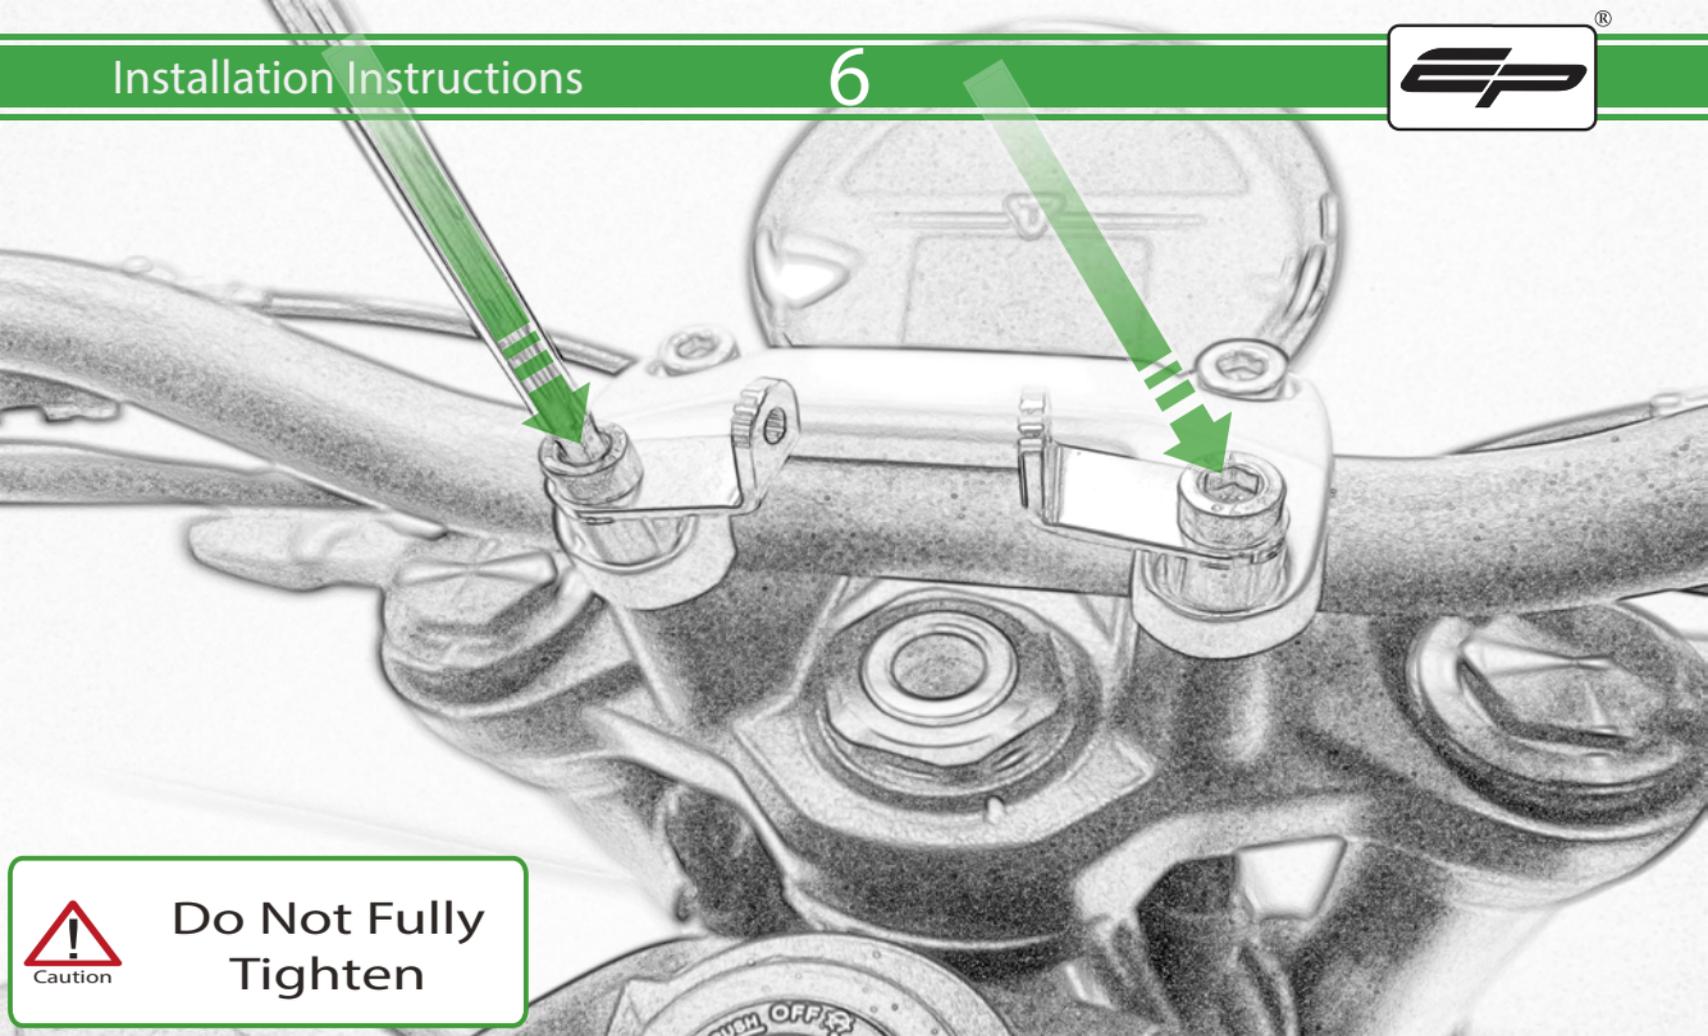


Caution


Do Not Fully Tighten

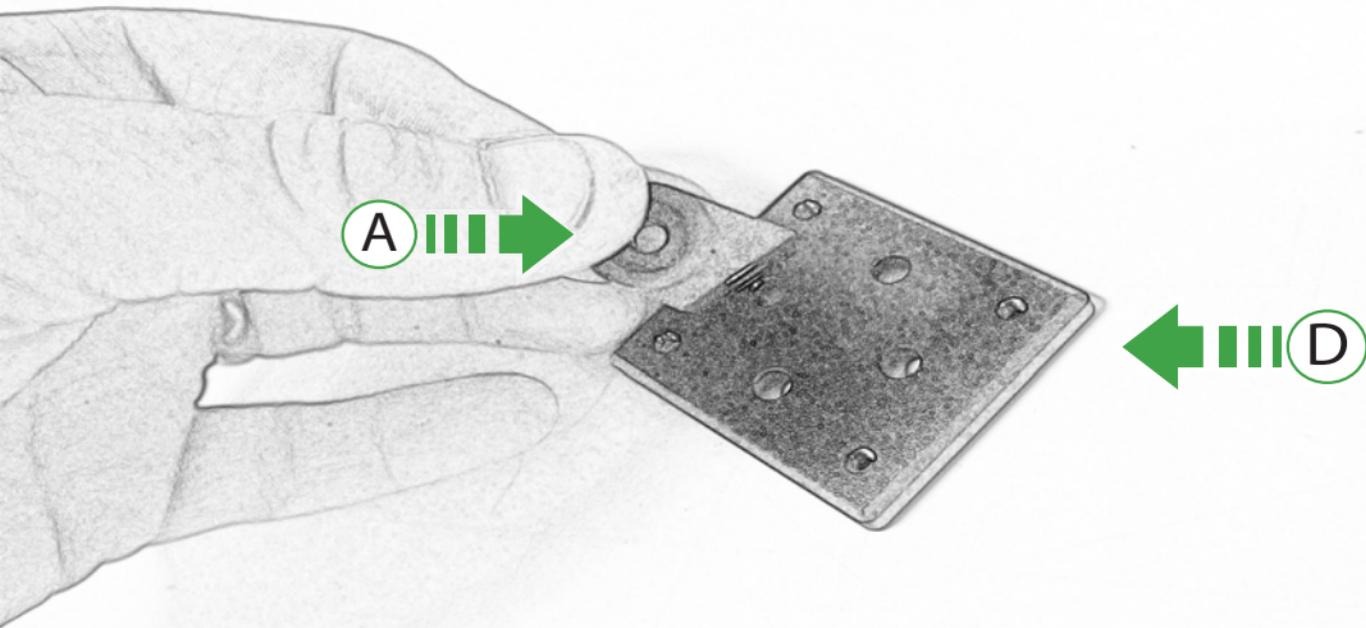


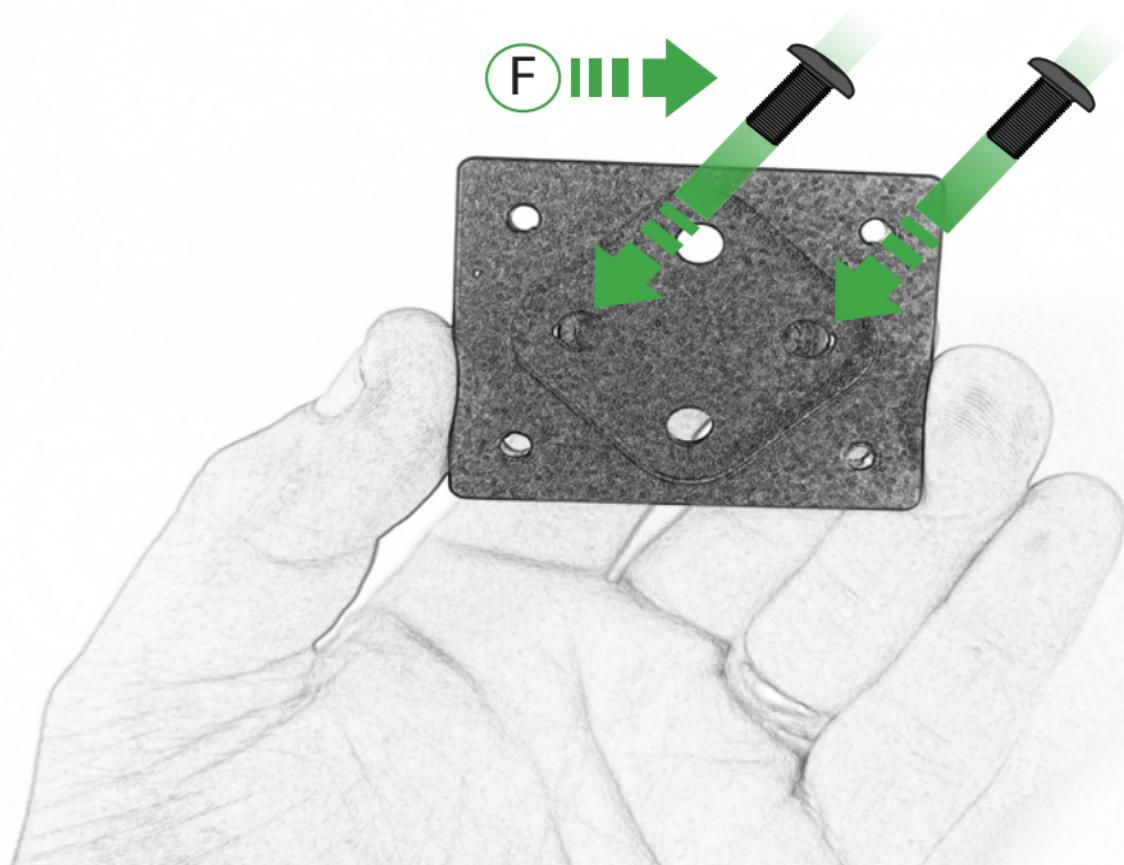




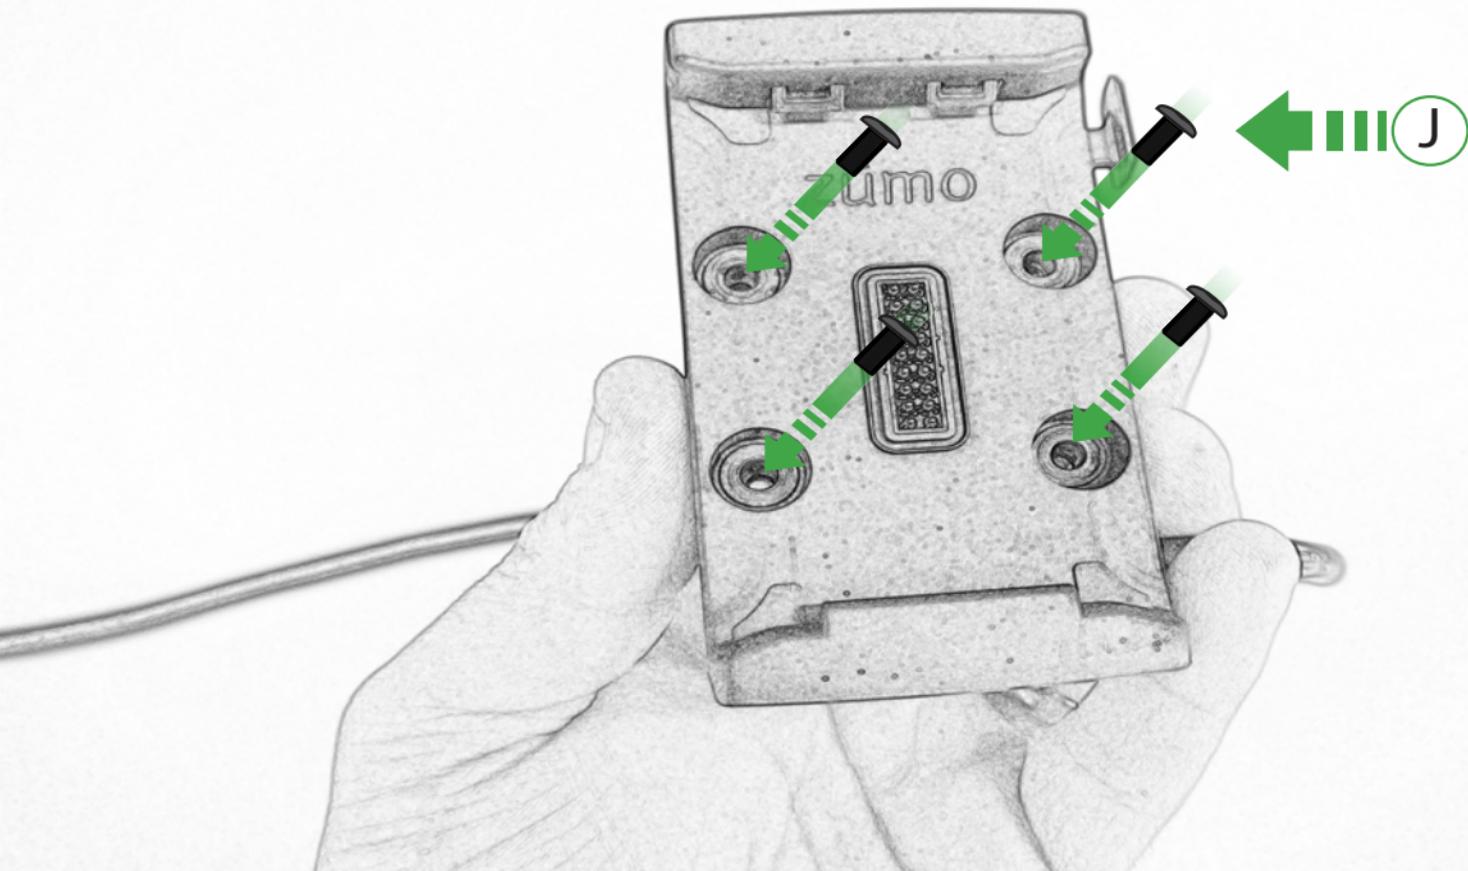


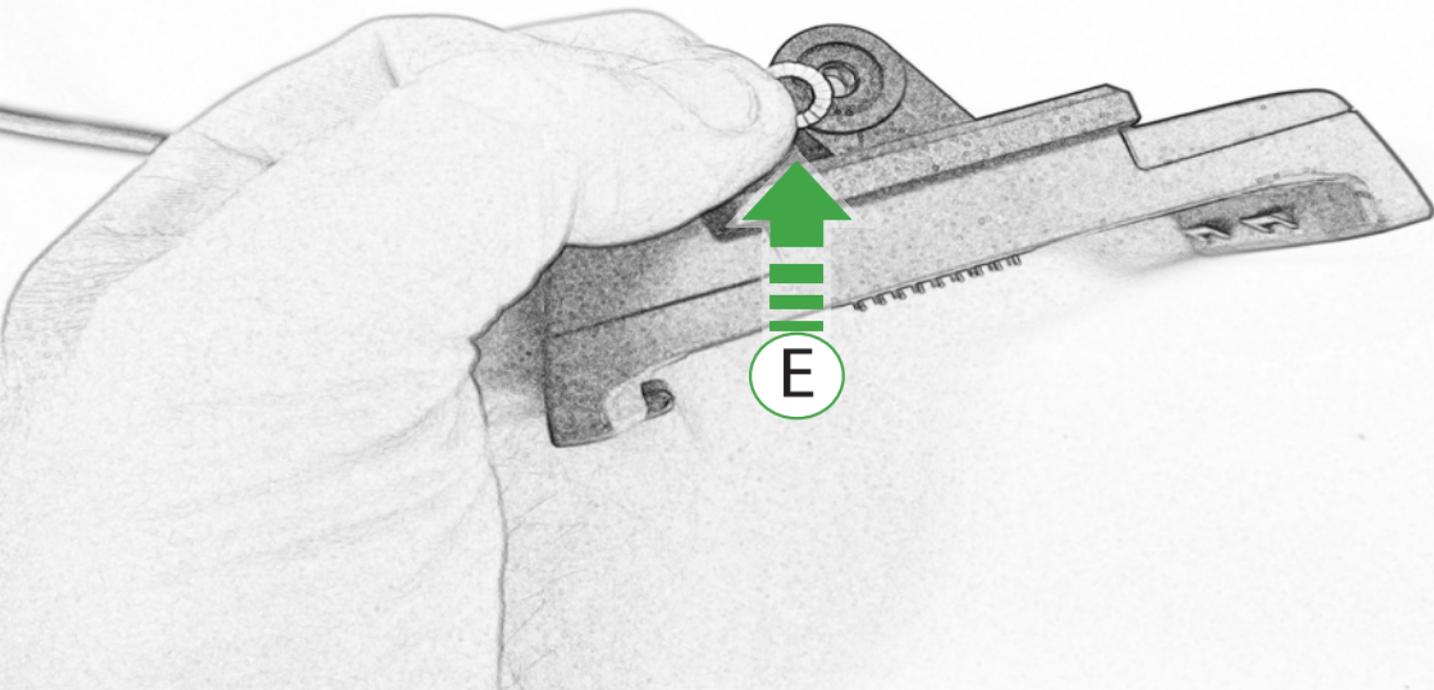


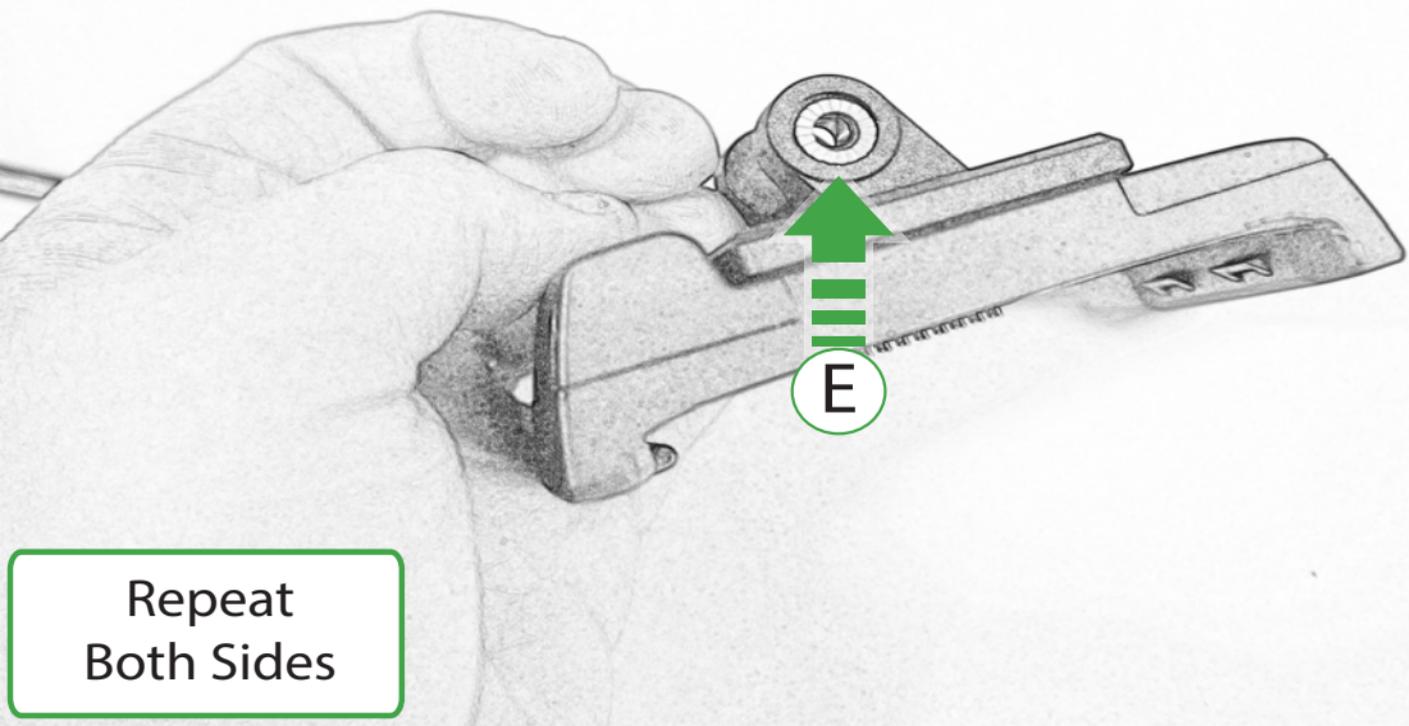

Repeat
Both Sides

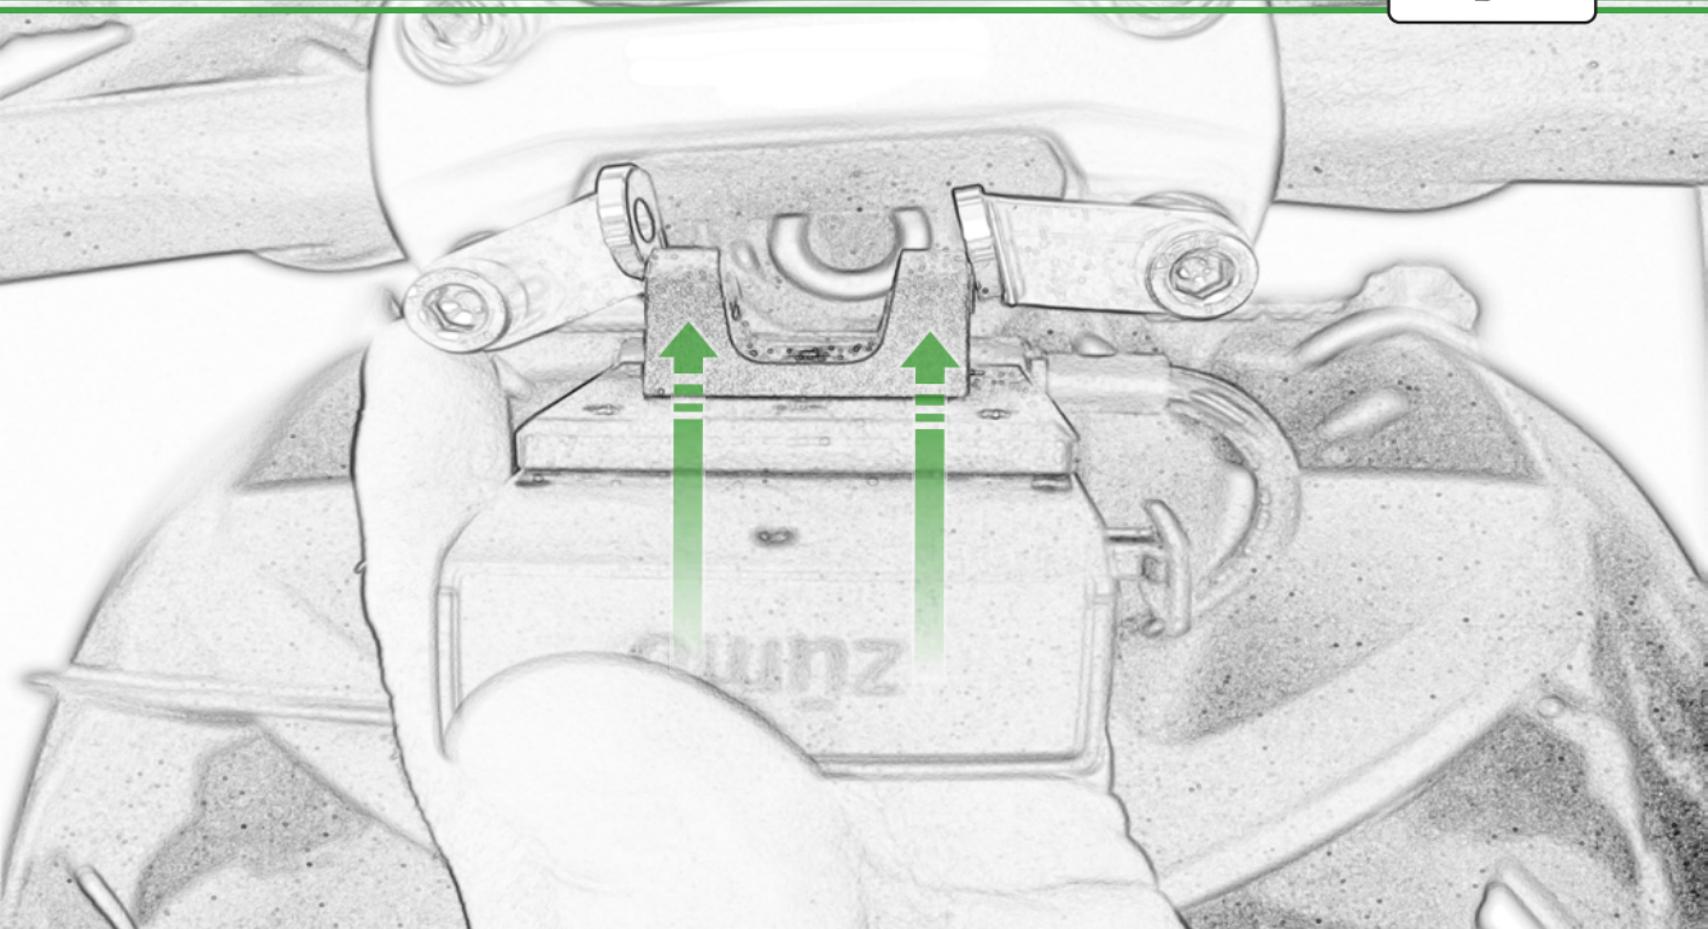

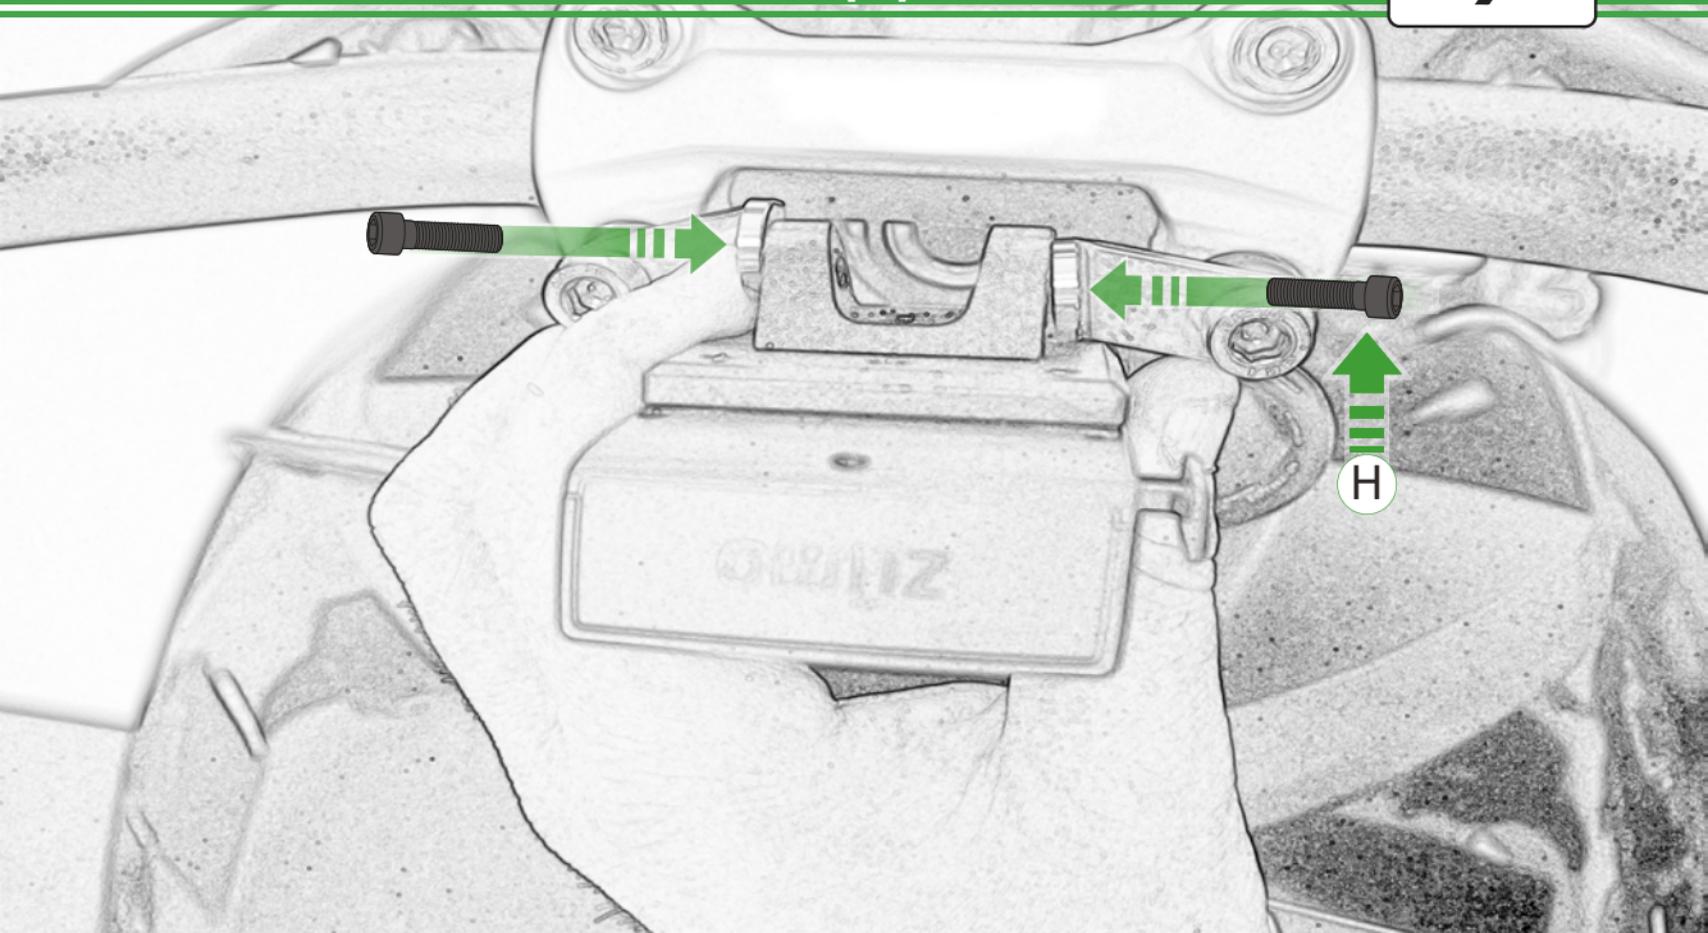

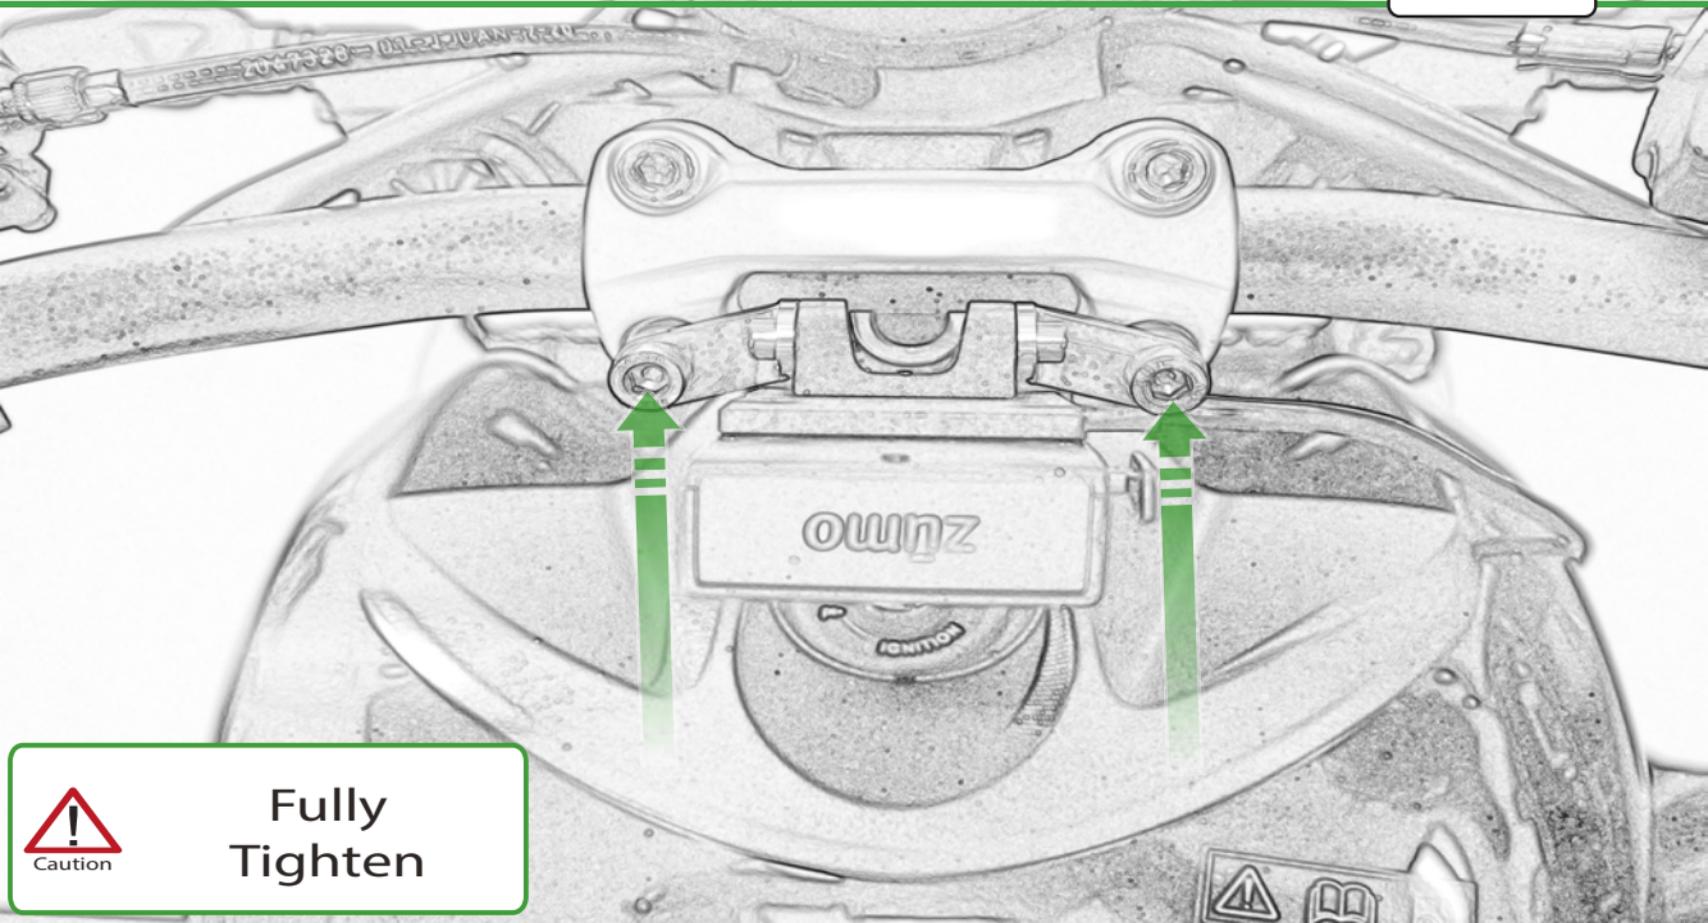

Caution

Fully
Tighten





ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com