

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Aprilia RS660 Crash Protection

Installation Instructions



Kit Contents PRN015288


- (A) 1 x Bobbin Bracket R/H
- (B) 1 x Bobbin Bracket L/H
- (C) 1 x Bracket Brace R/H
- (D) 1 x Bracket Brace L/H
- (E) 1 x Bobbin Shim
- (F) 1 x M10 x 30 Caphead
- (G) 1 x M10 x 50 Caphead
- (H) 1 x M10 x 65 Caphead
- (I) 1 x M10 x 80 Caphead
- (J) 2 x M12 x 100 x 1.25mm Caphead
- (K) 2 x M12 Washers
- (L) 2 x Bobbin Spacers
- (M) 2 x Poly Washers
- (N) 2 x Bobbin Heads
- (O) 4 x M5 x 15 Countersunk Screws

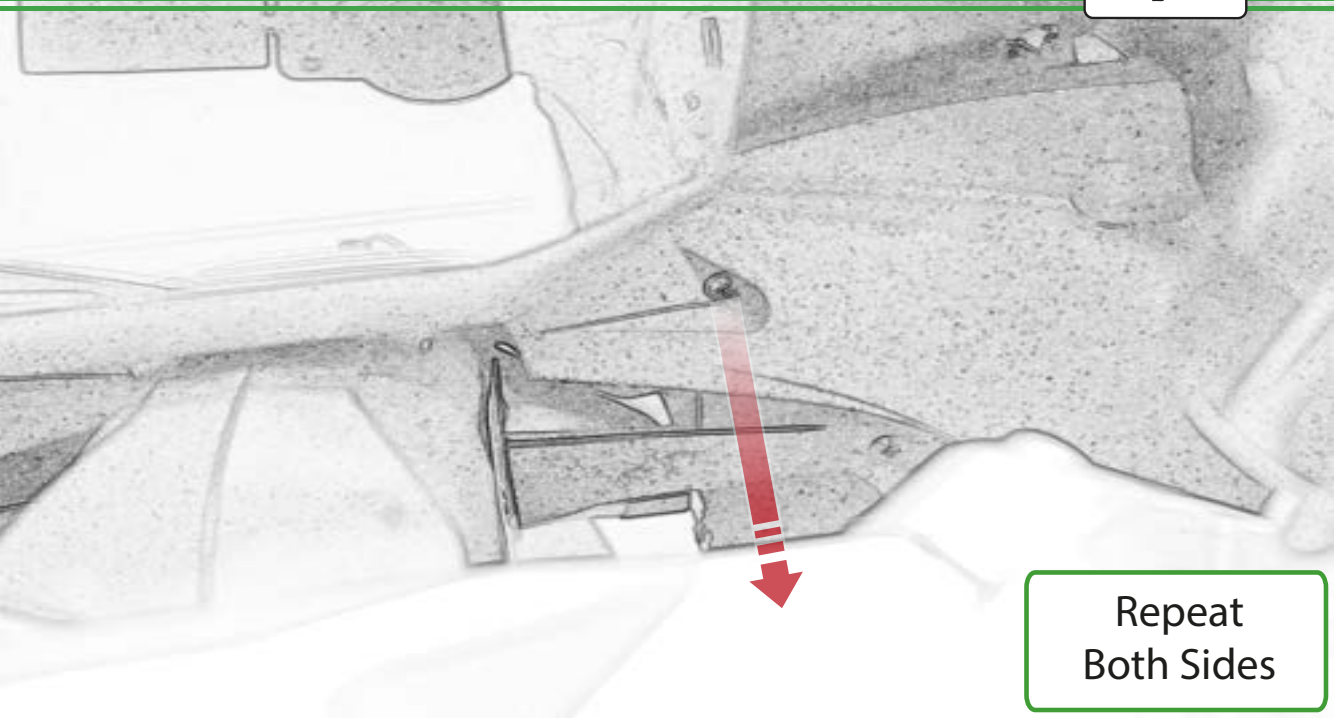


Repeat
Both Sides




Repeat
Both Sides

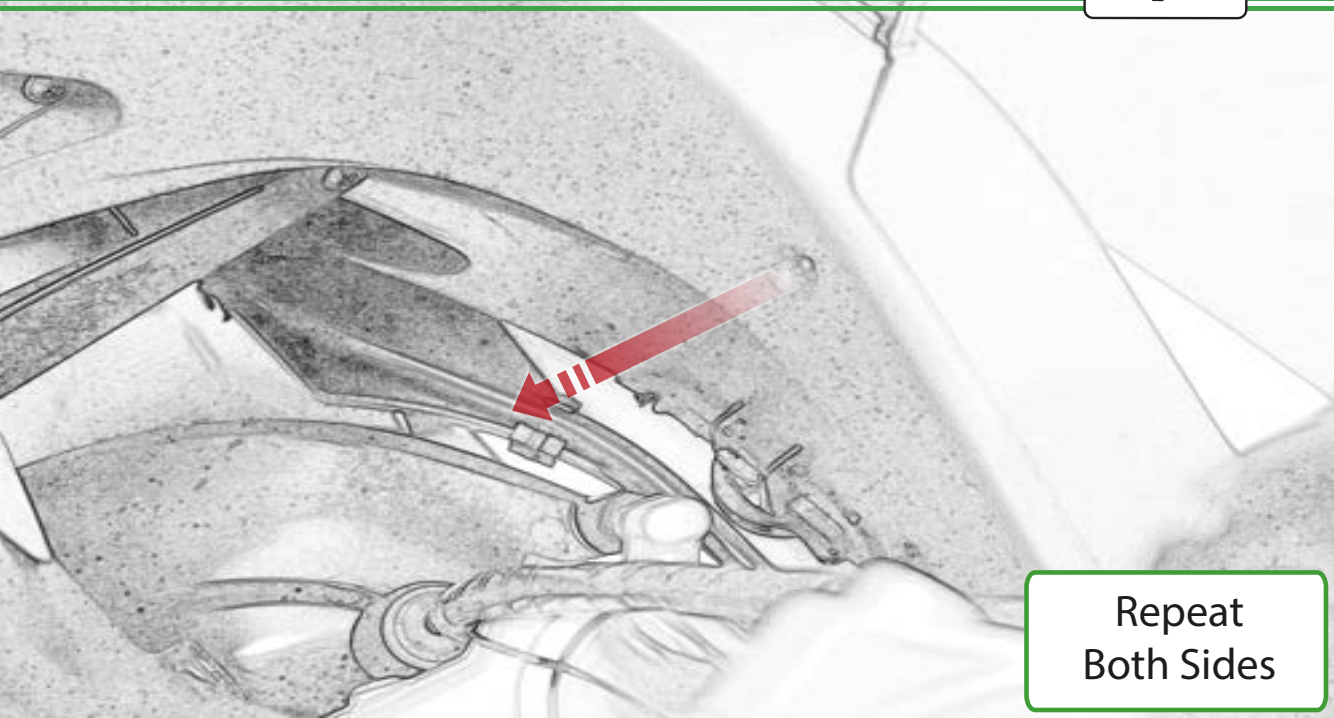


Repeat
Both Sides

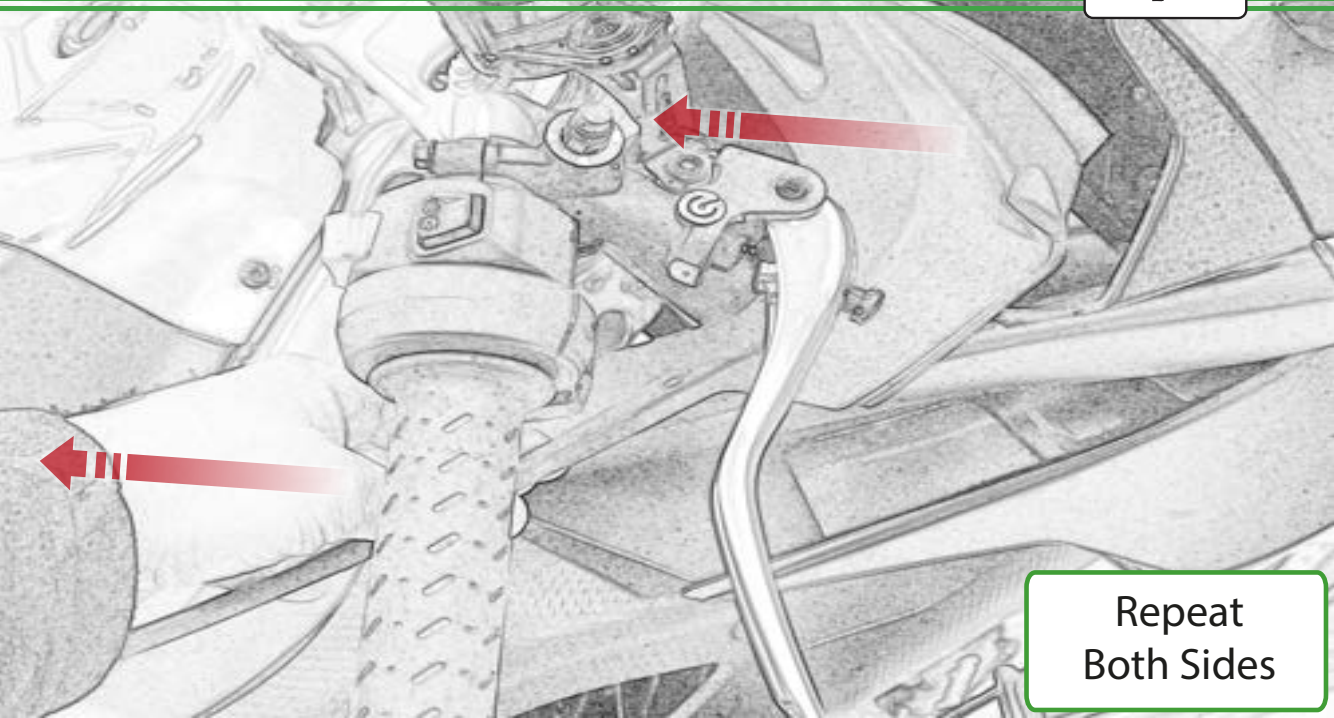


Repeat
Both Sides

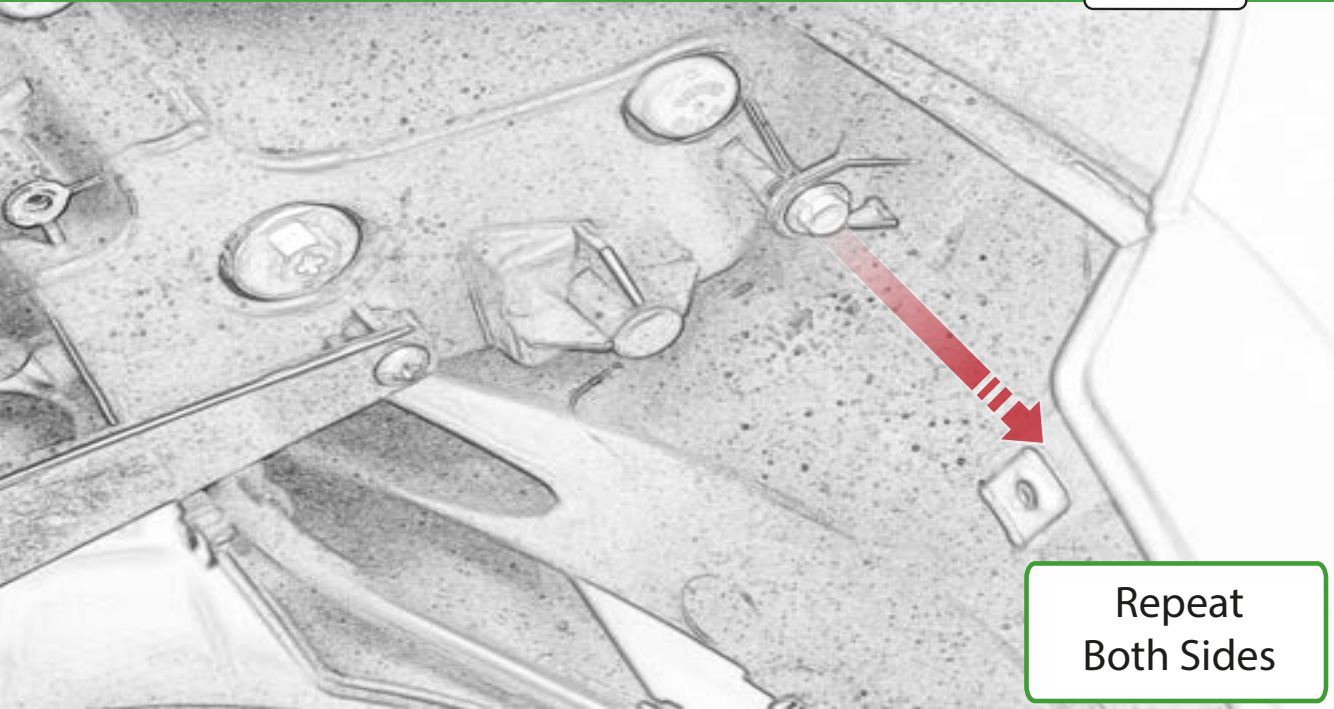


Repeat
Both Sides

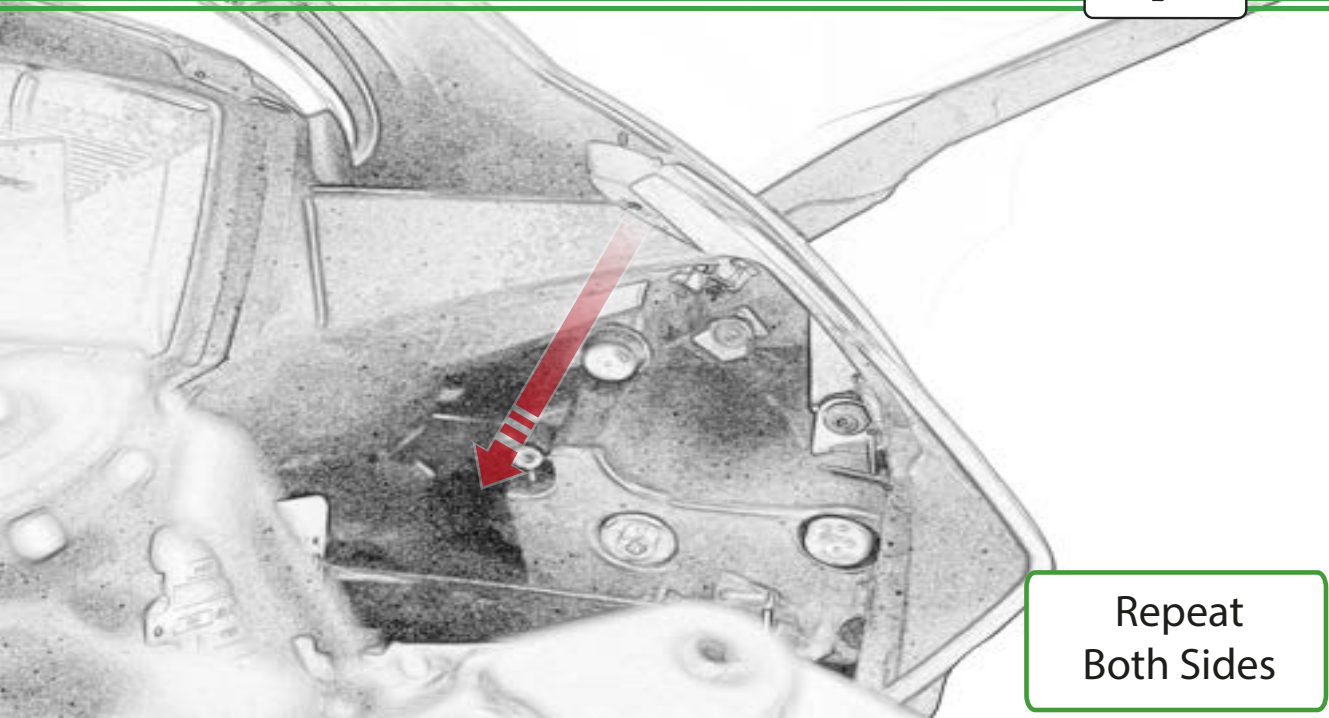


Repeat
Both Sides

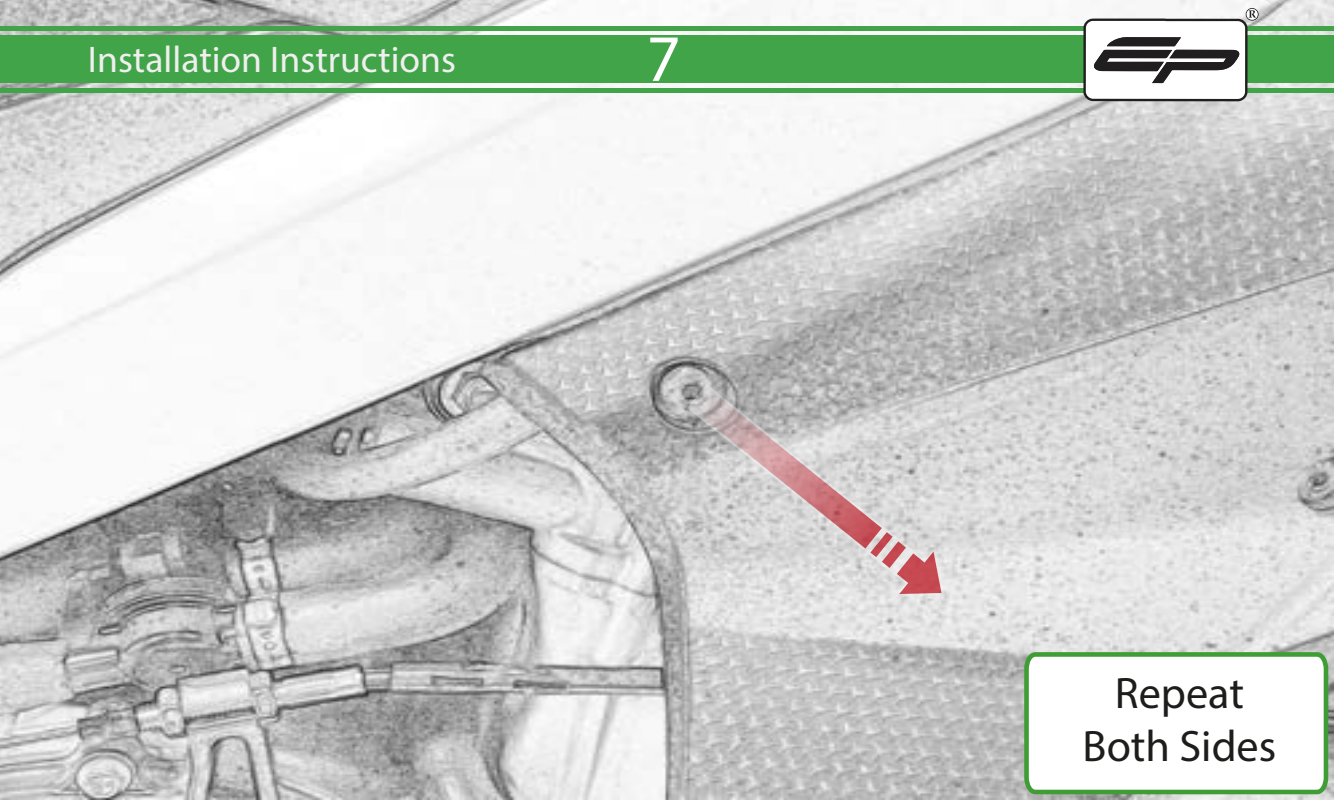


Repeat
Both Sides

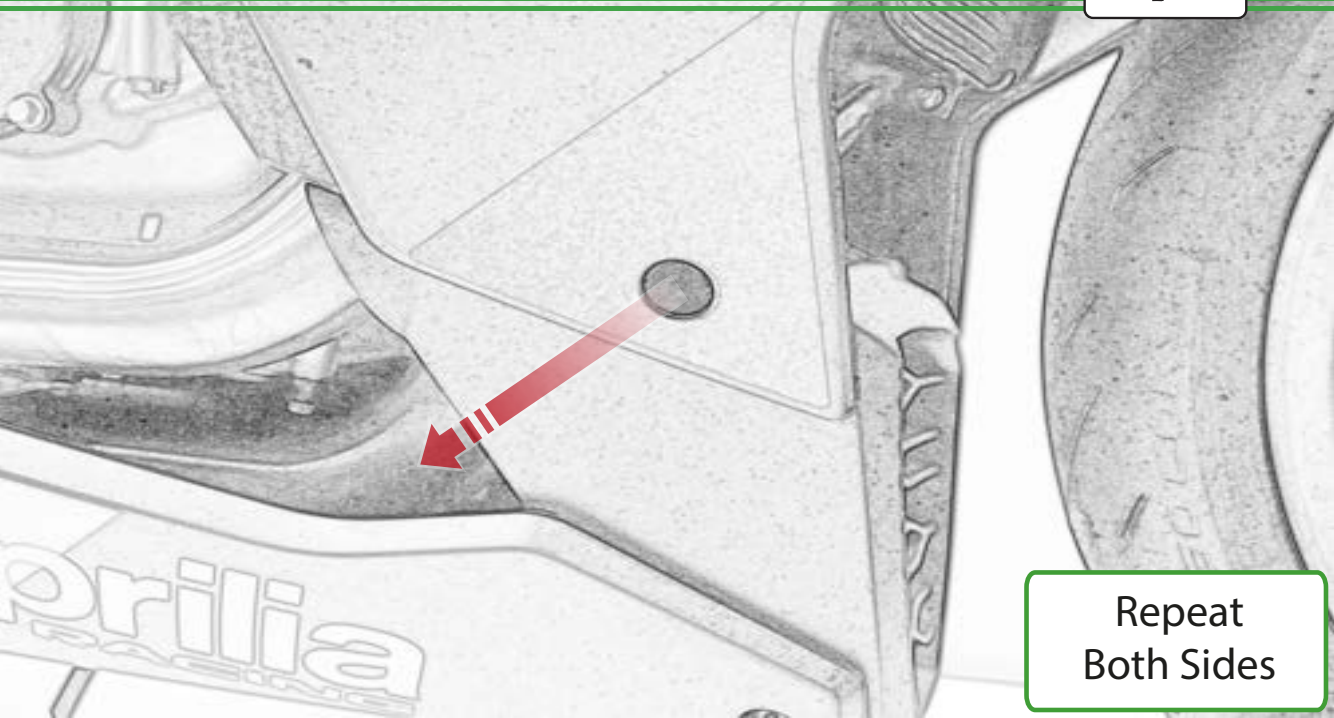


Repeat
Both Sides

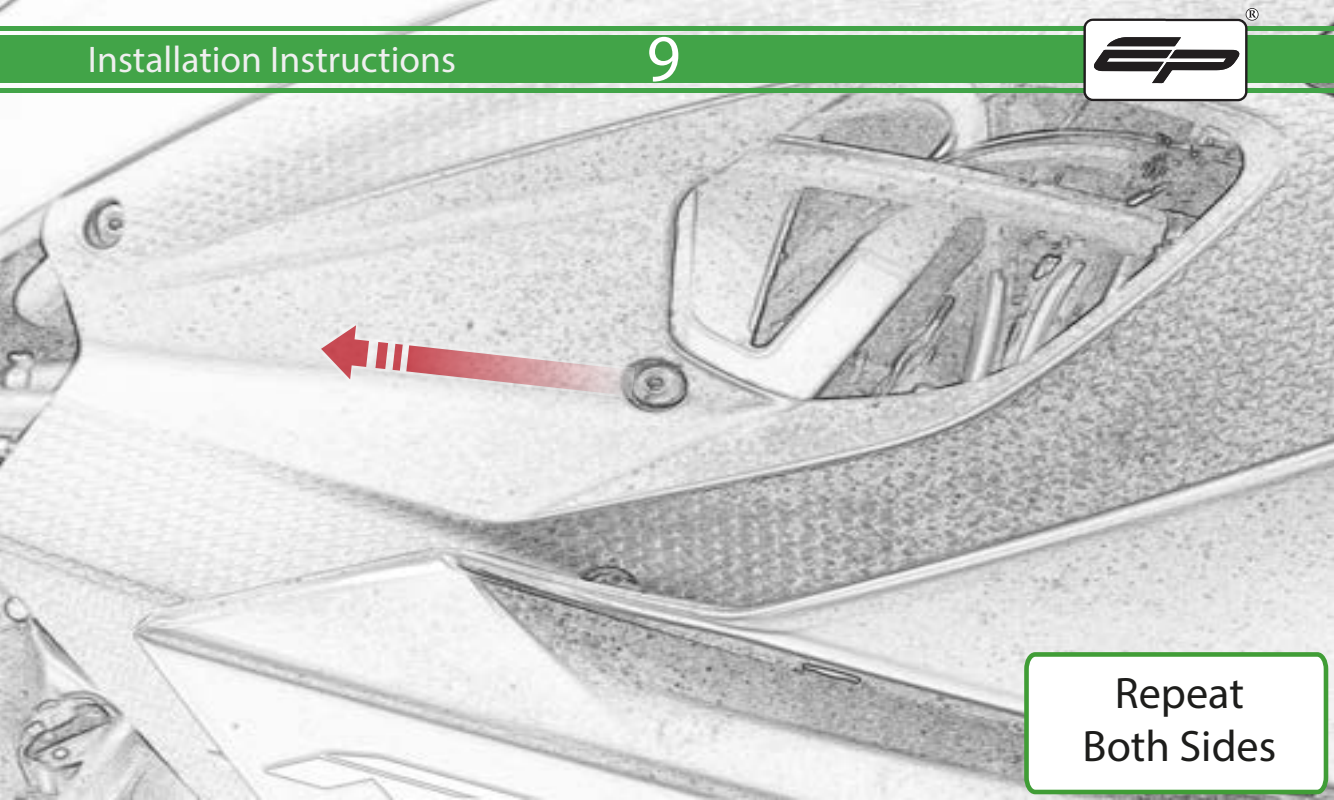


Repeat
Both Sides

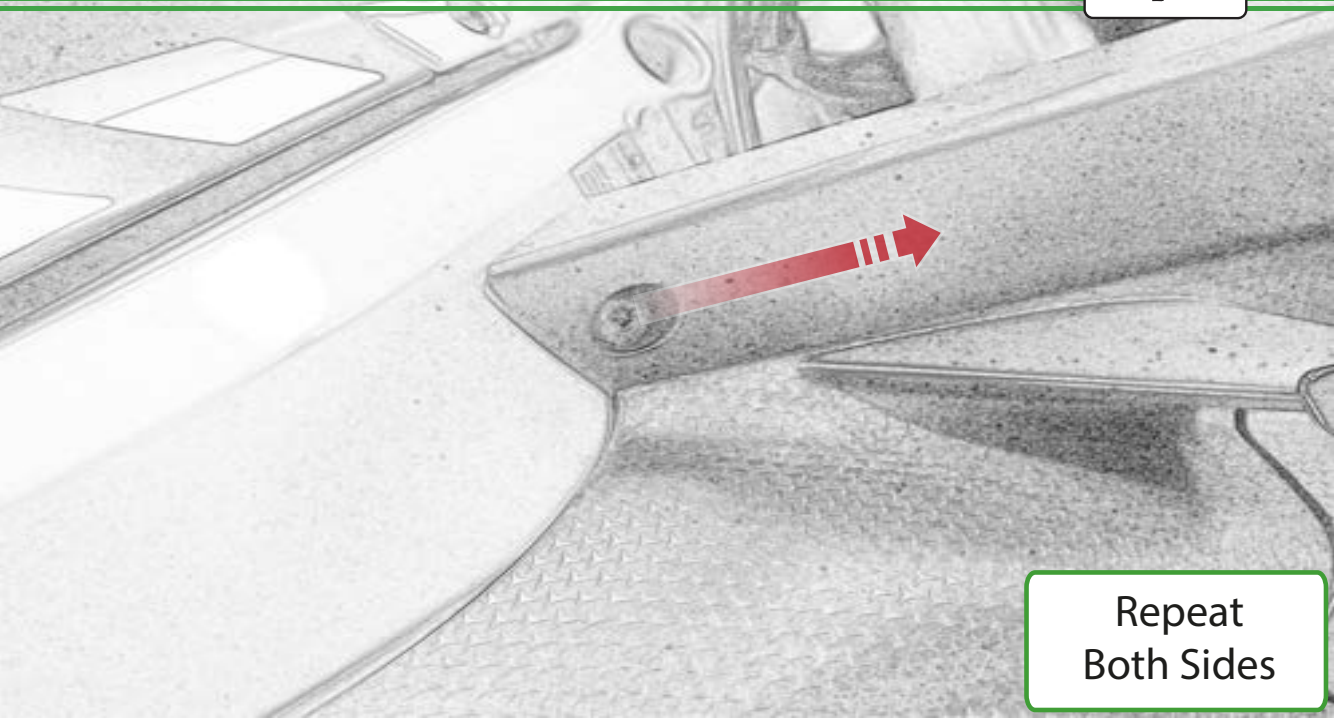


Repeat
Both Sides

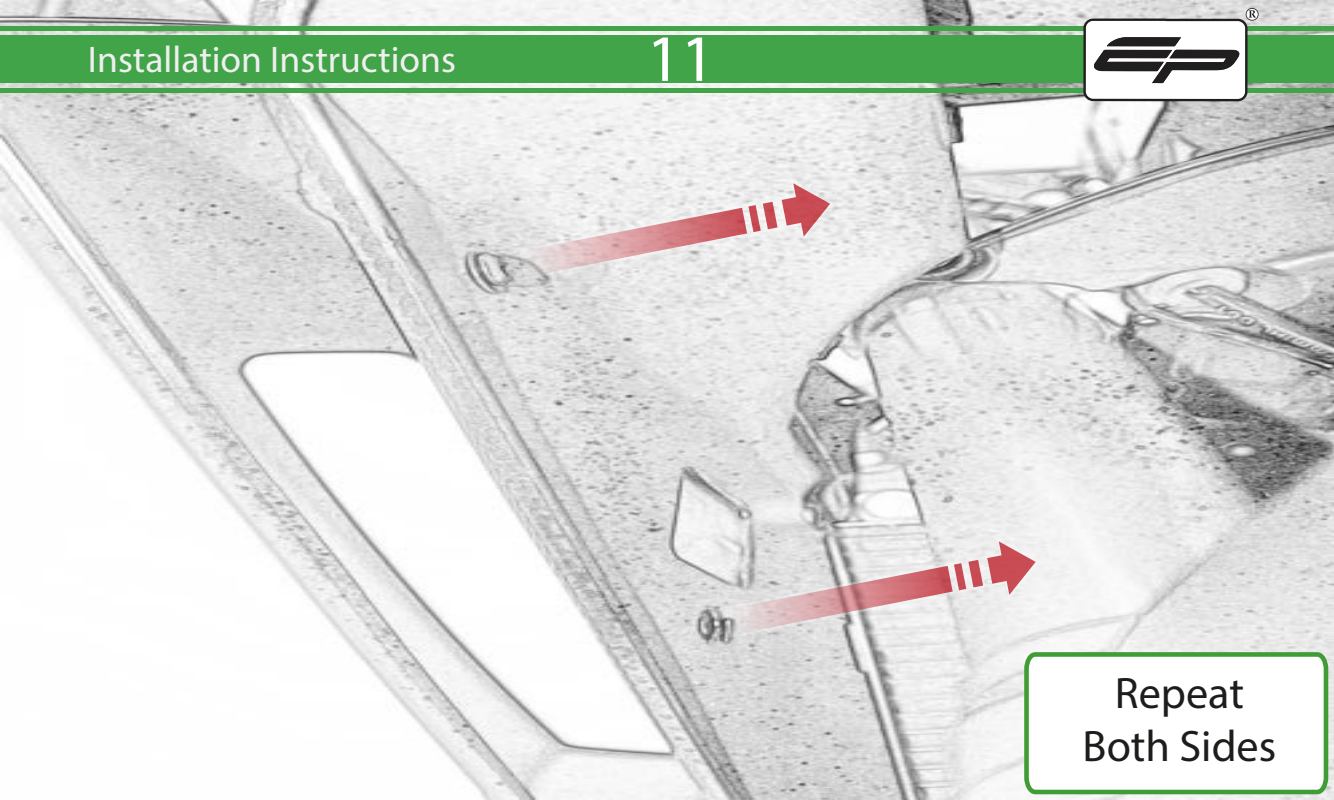


Repeat
Both Sides

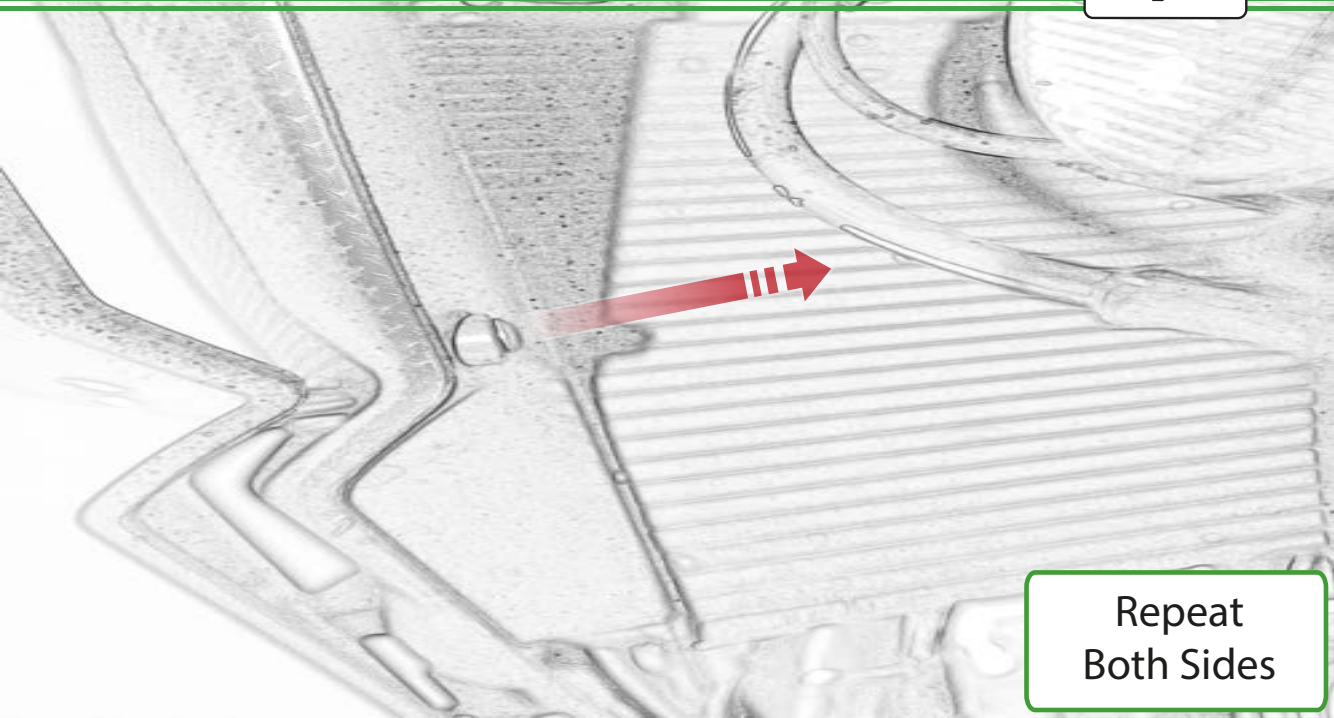


Repeat
Both Sides

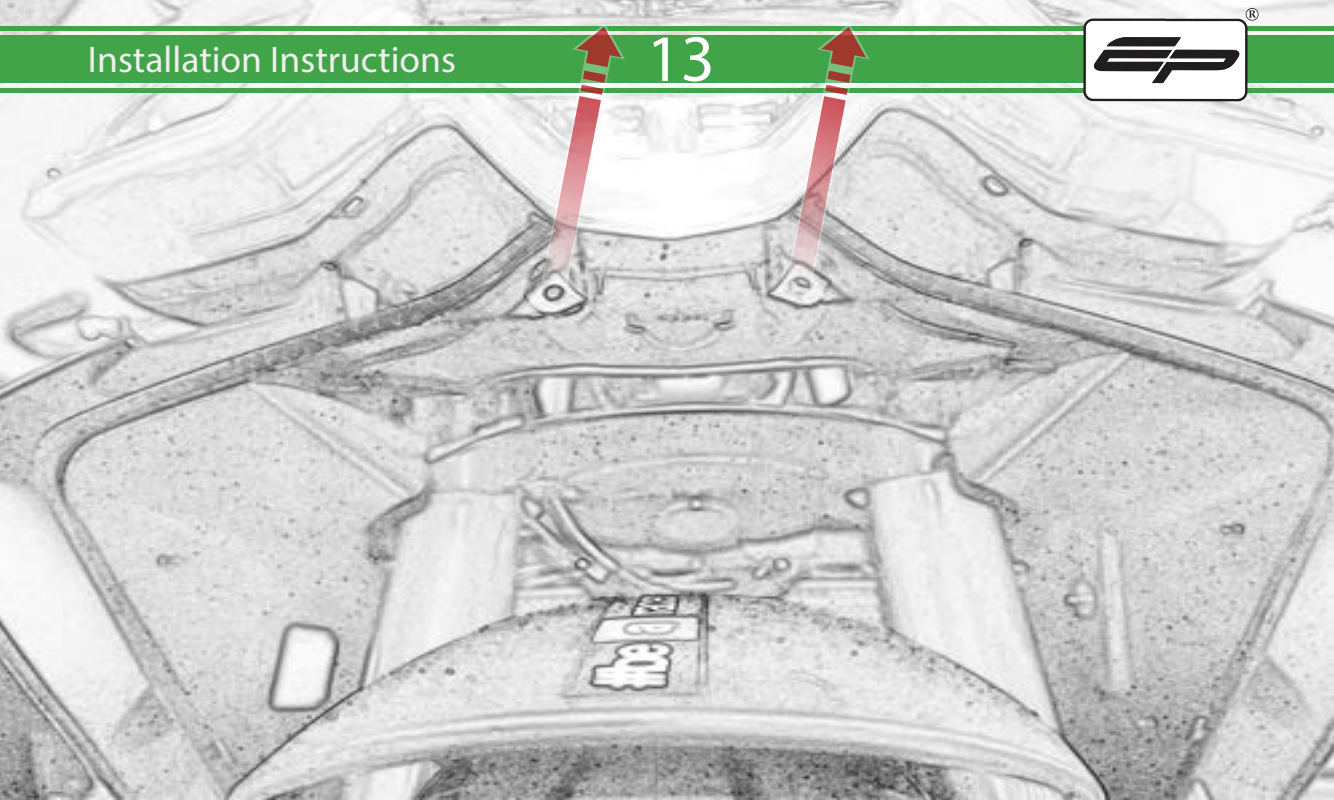


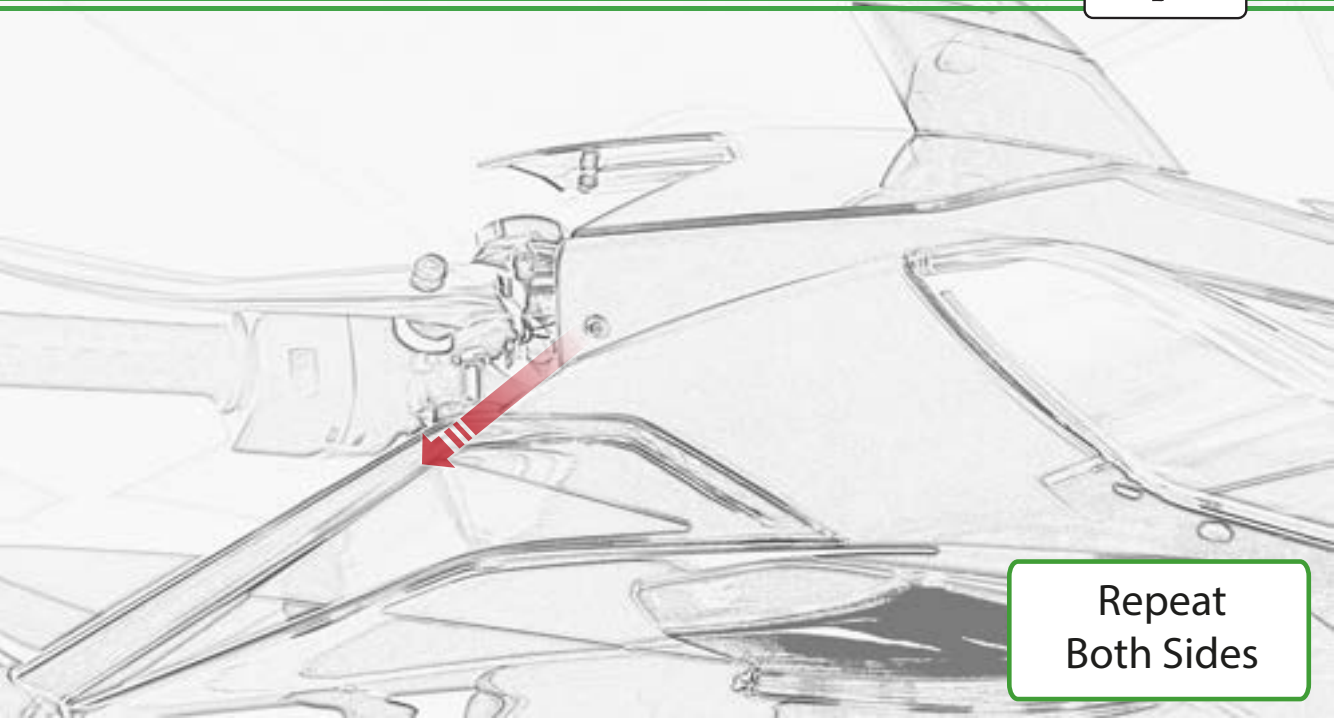


Repeat
Both Sides

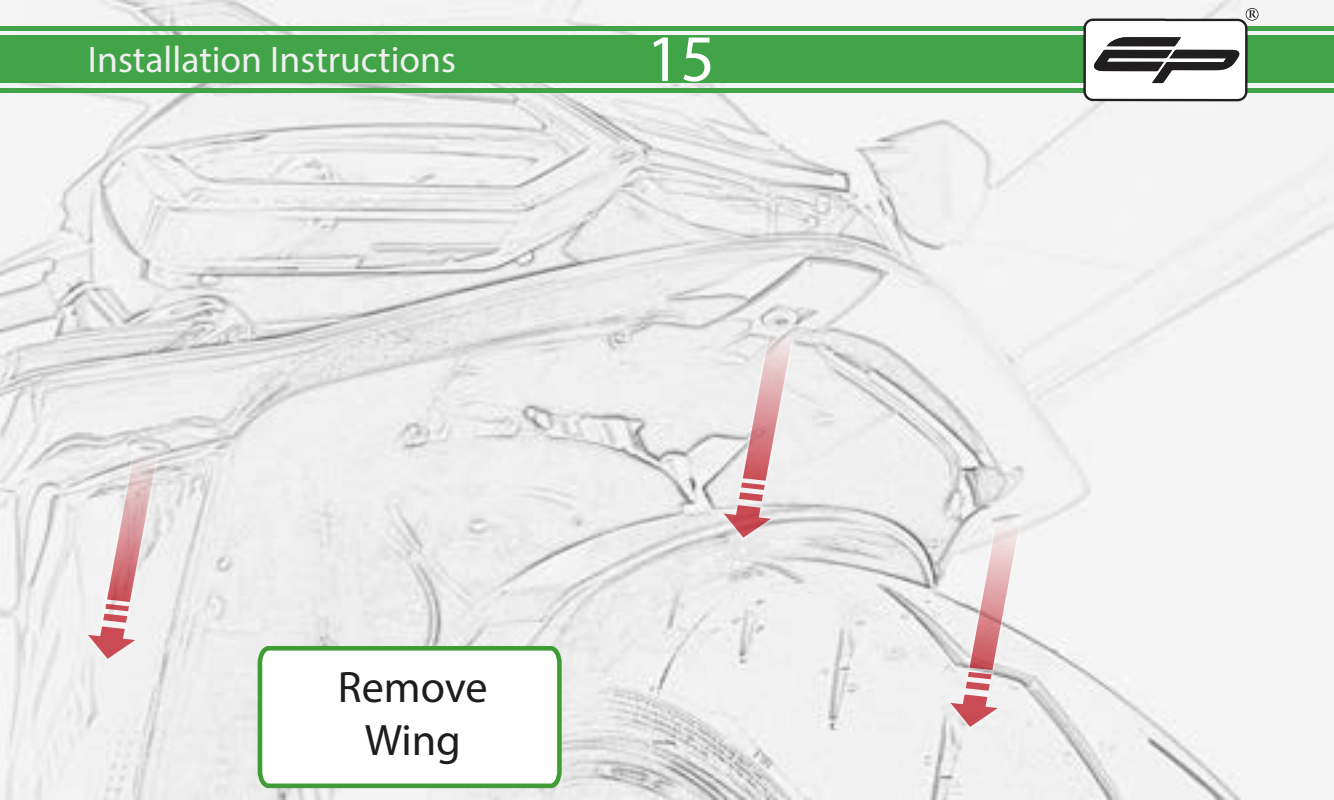



Remove
Wing

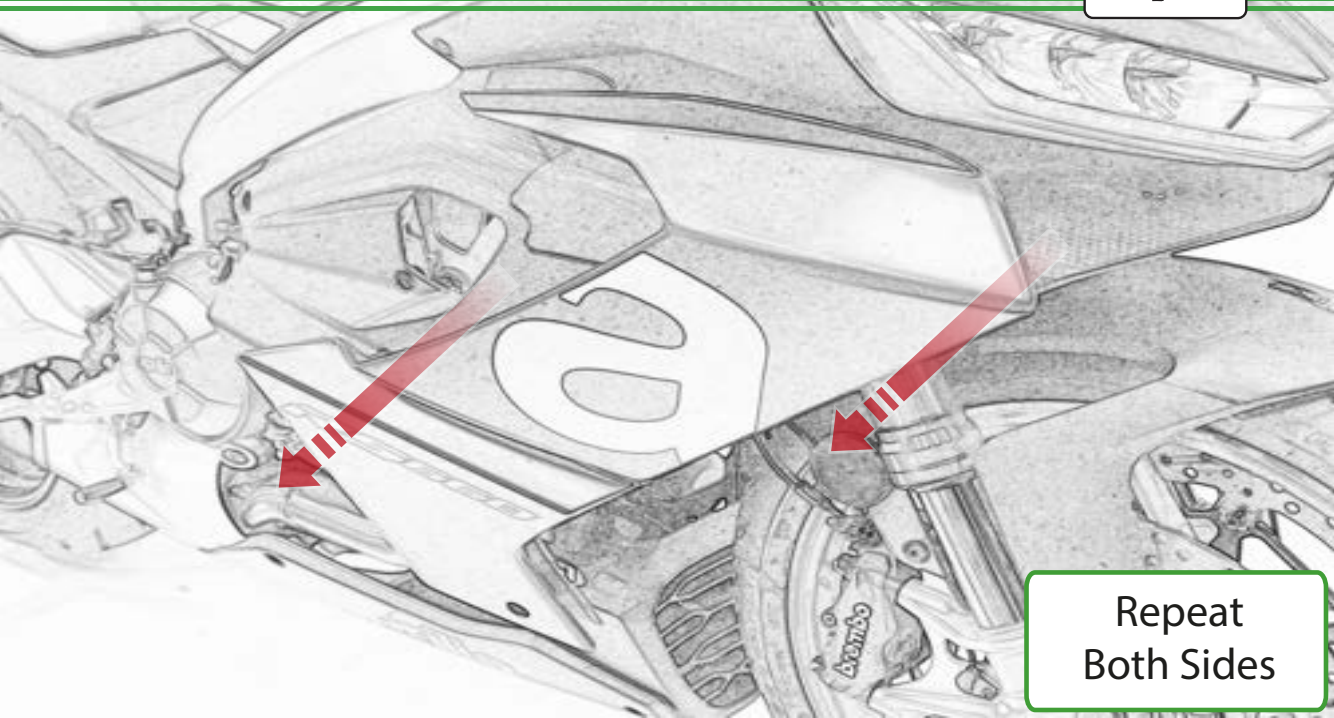



Repeat
Both Sides

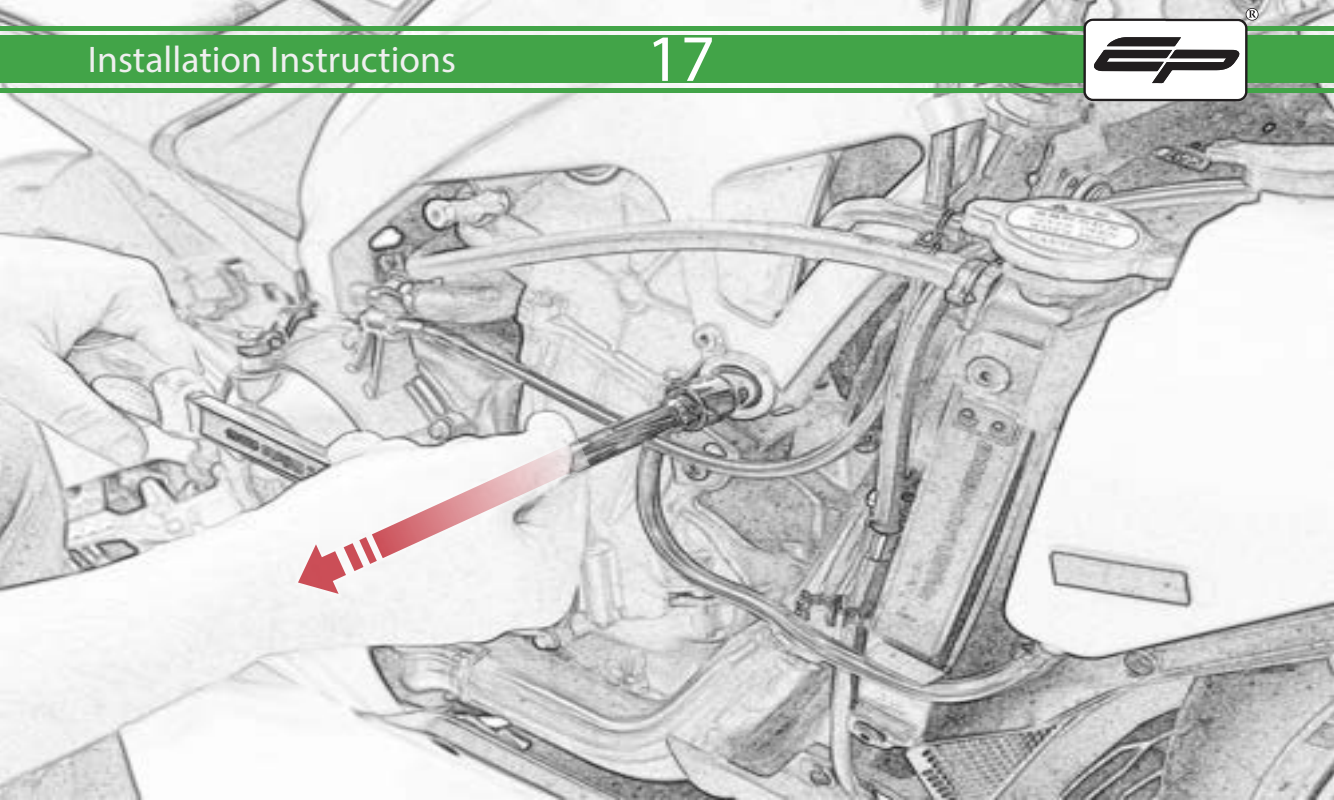

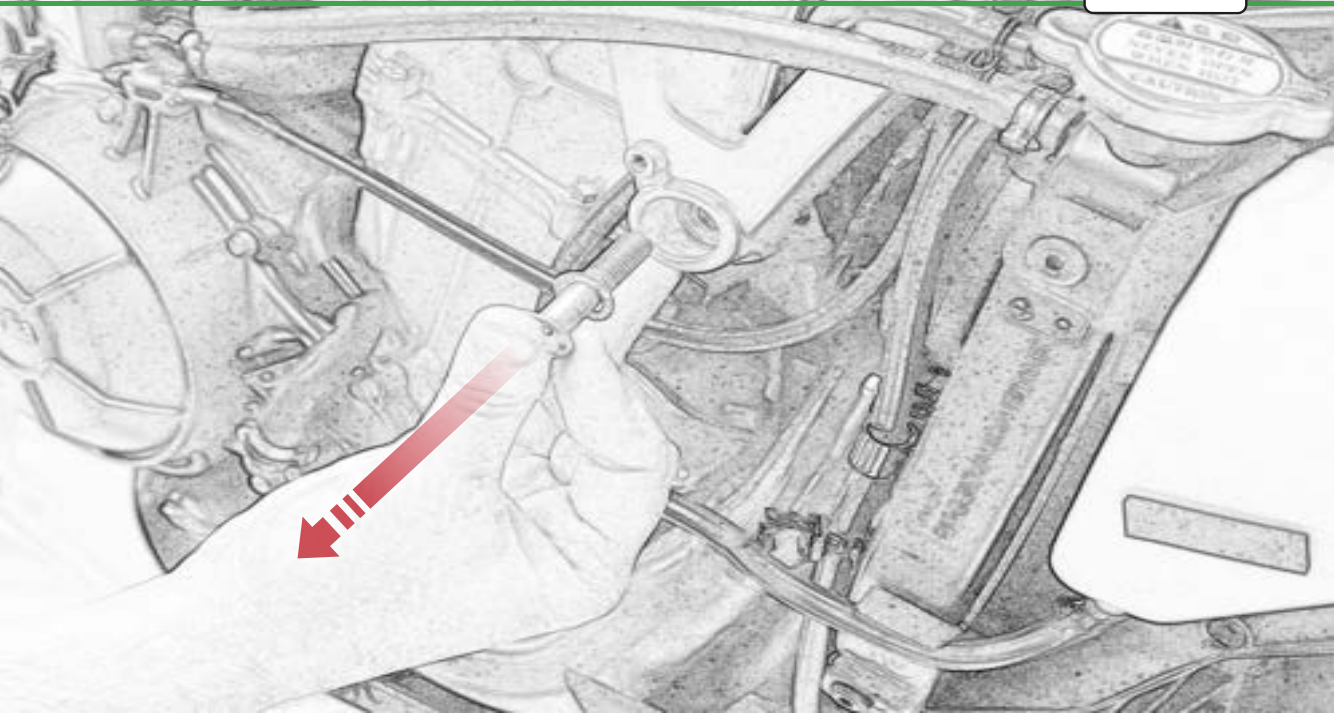


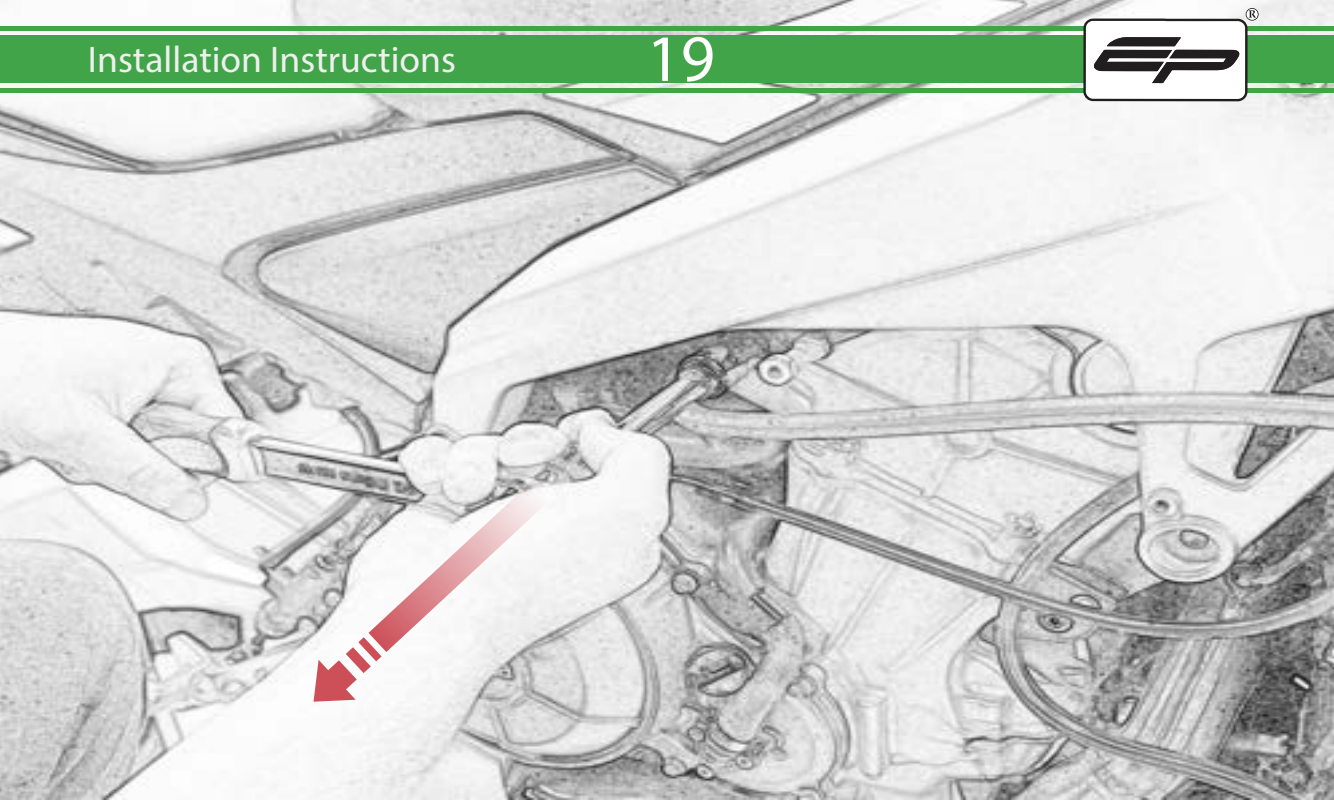


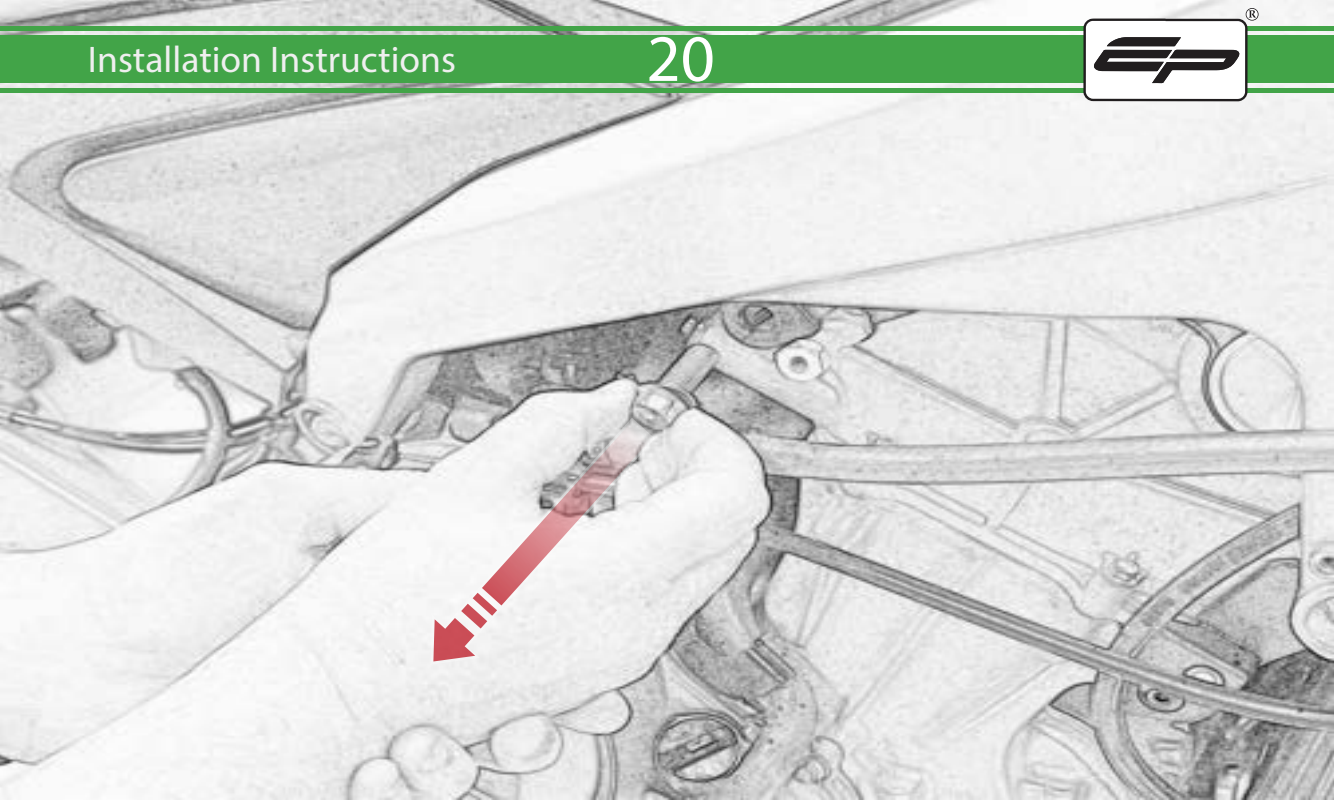


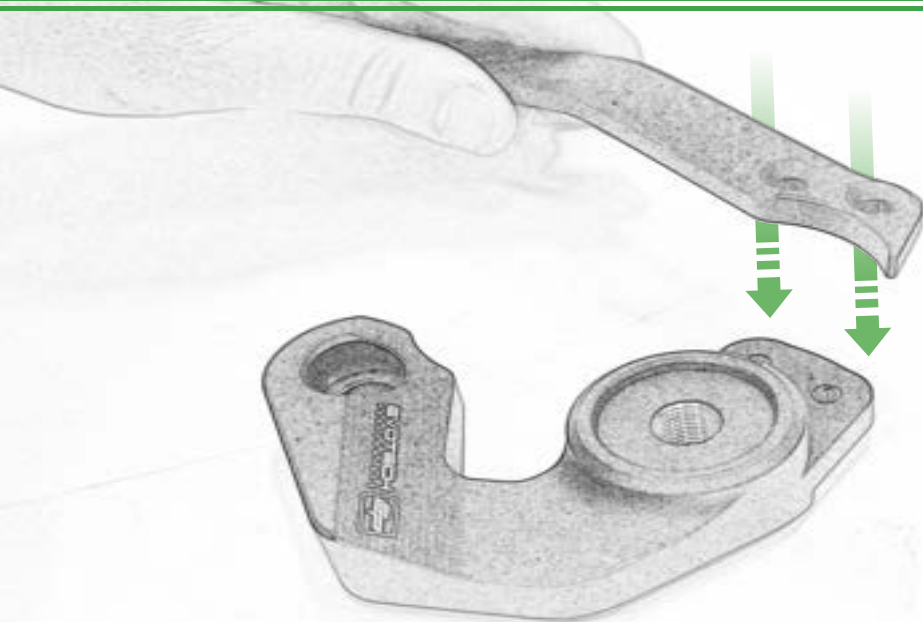




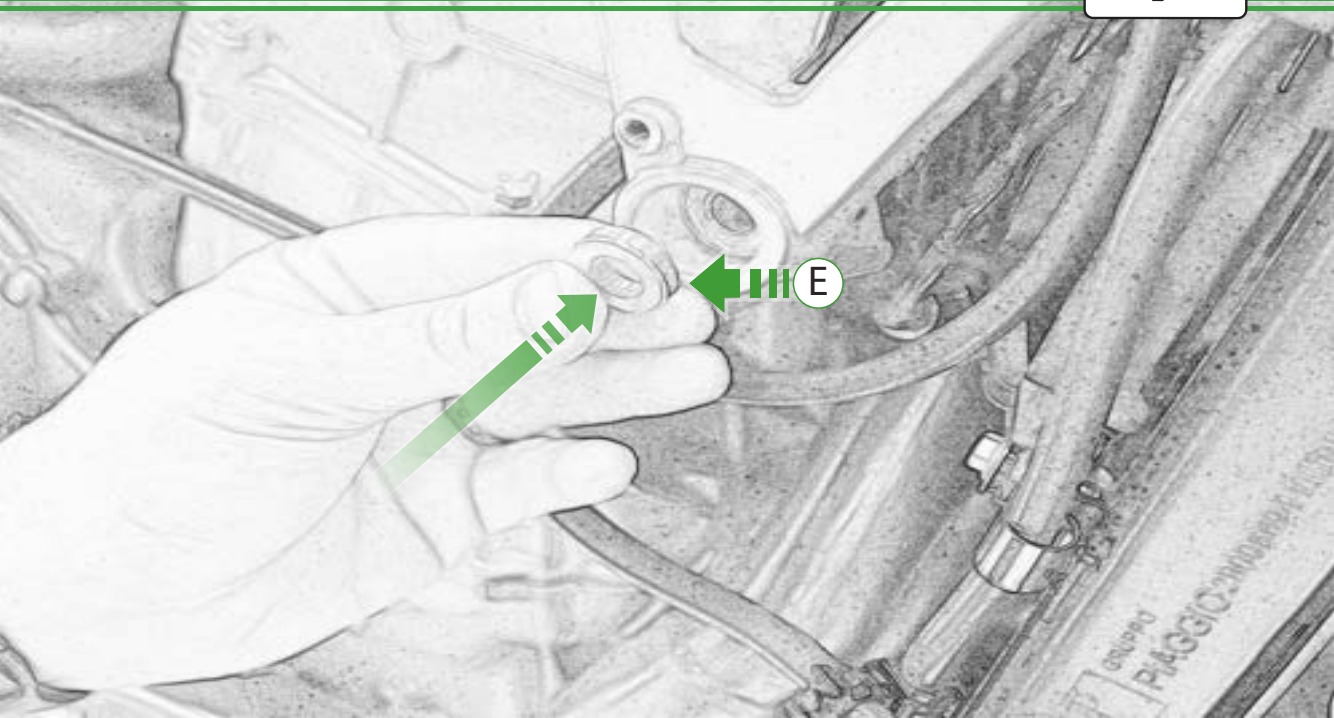


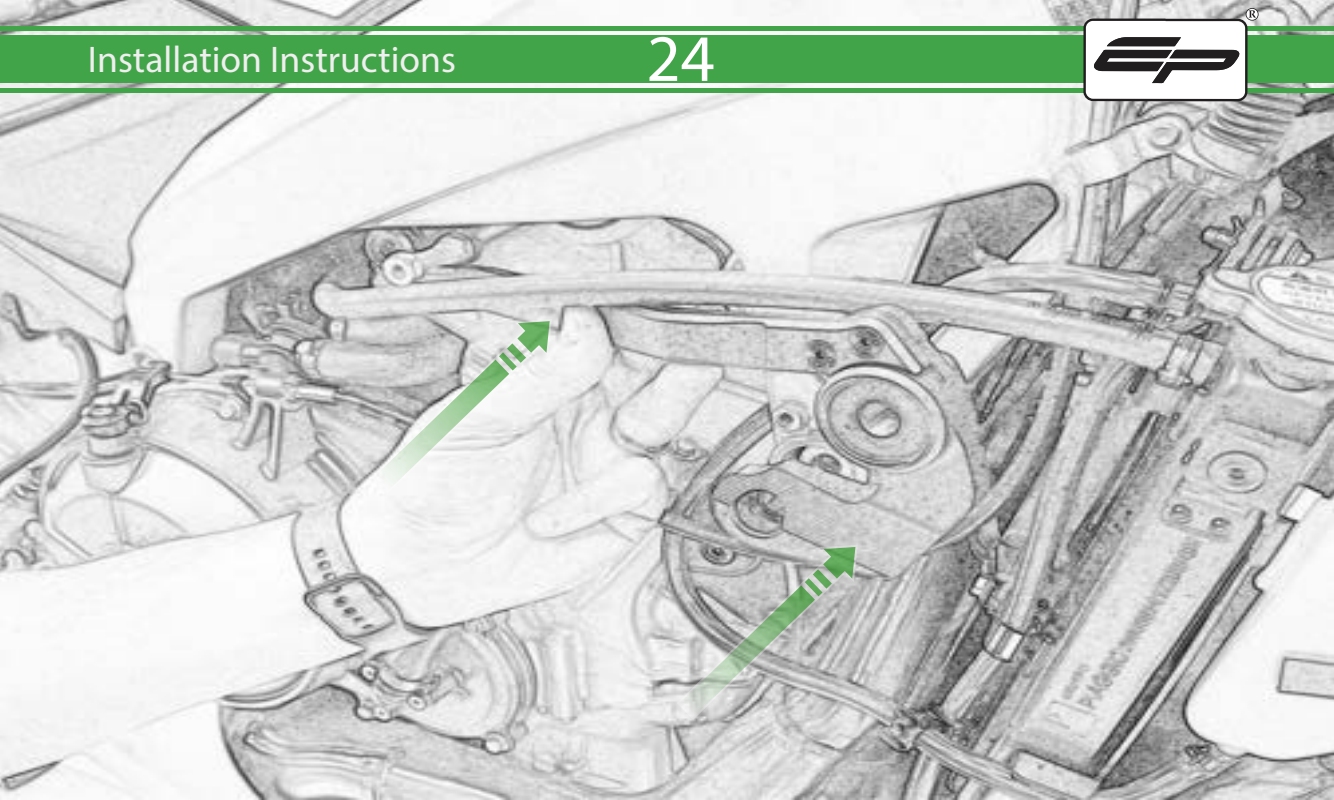

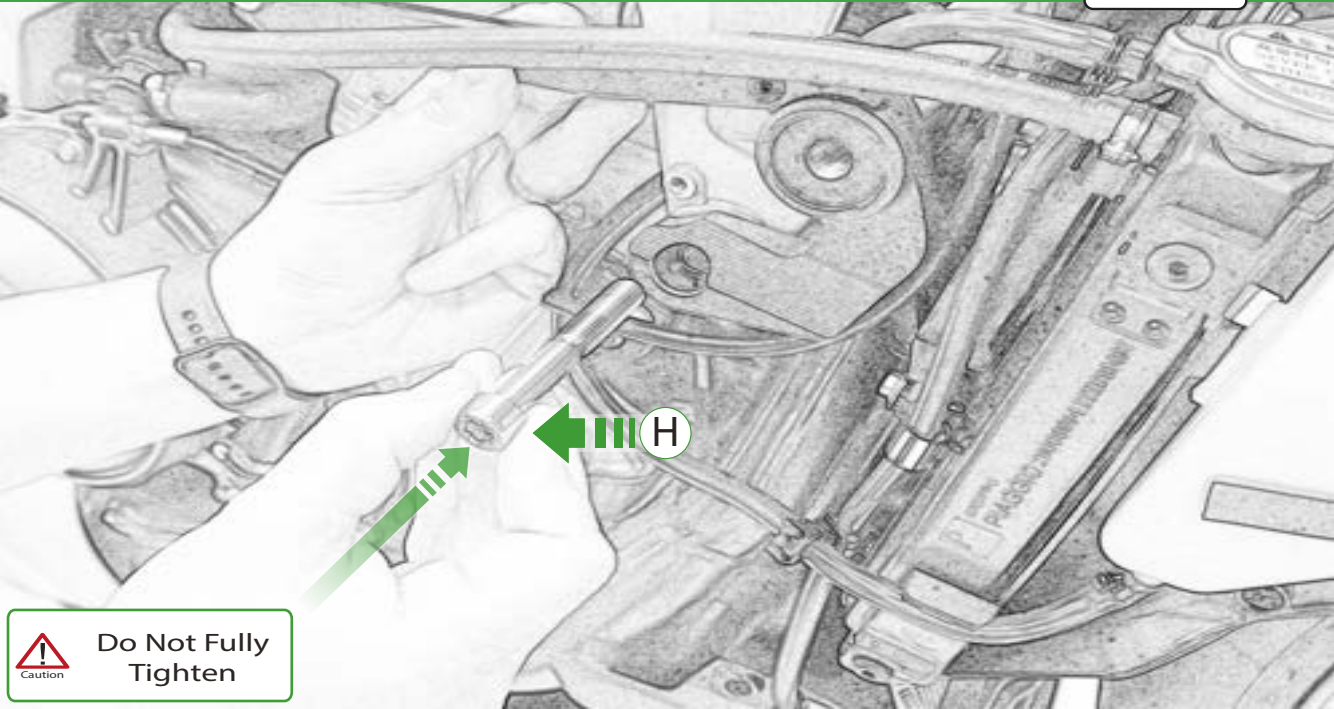


**Do Not Fully
Tighten**

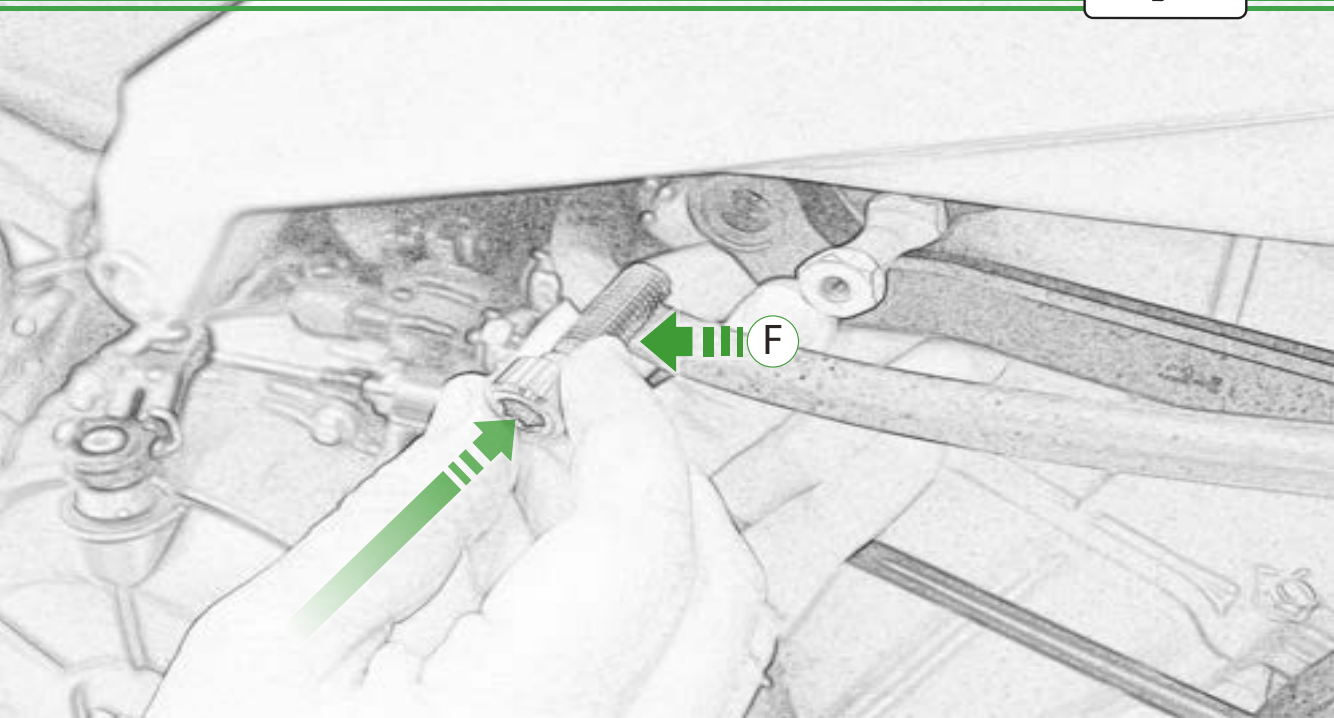


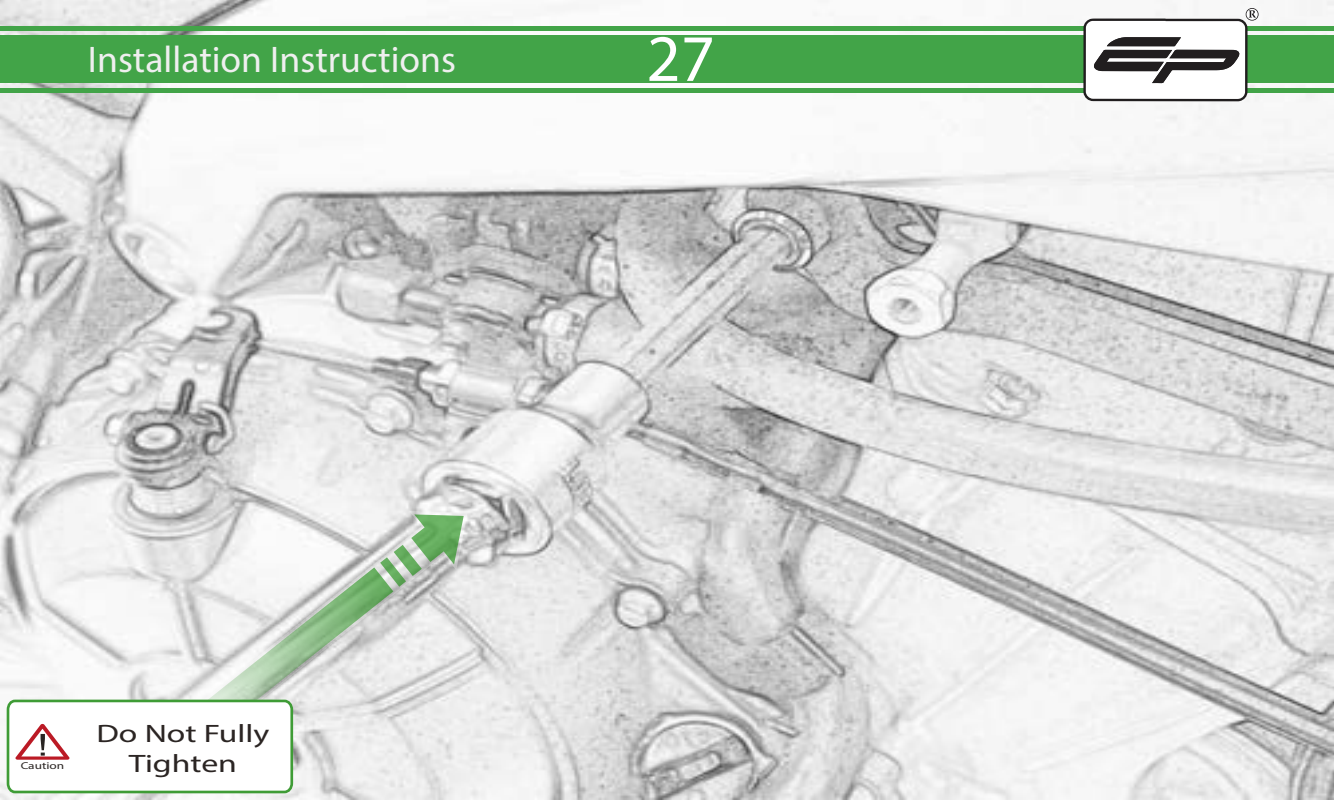


Do Not Fully
Tighten

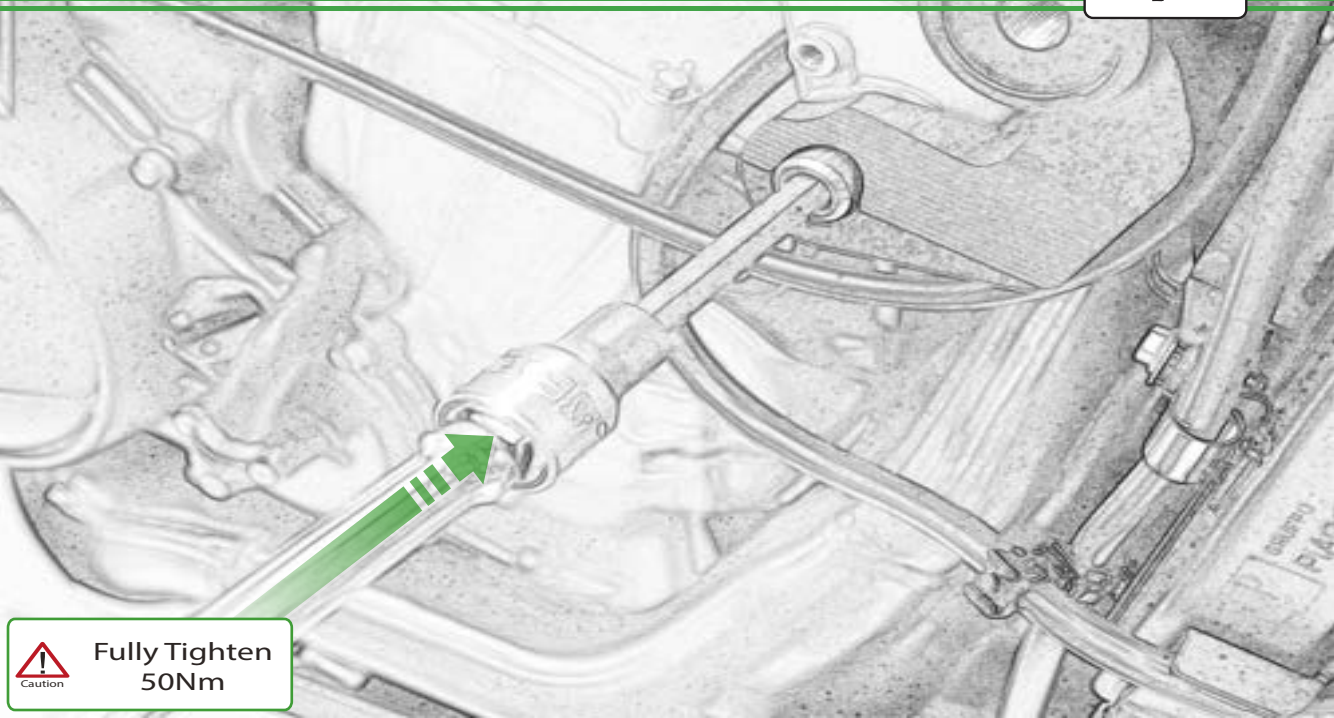



**Fully Tighten
50Nm**

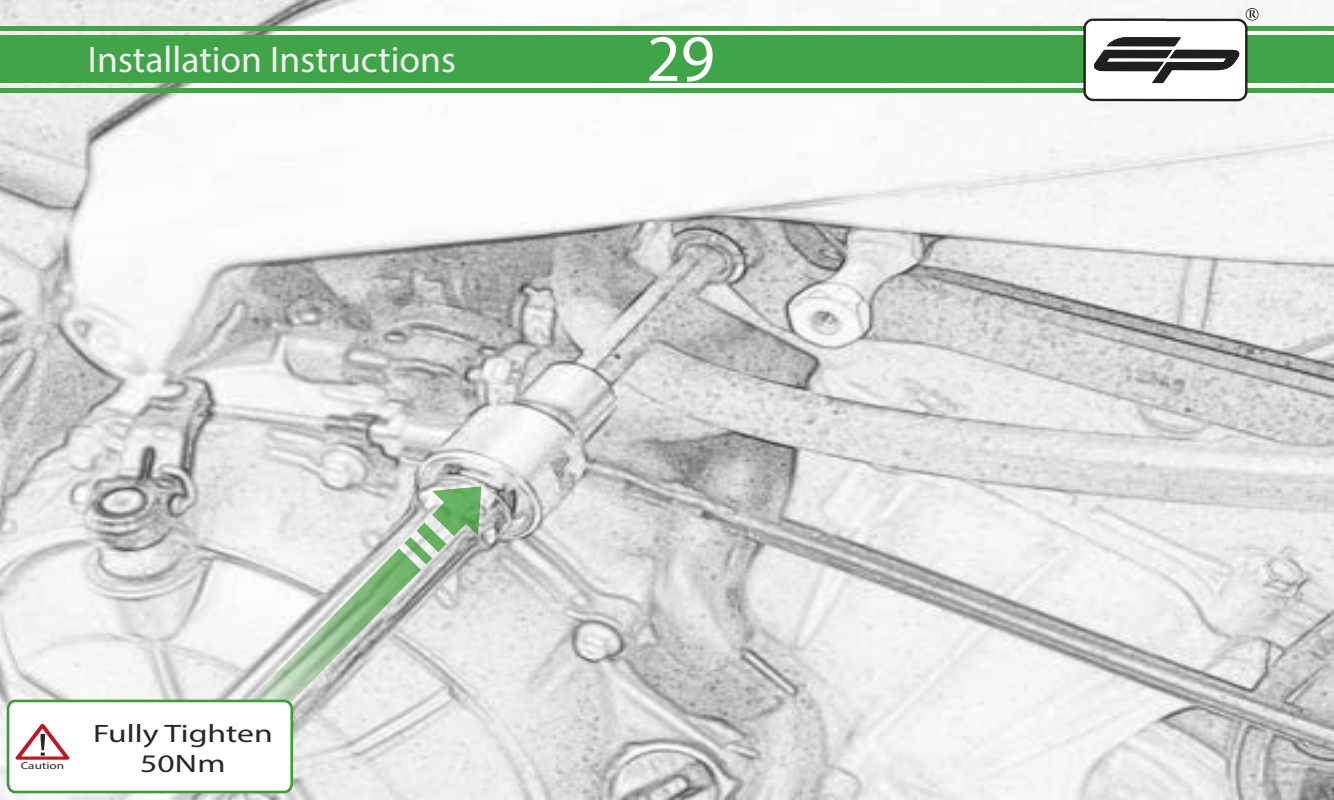


Fully Tighten
50Nm

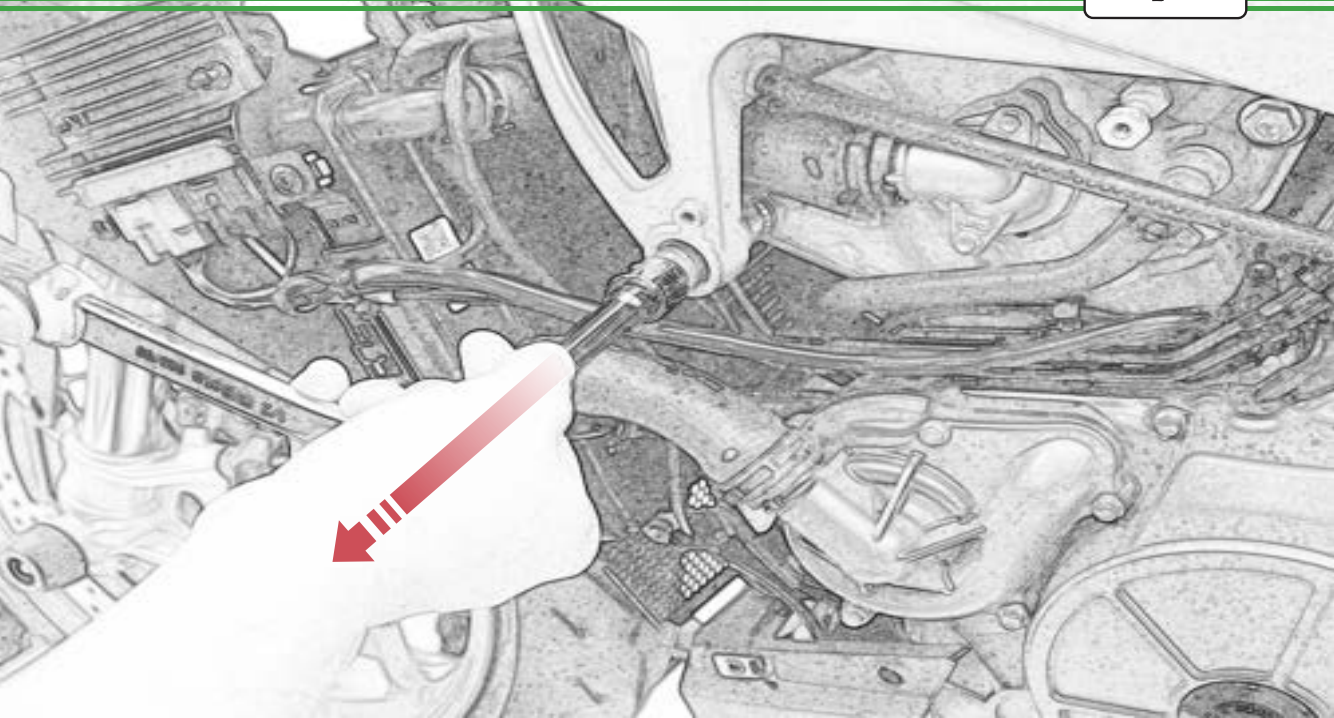


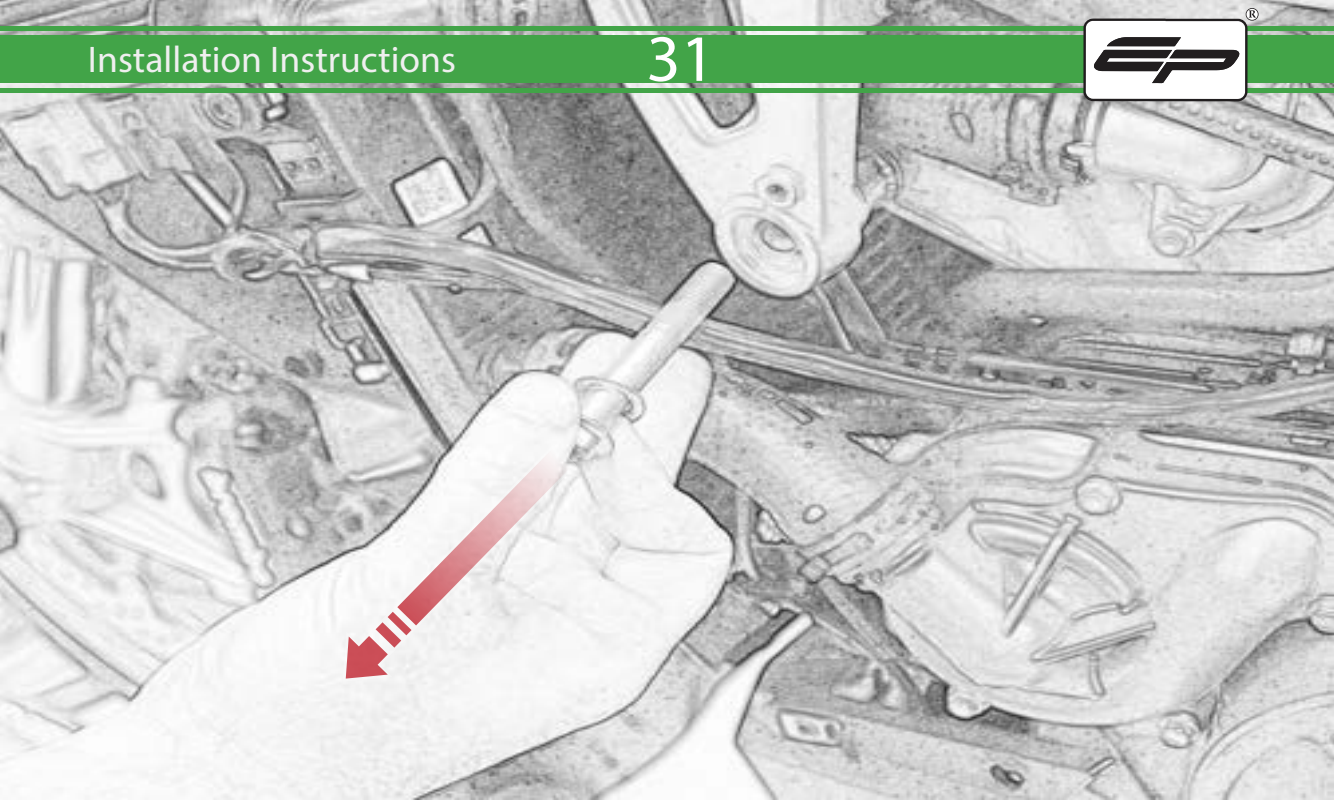


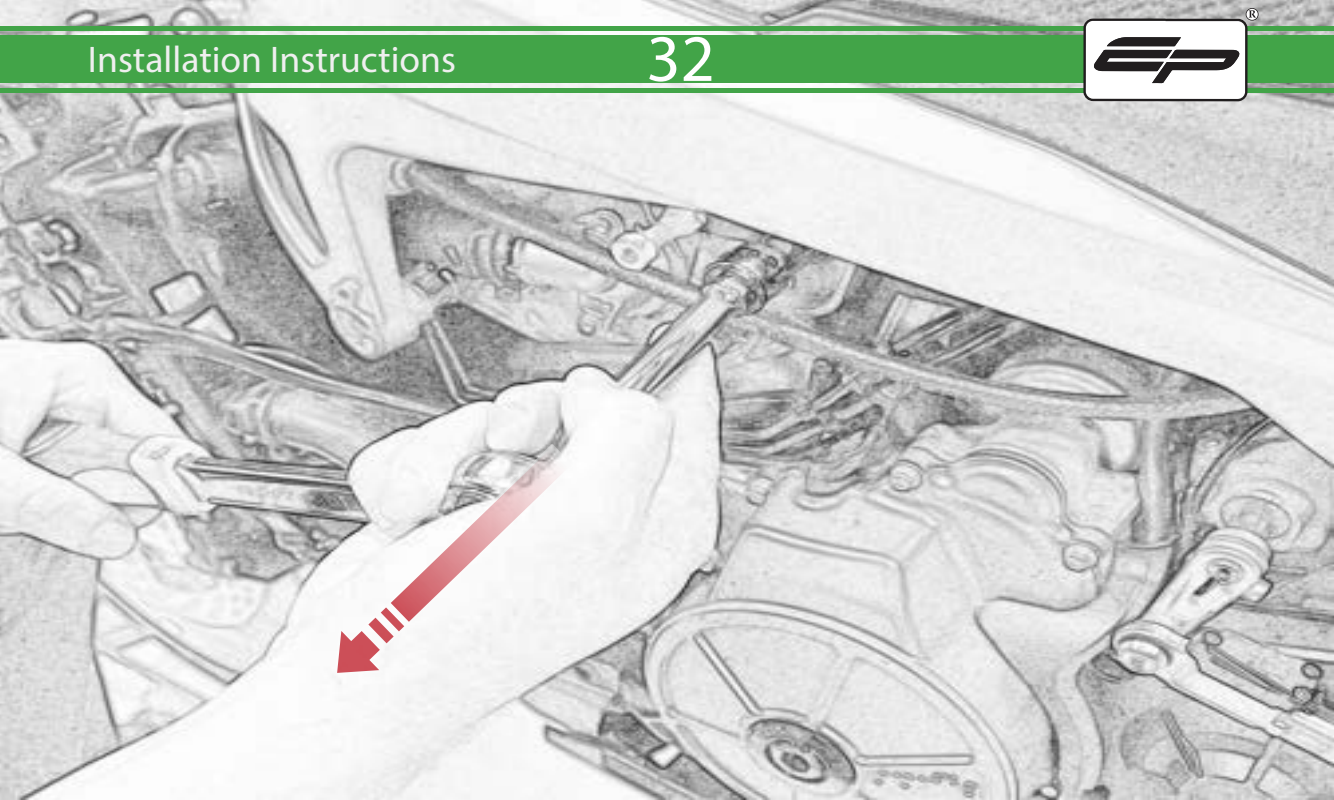





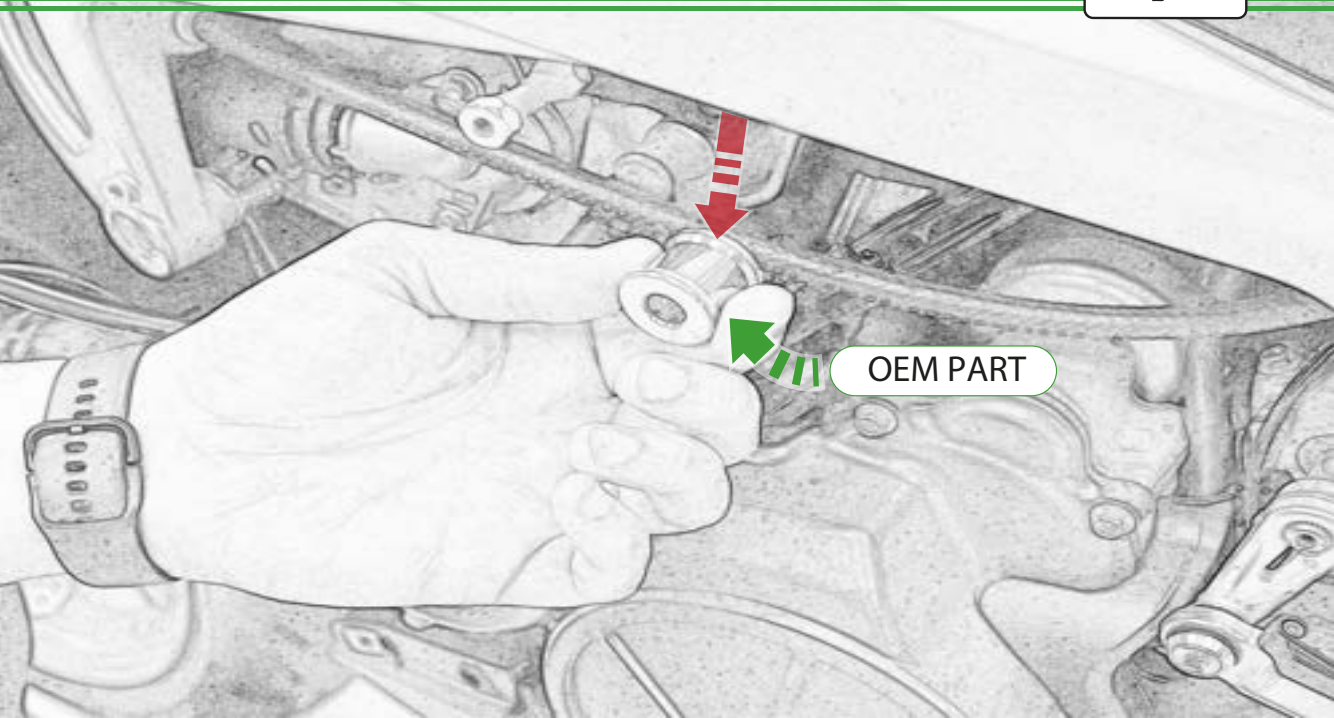


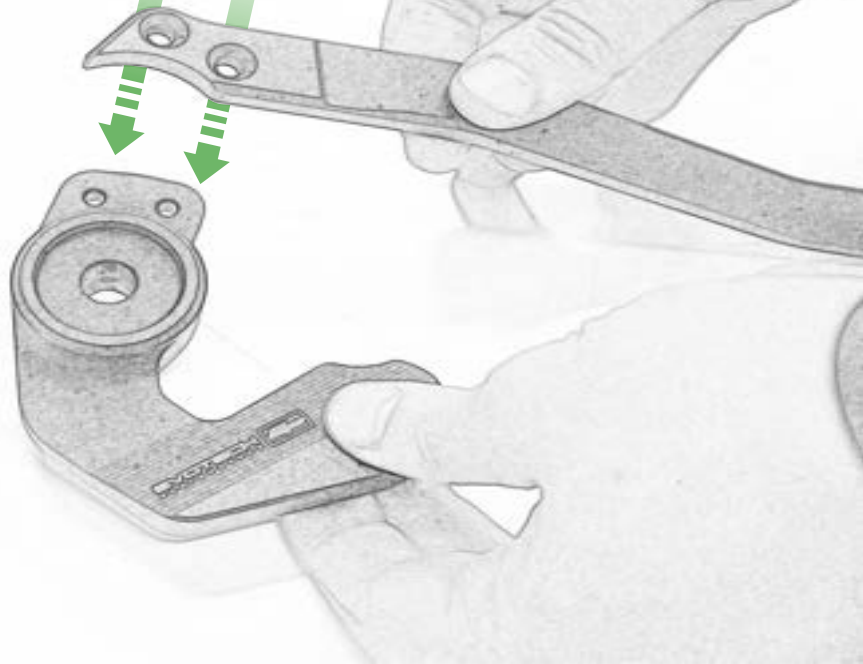

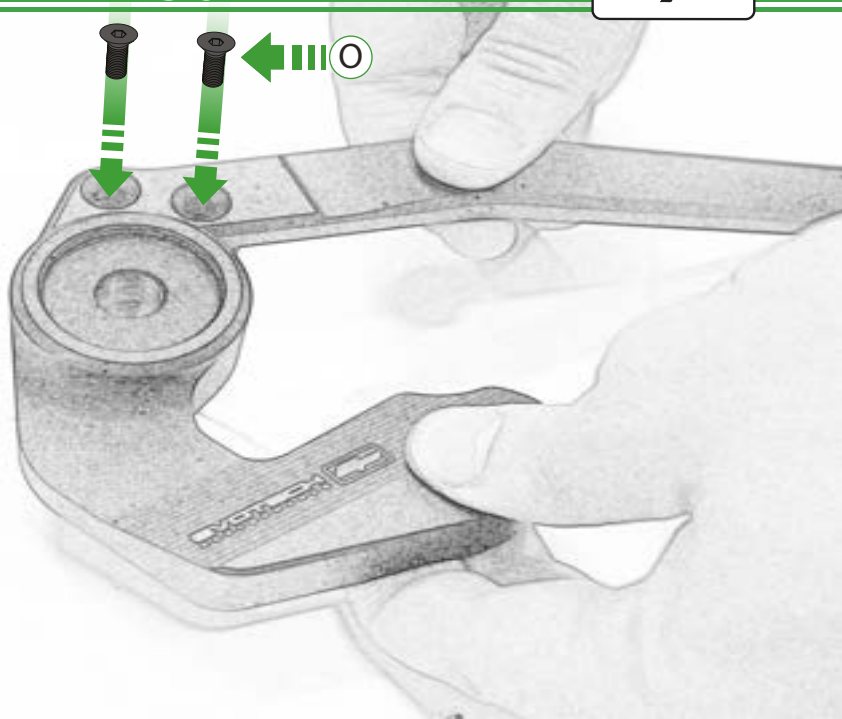


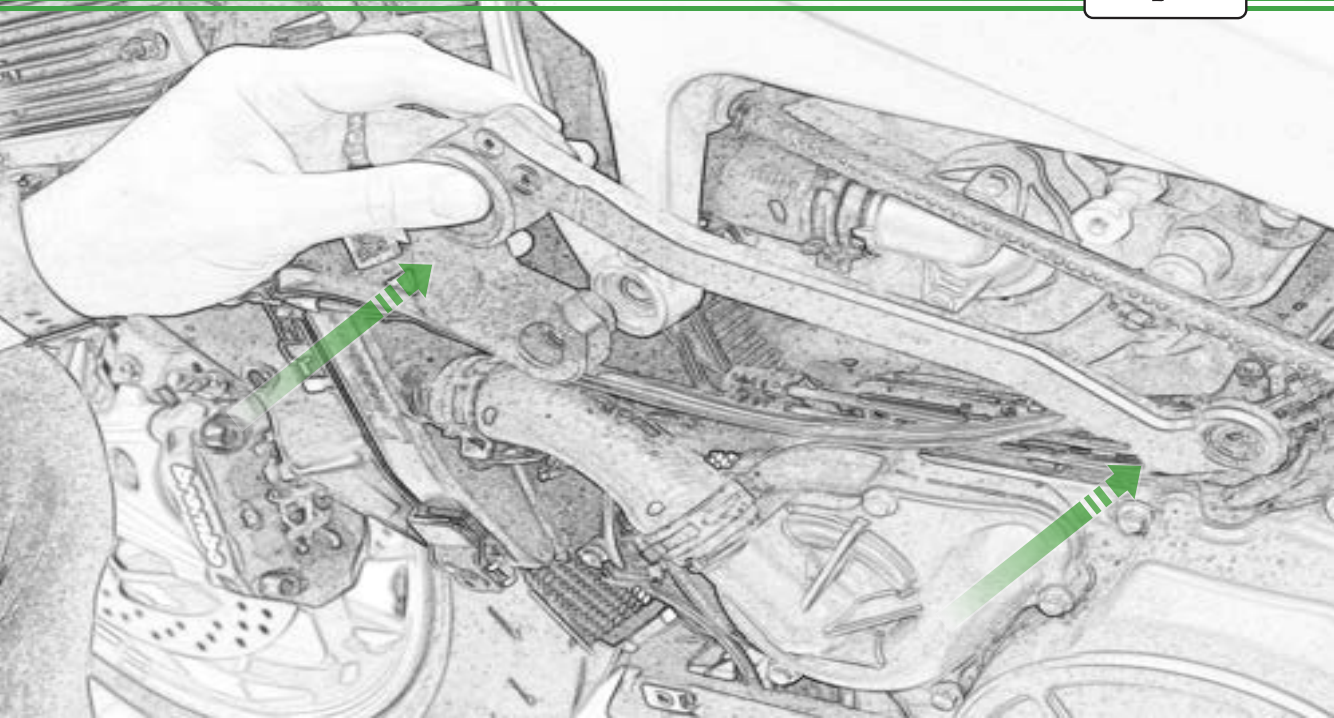


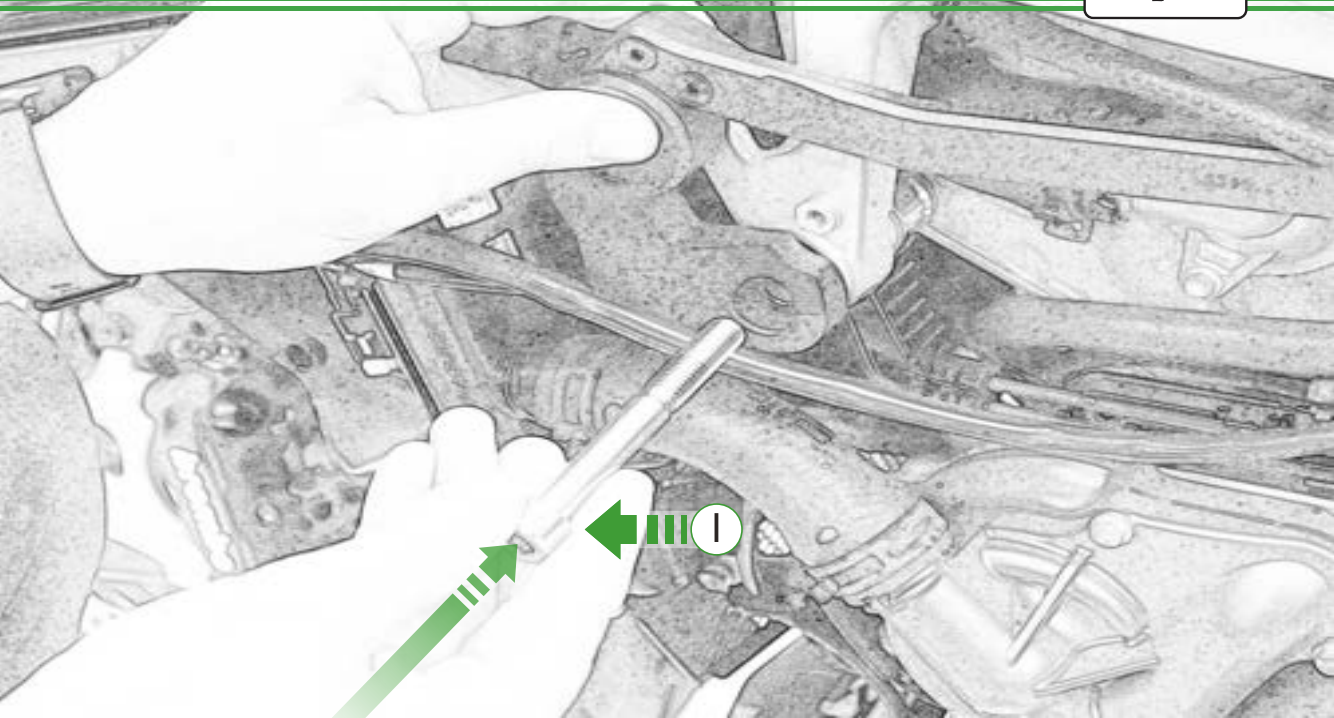


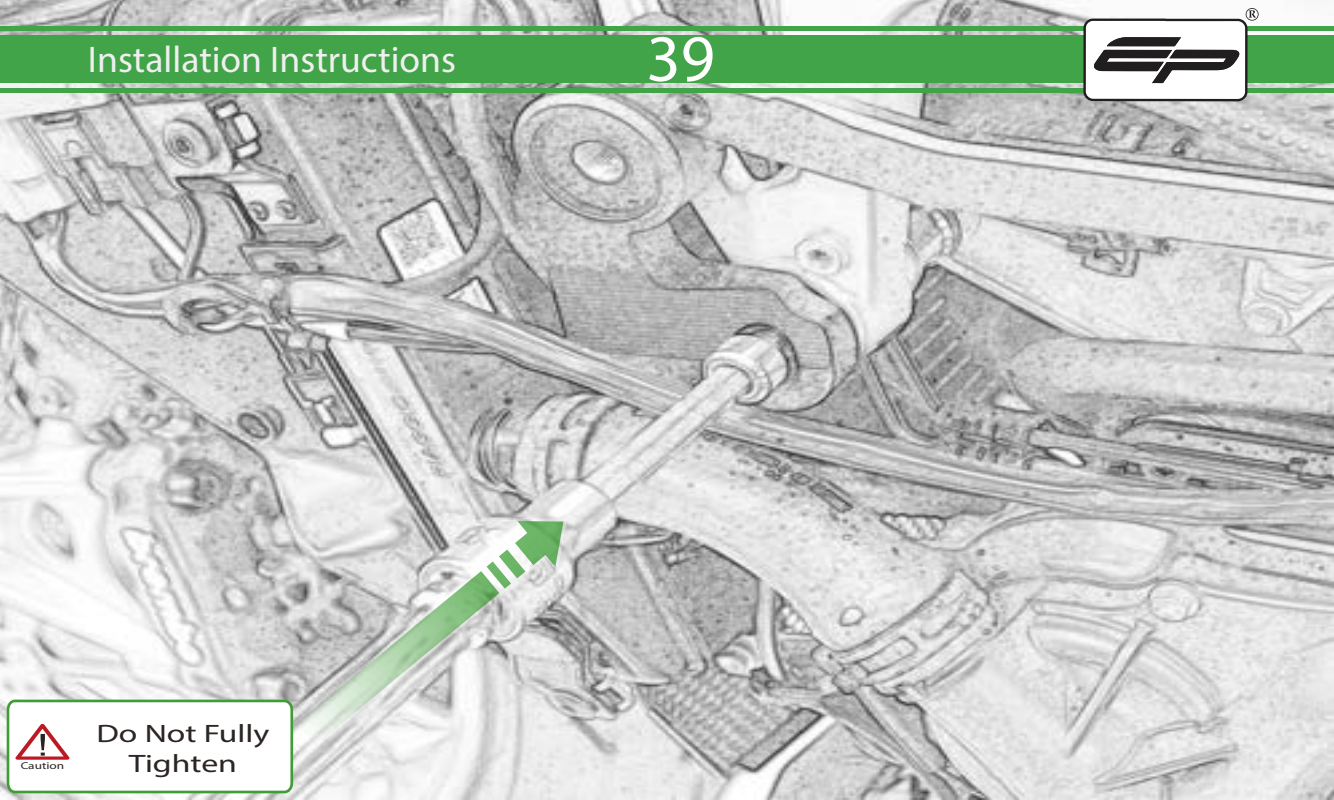


Do Not Fully
Tighten

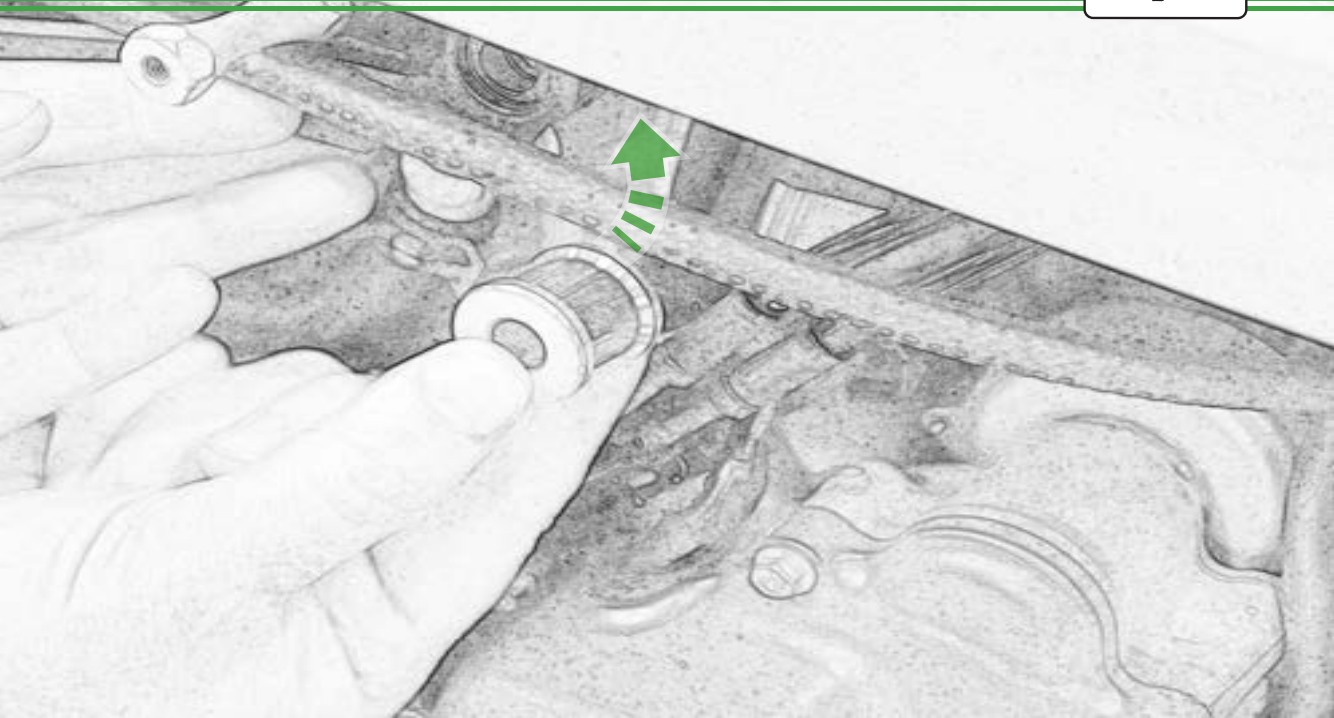

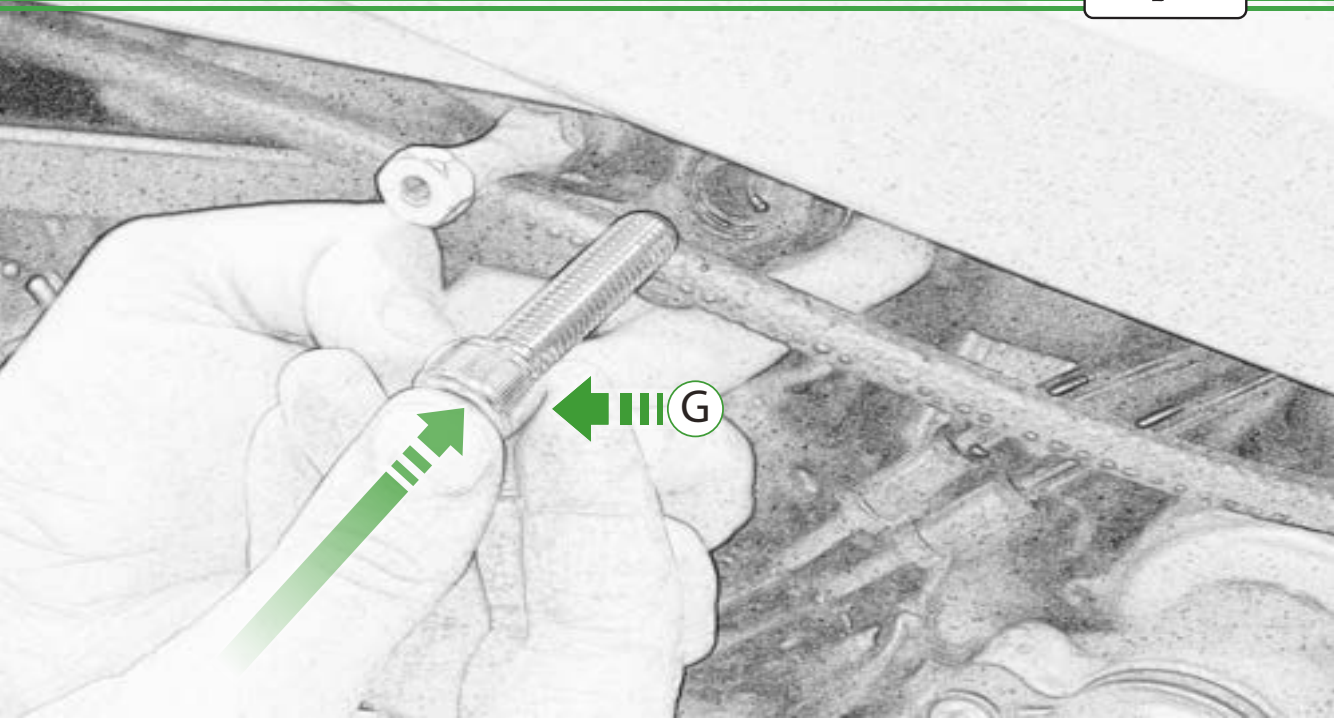


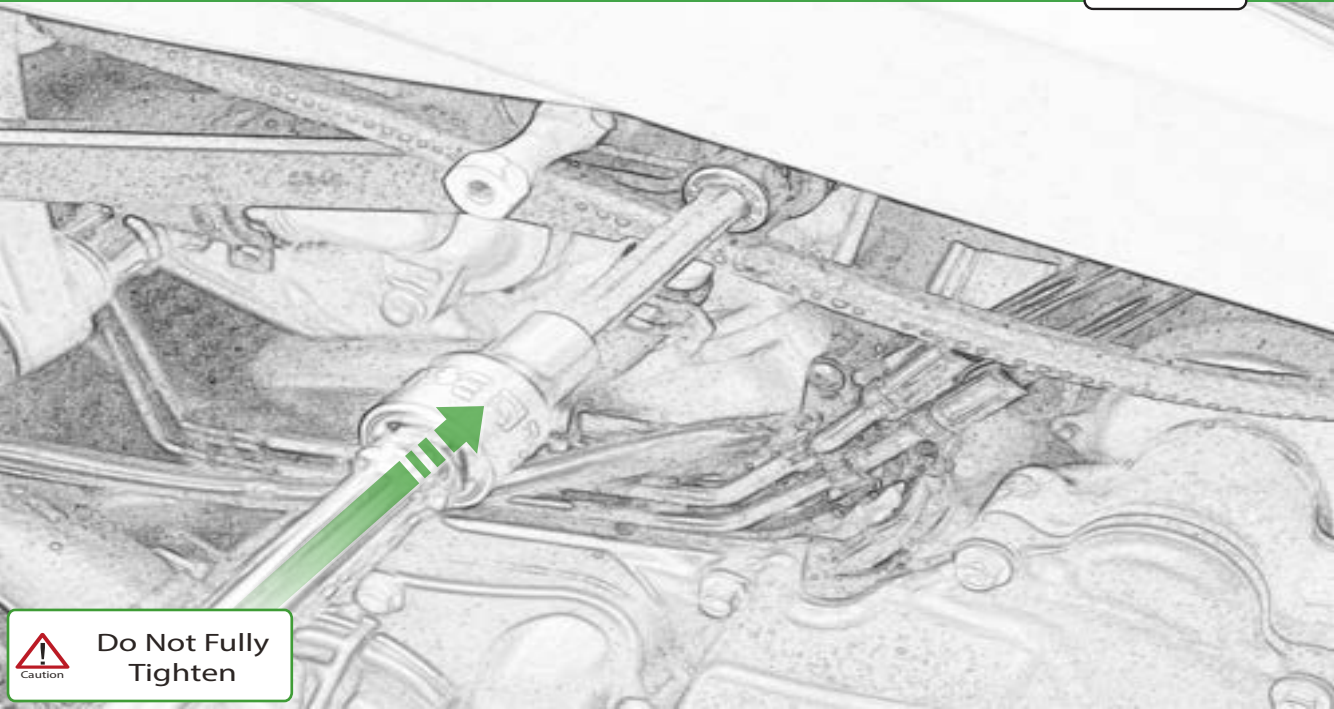

**Do Not Fully
Tighten**

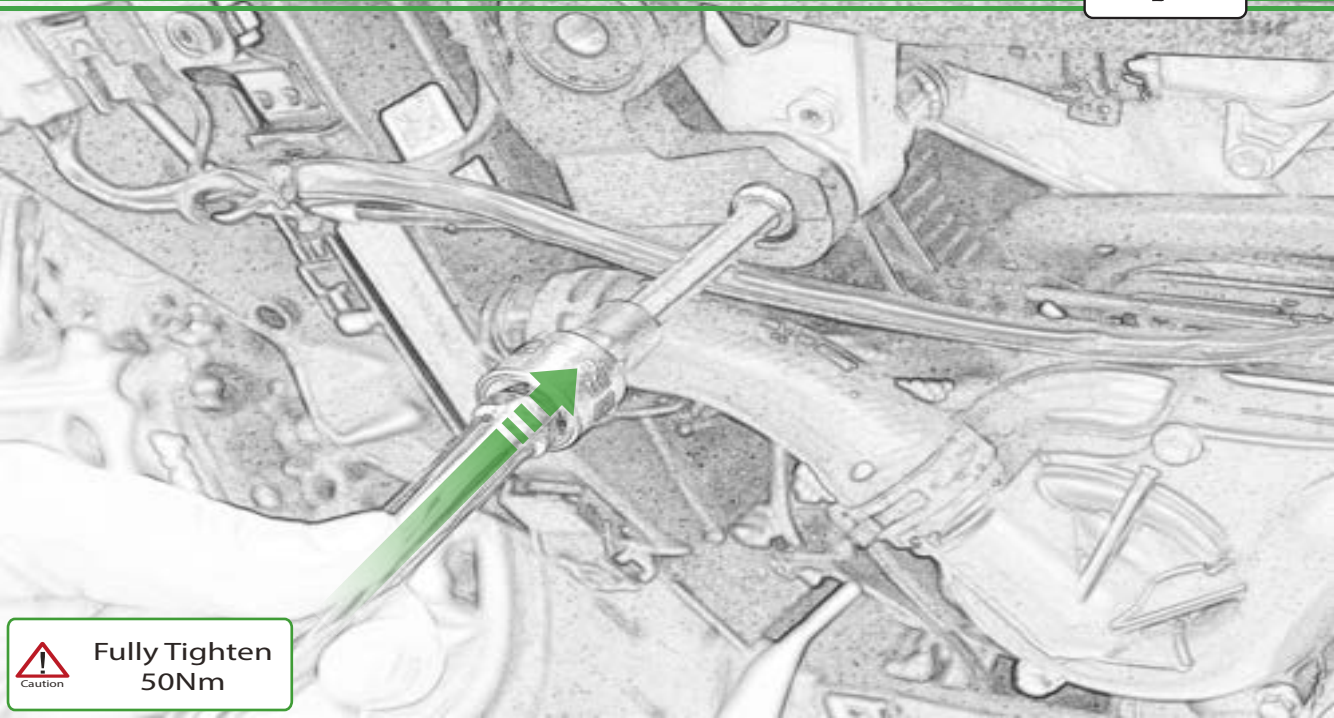

Fully Tighten
50Nm

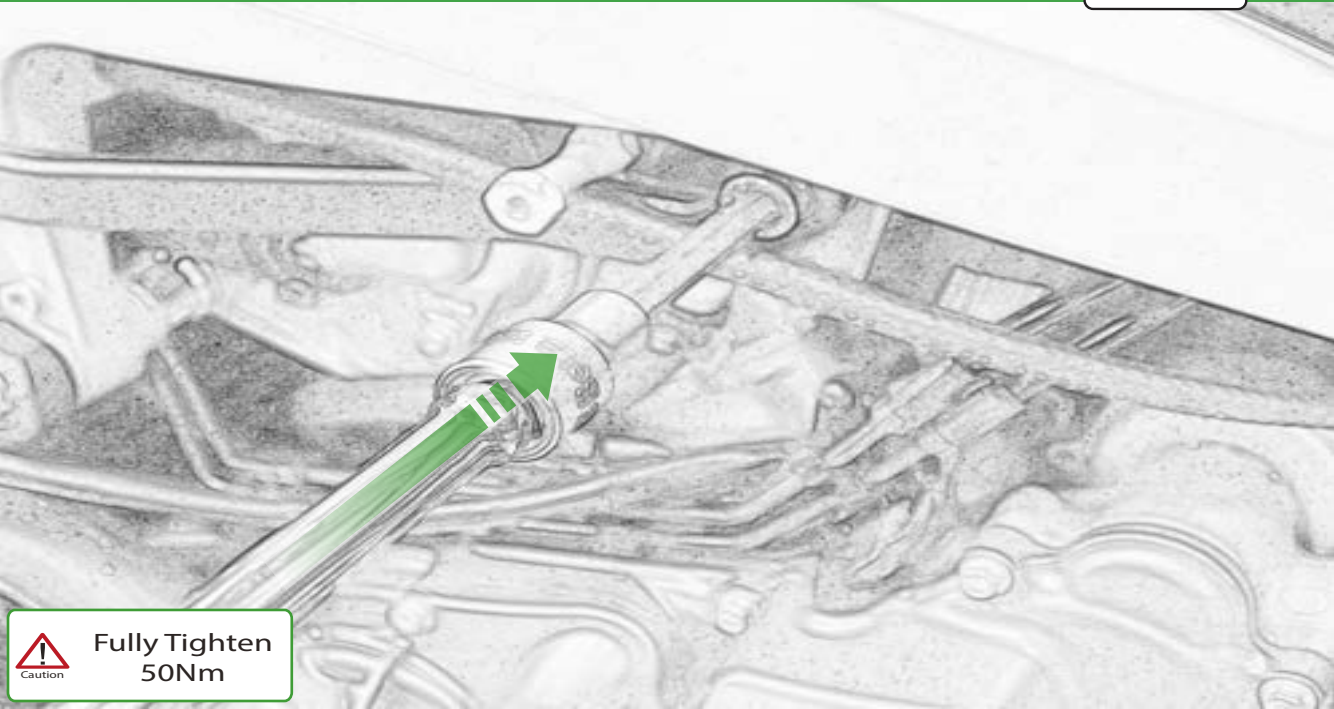



Fully Tighten
50Nm





Reverse Stages


14 - 1

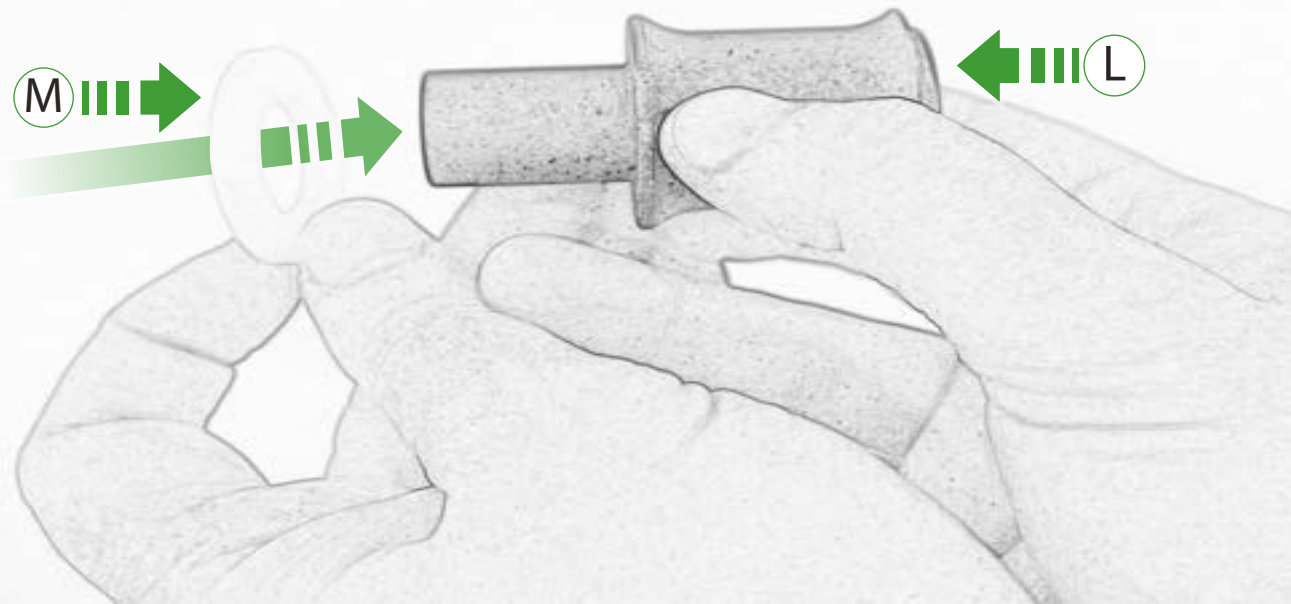

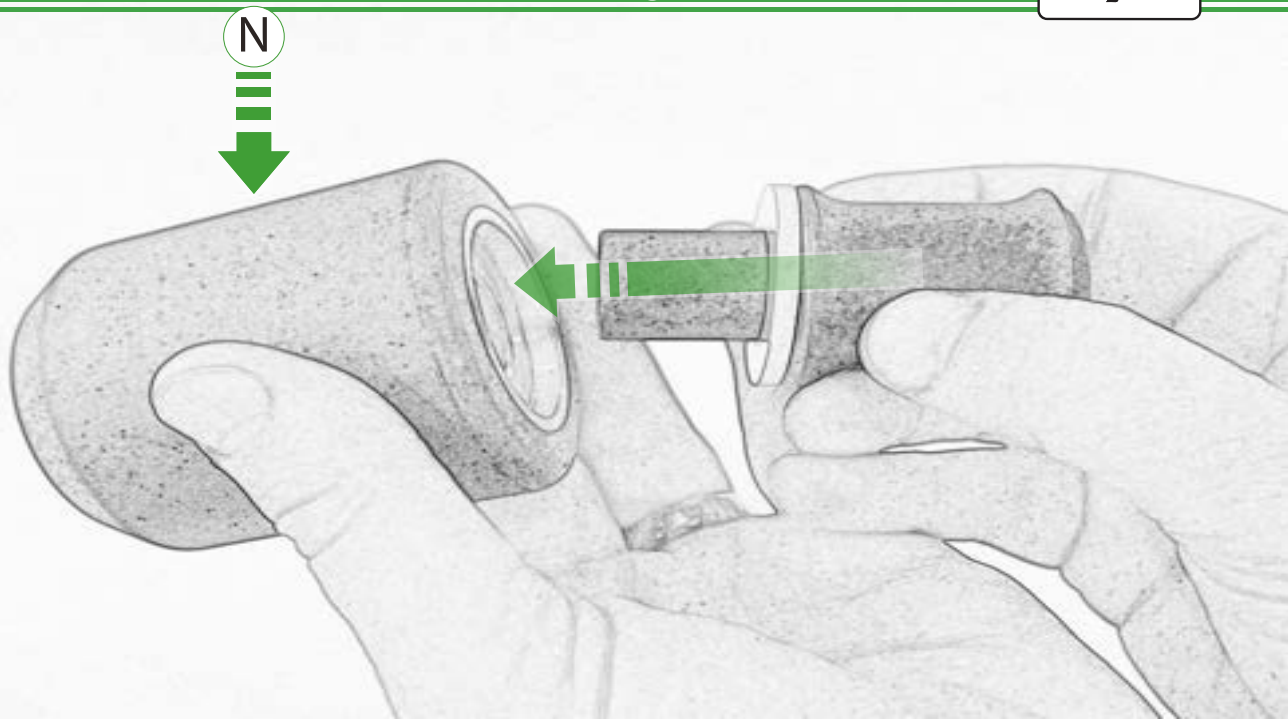

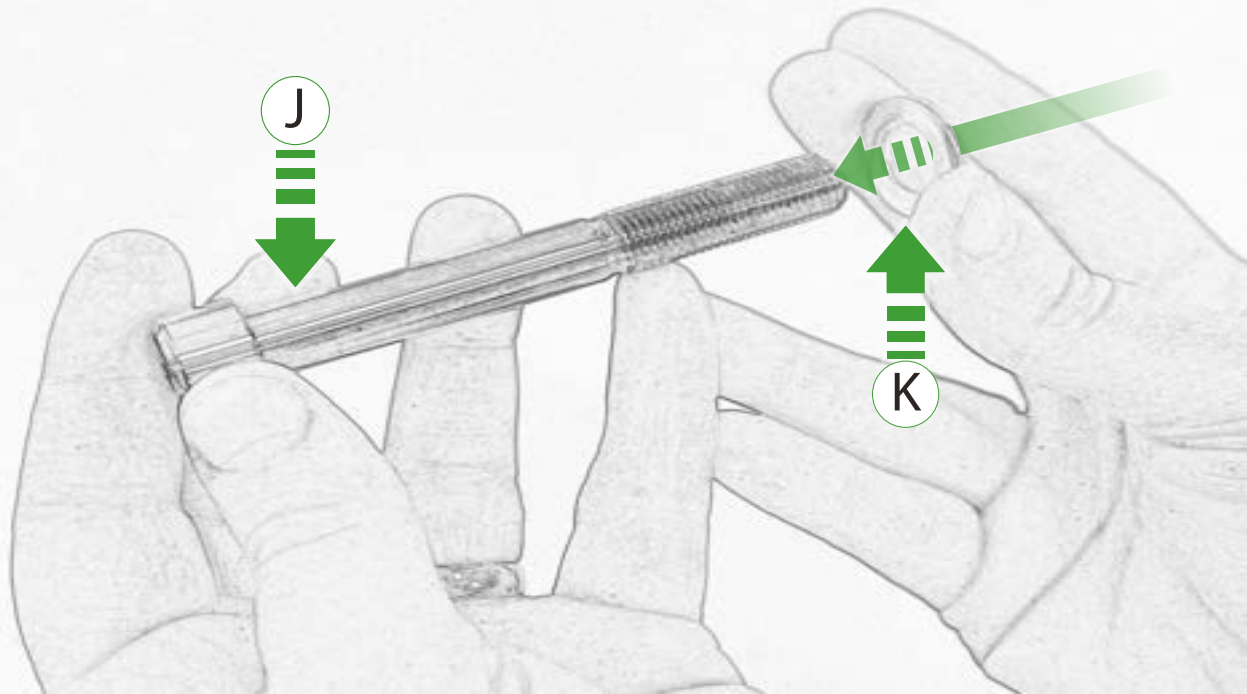

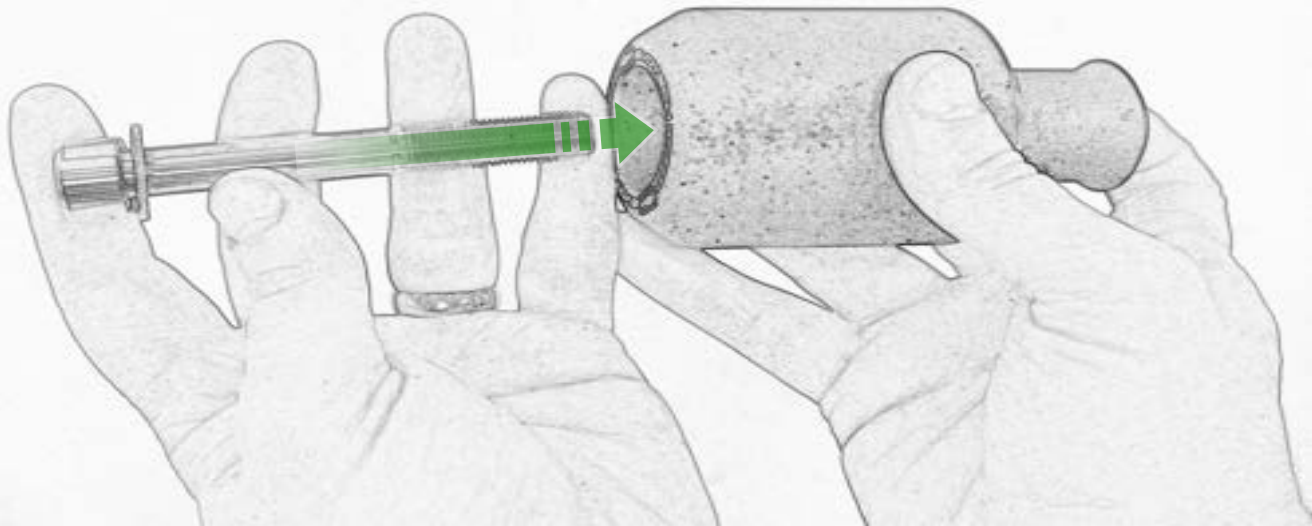

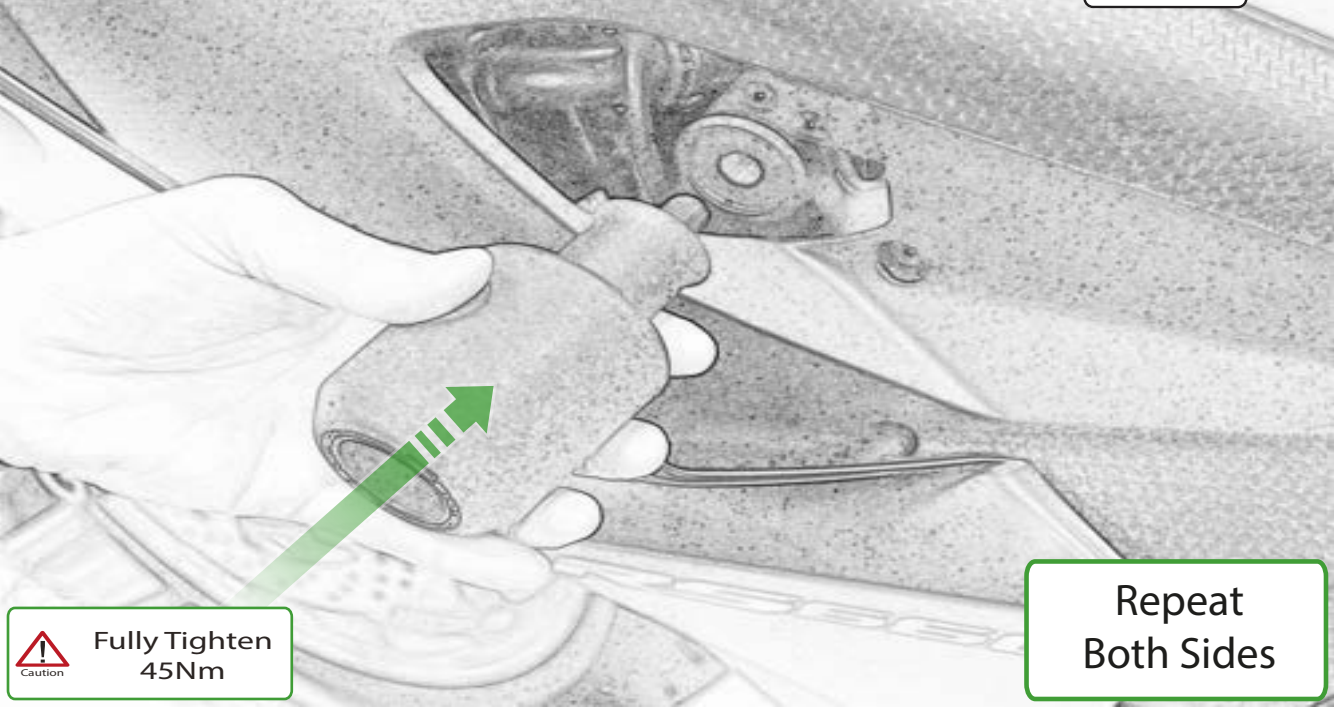

Fully Tighten
45Nm

Repeat
Both Sides



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com