



EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Honda CB1000R Neo Sports Cafe
Rear Spindle Bobbin Instructions



Kit Contents PRN015670


- Ⓐ 1 x M8 Shaft
- Ⓑ 1 x Hubstop
- Ⓒ 1 x L/H Spacer
- Ⓓ 1 x Bobbin Head
- Ⓔ 2 x M8 Washer
- Ⓕ 2 x M8 Nut

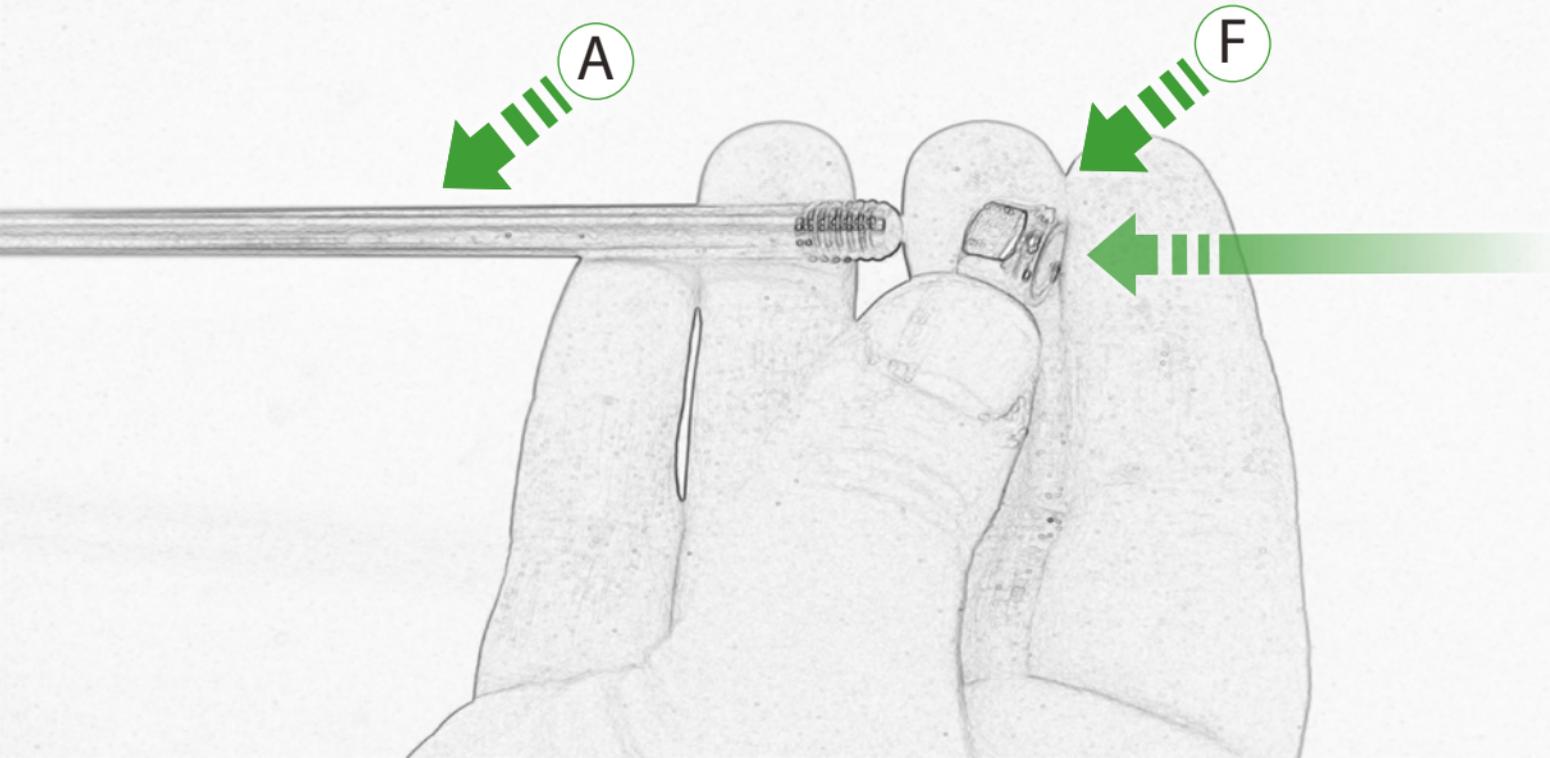


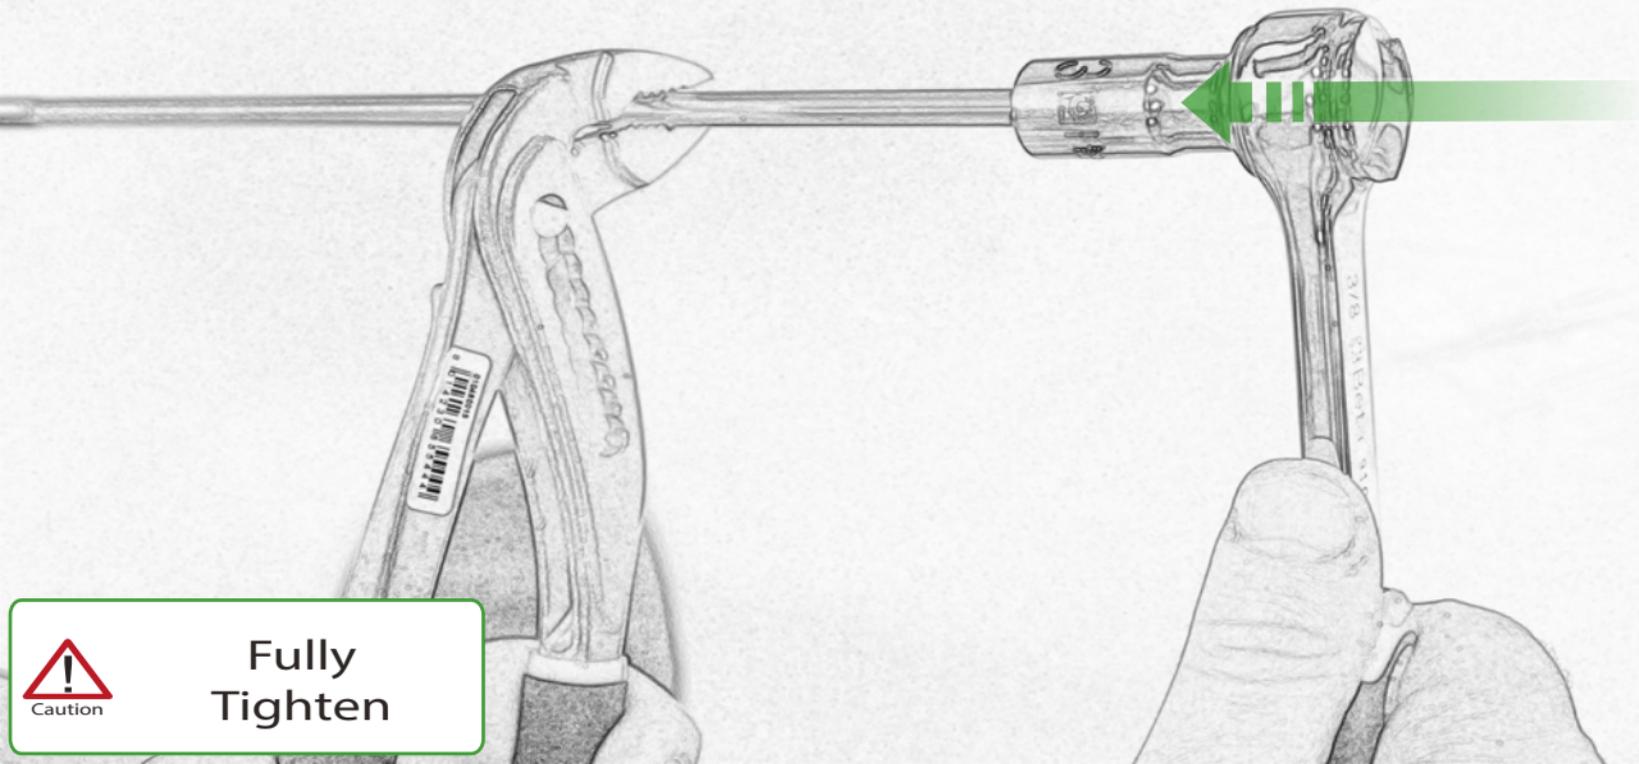



Caution


Fully
Tighten

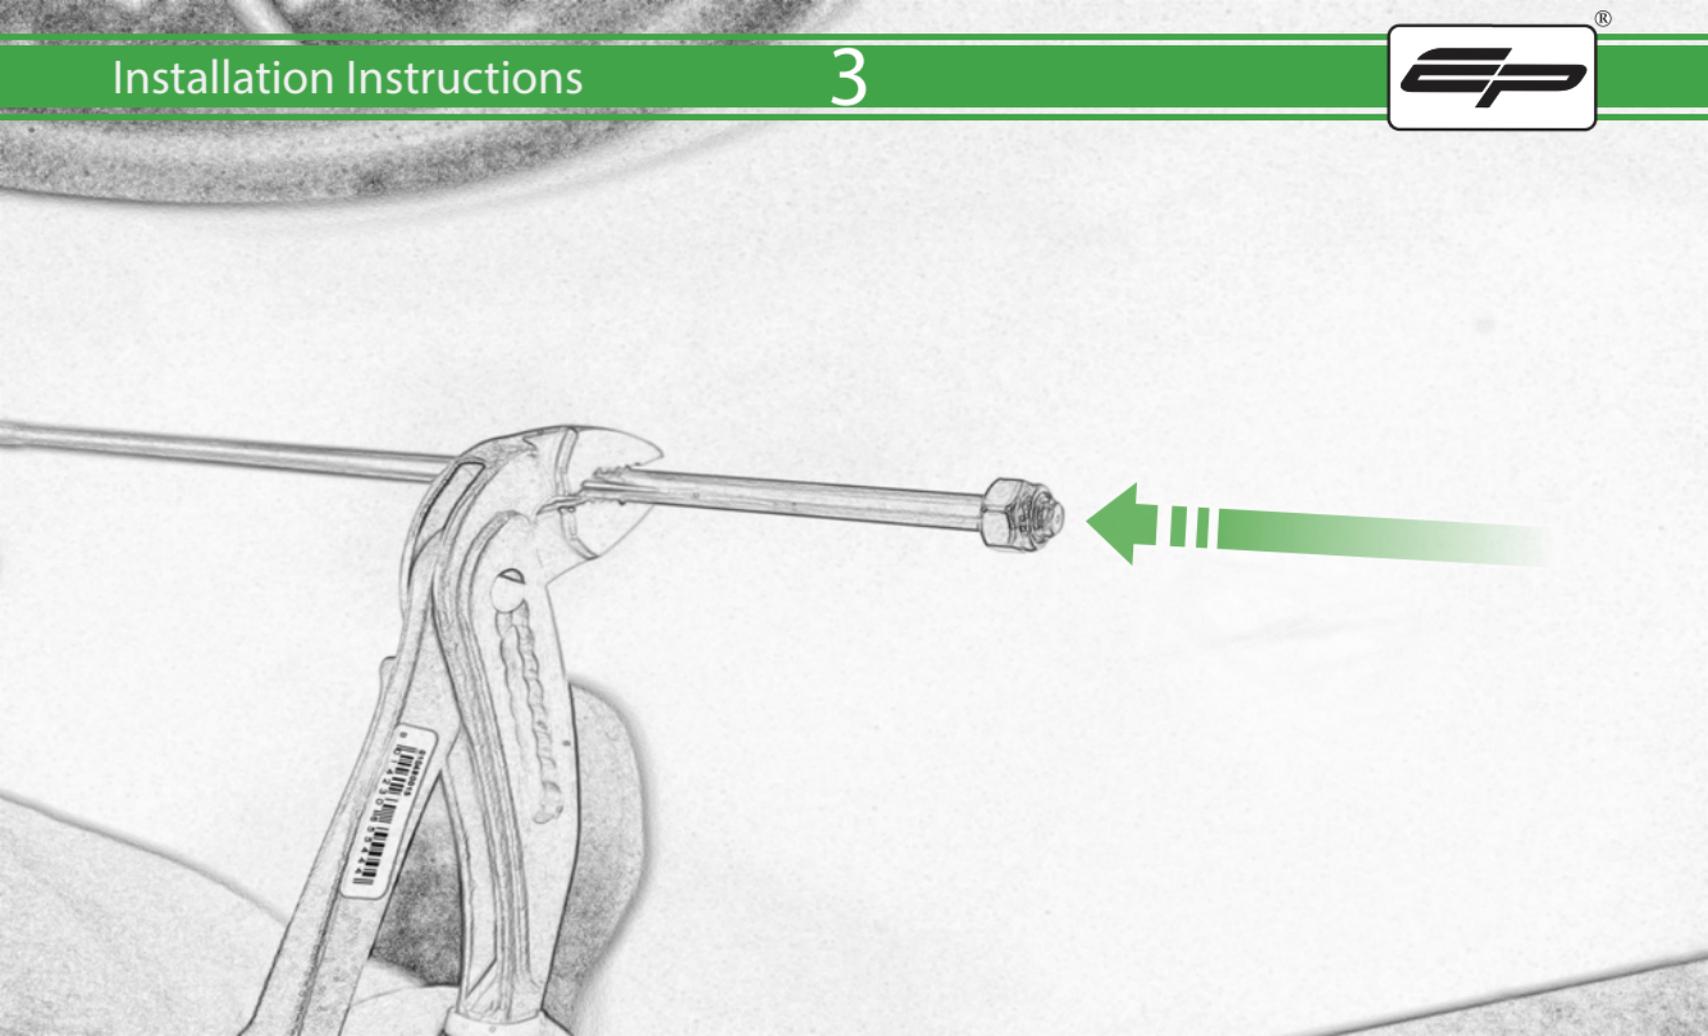


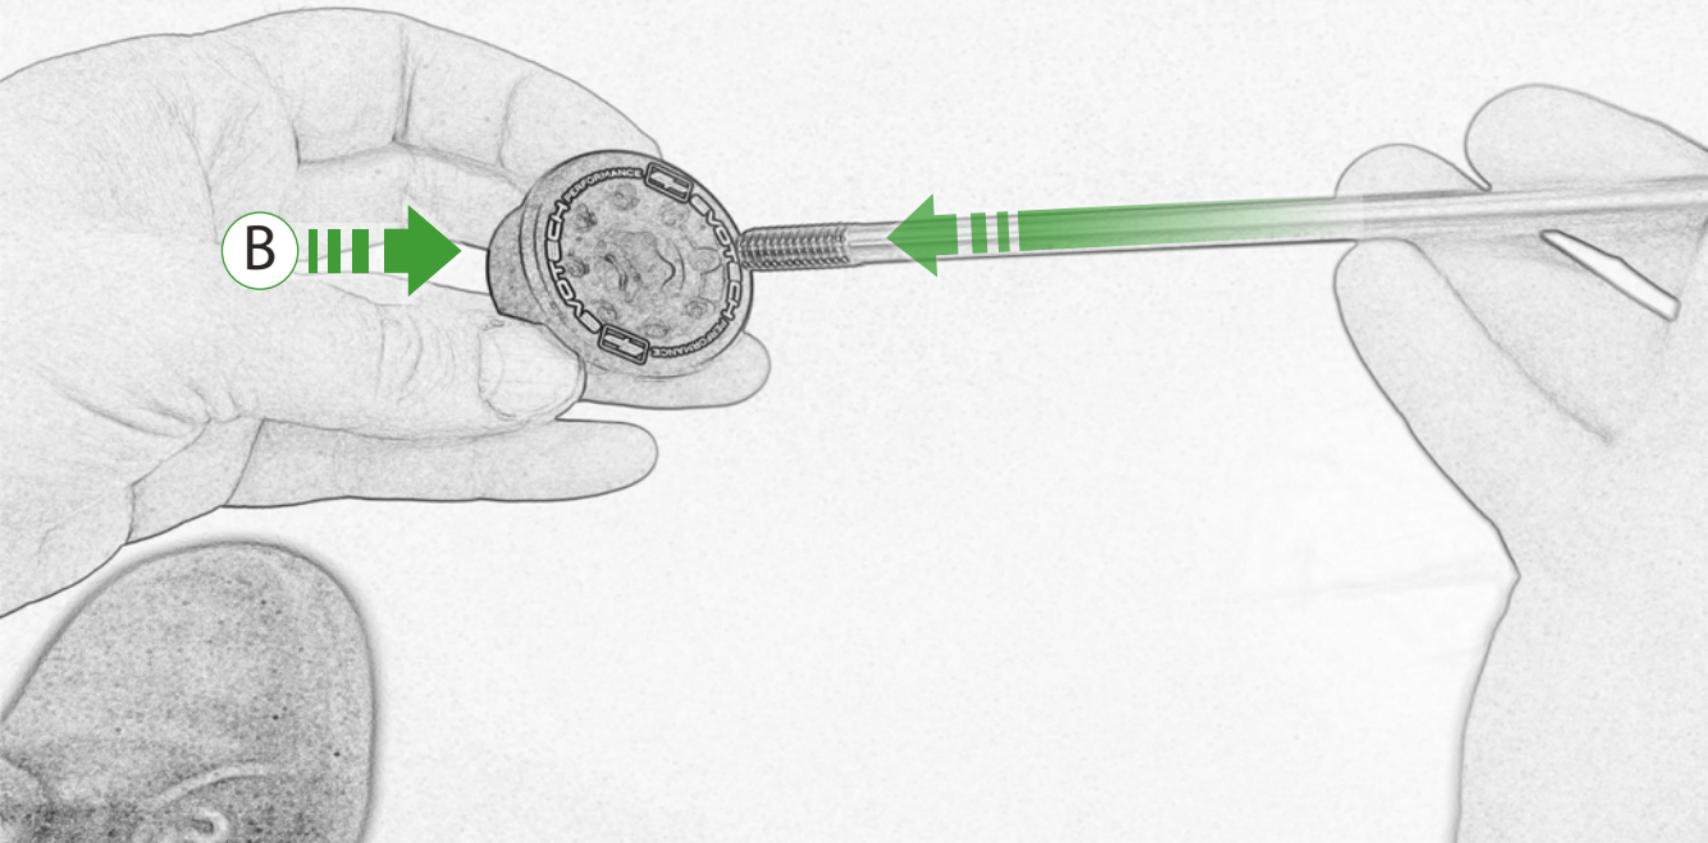


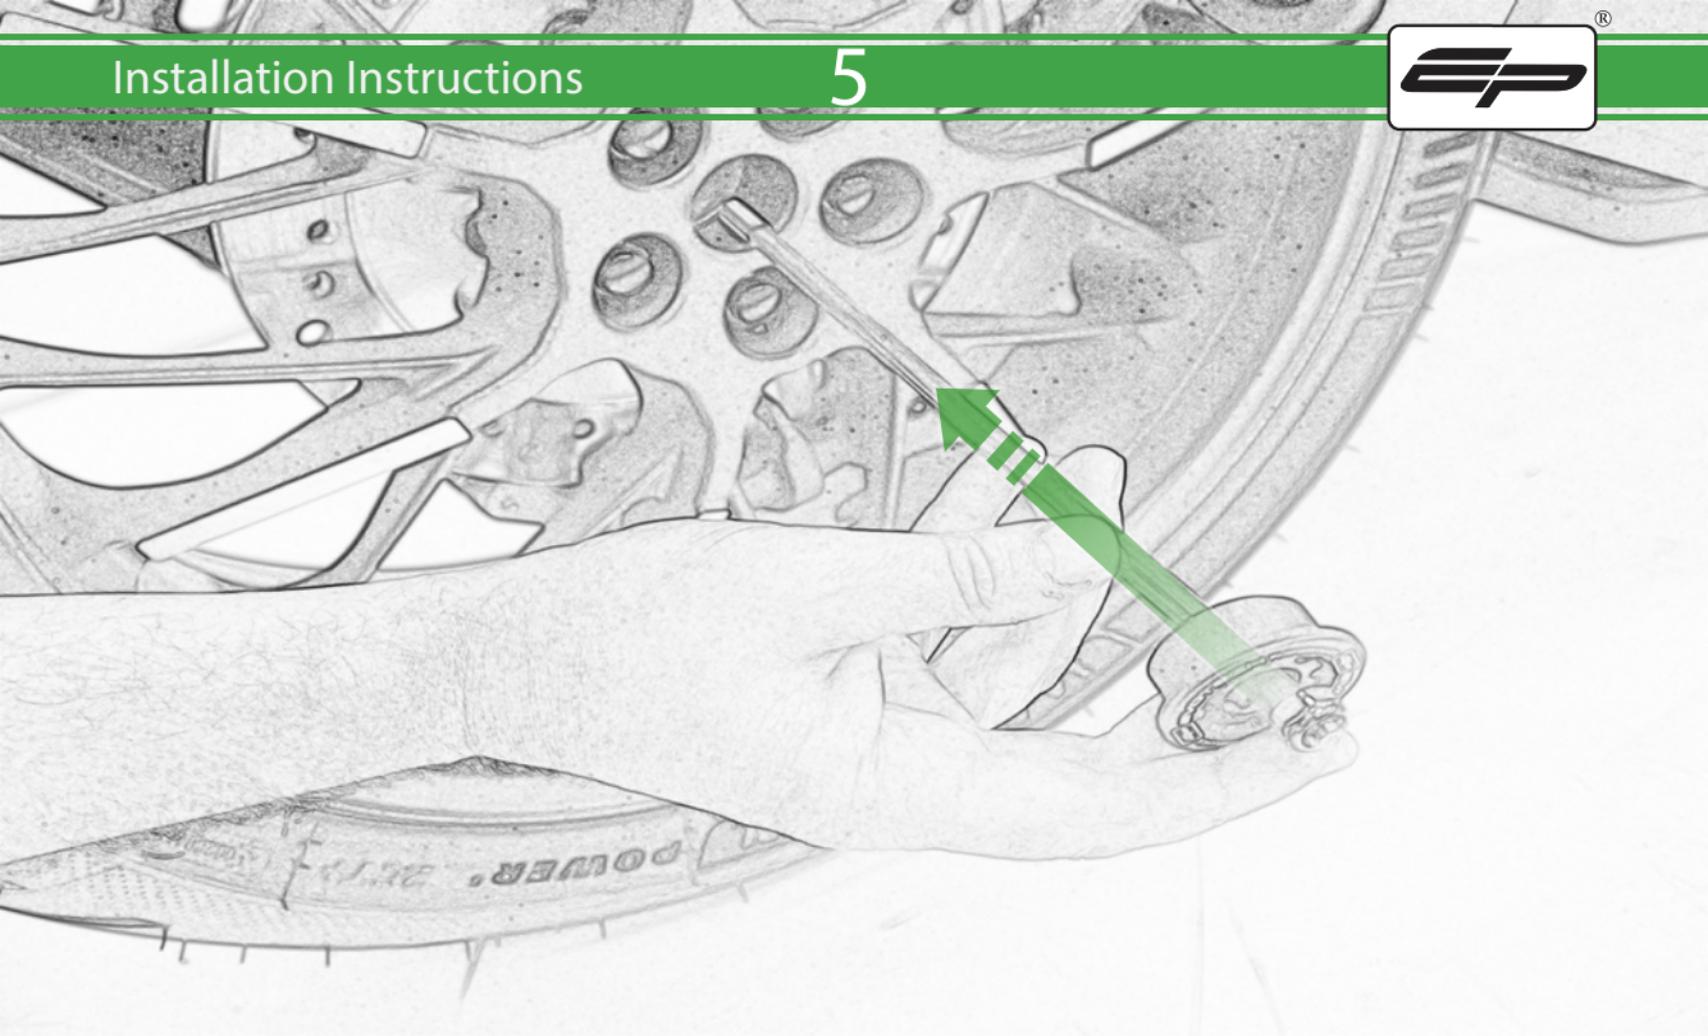

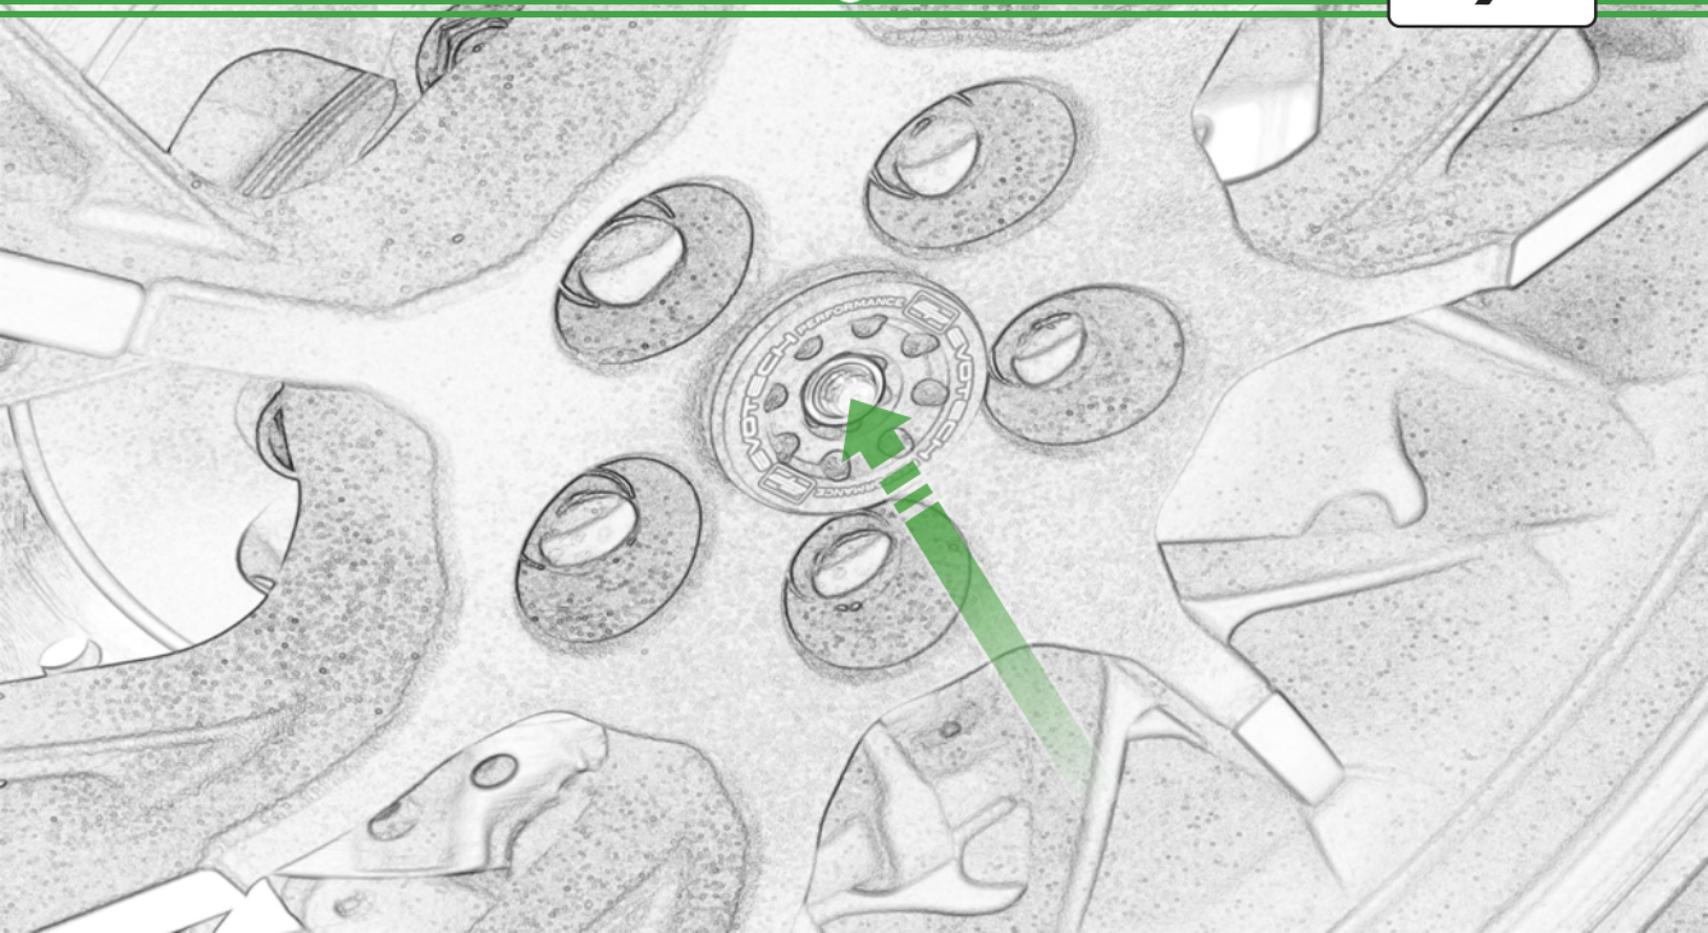

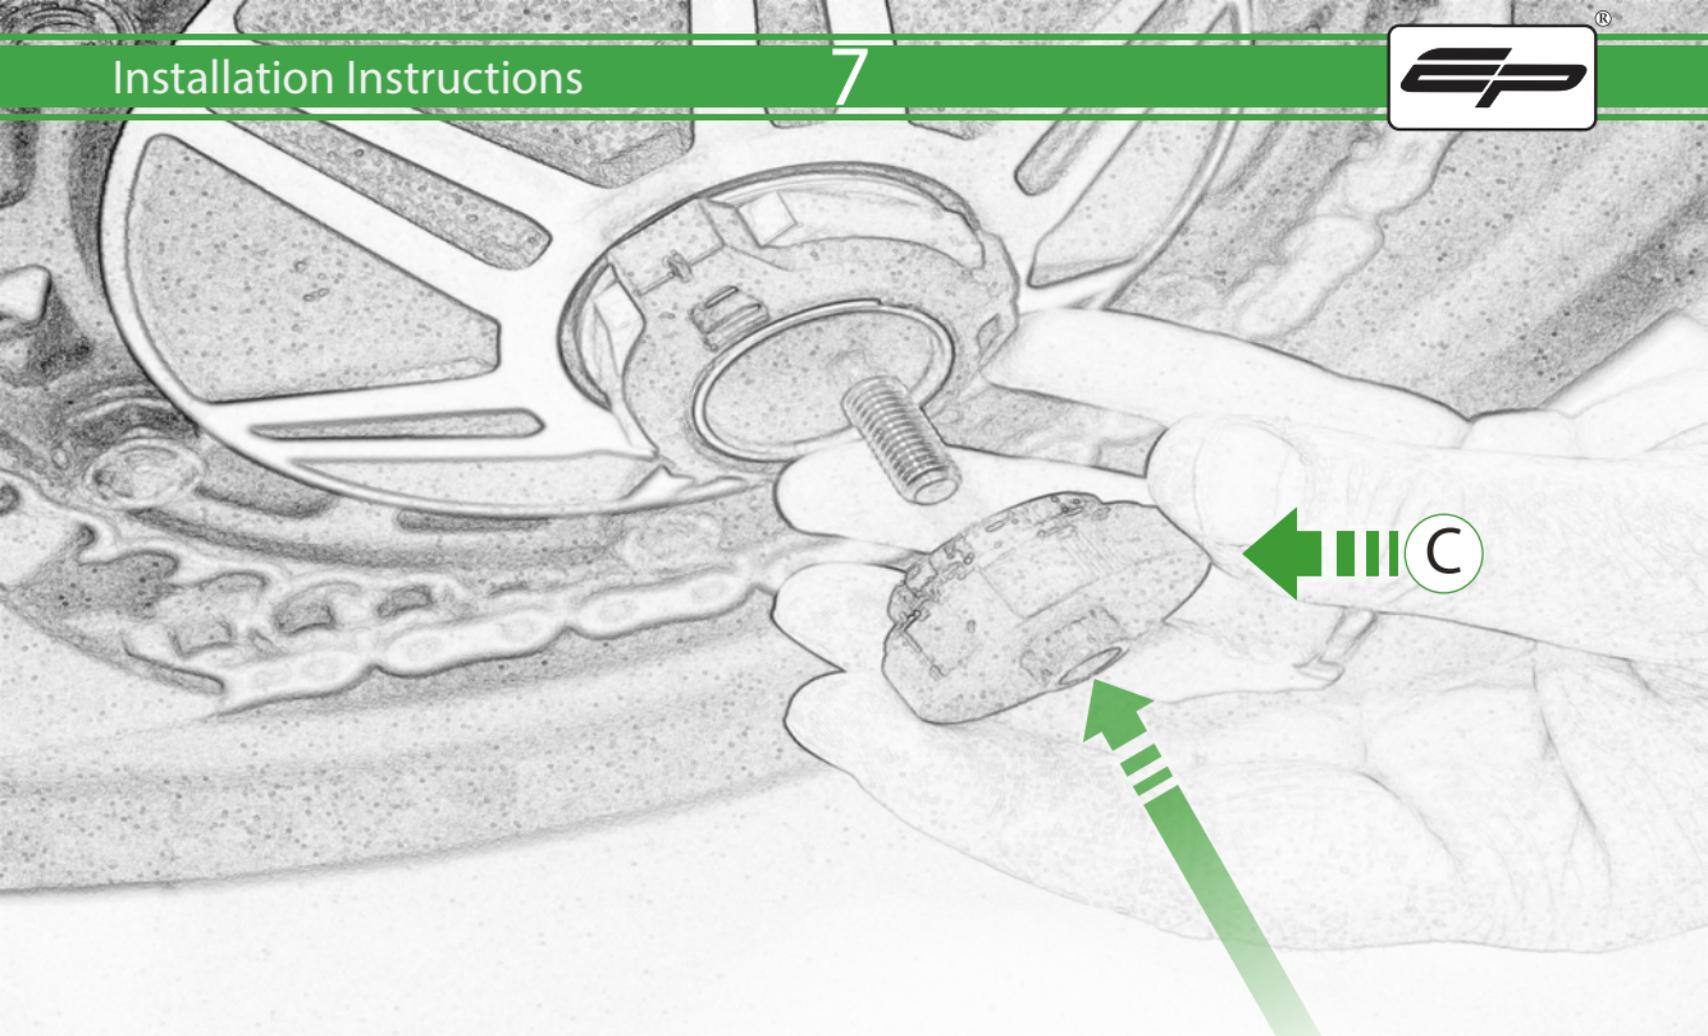


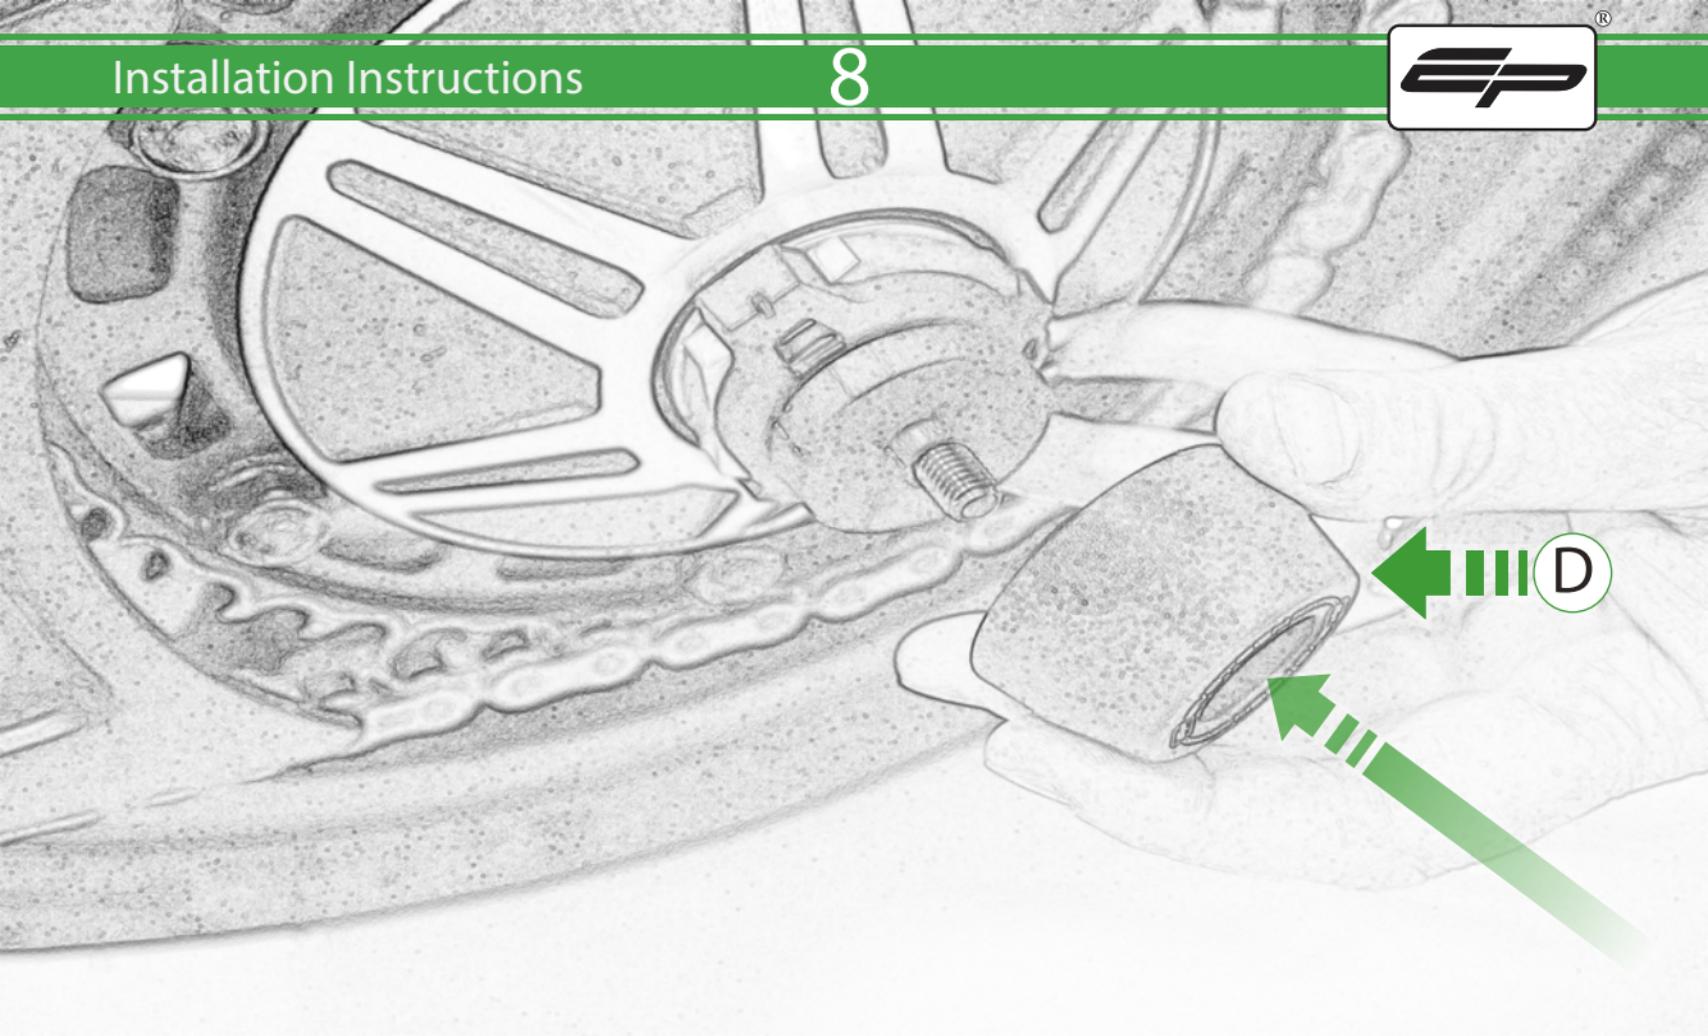


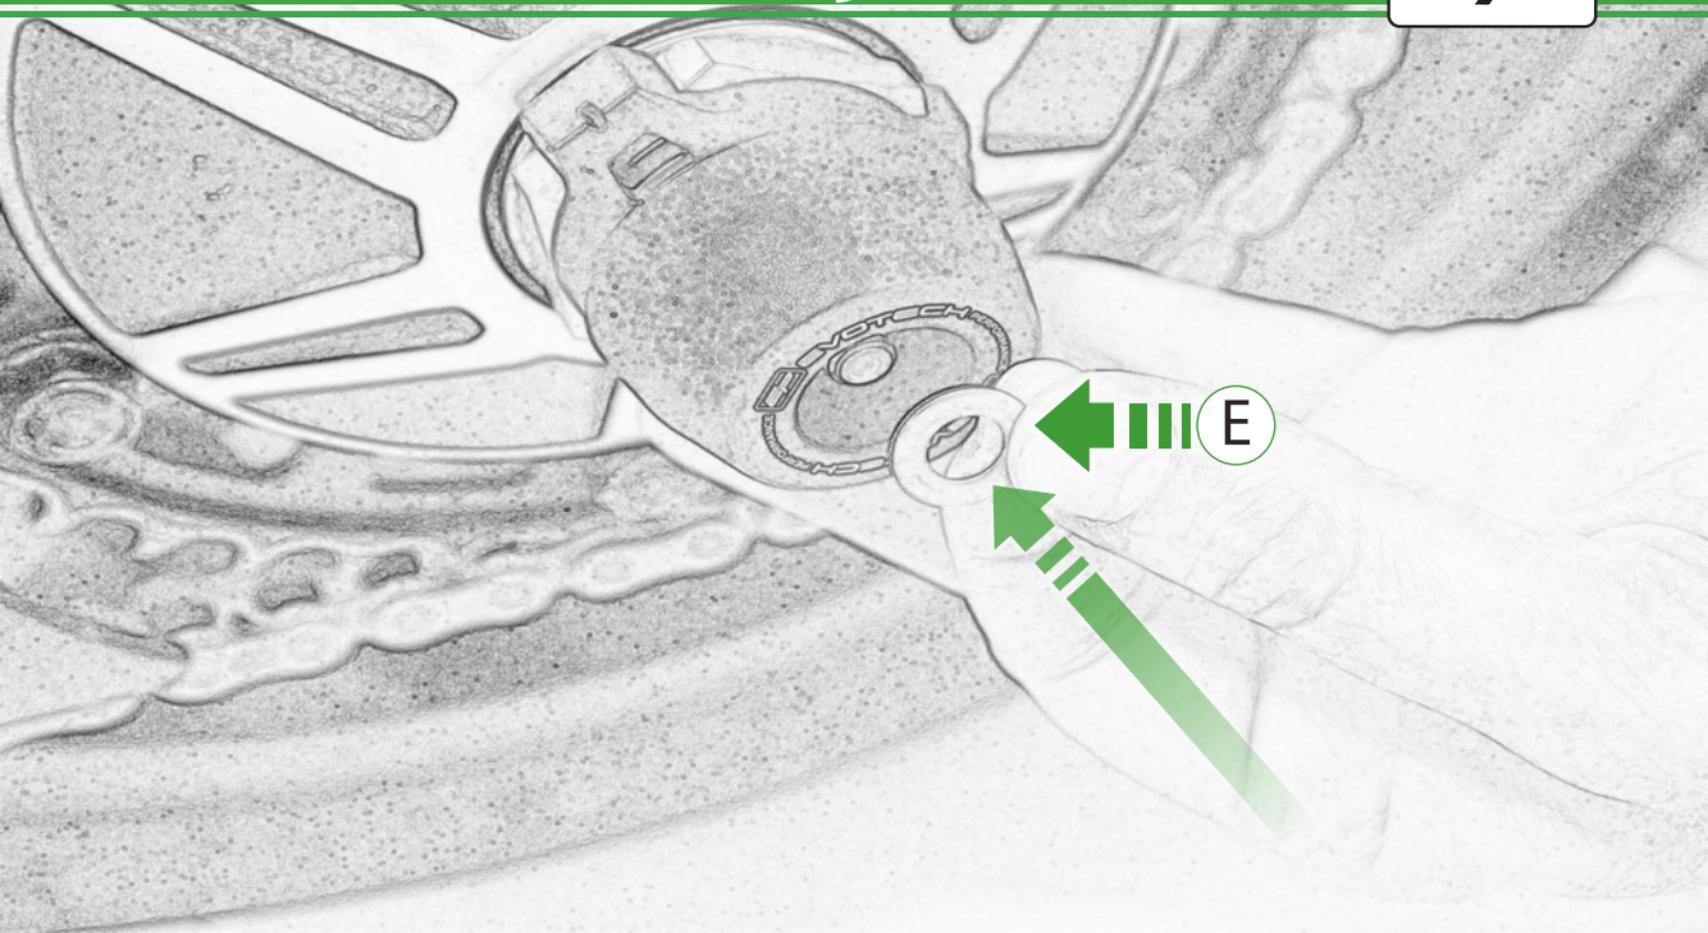

← E



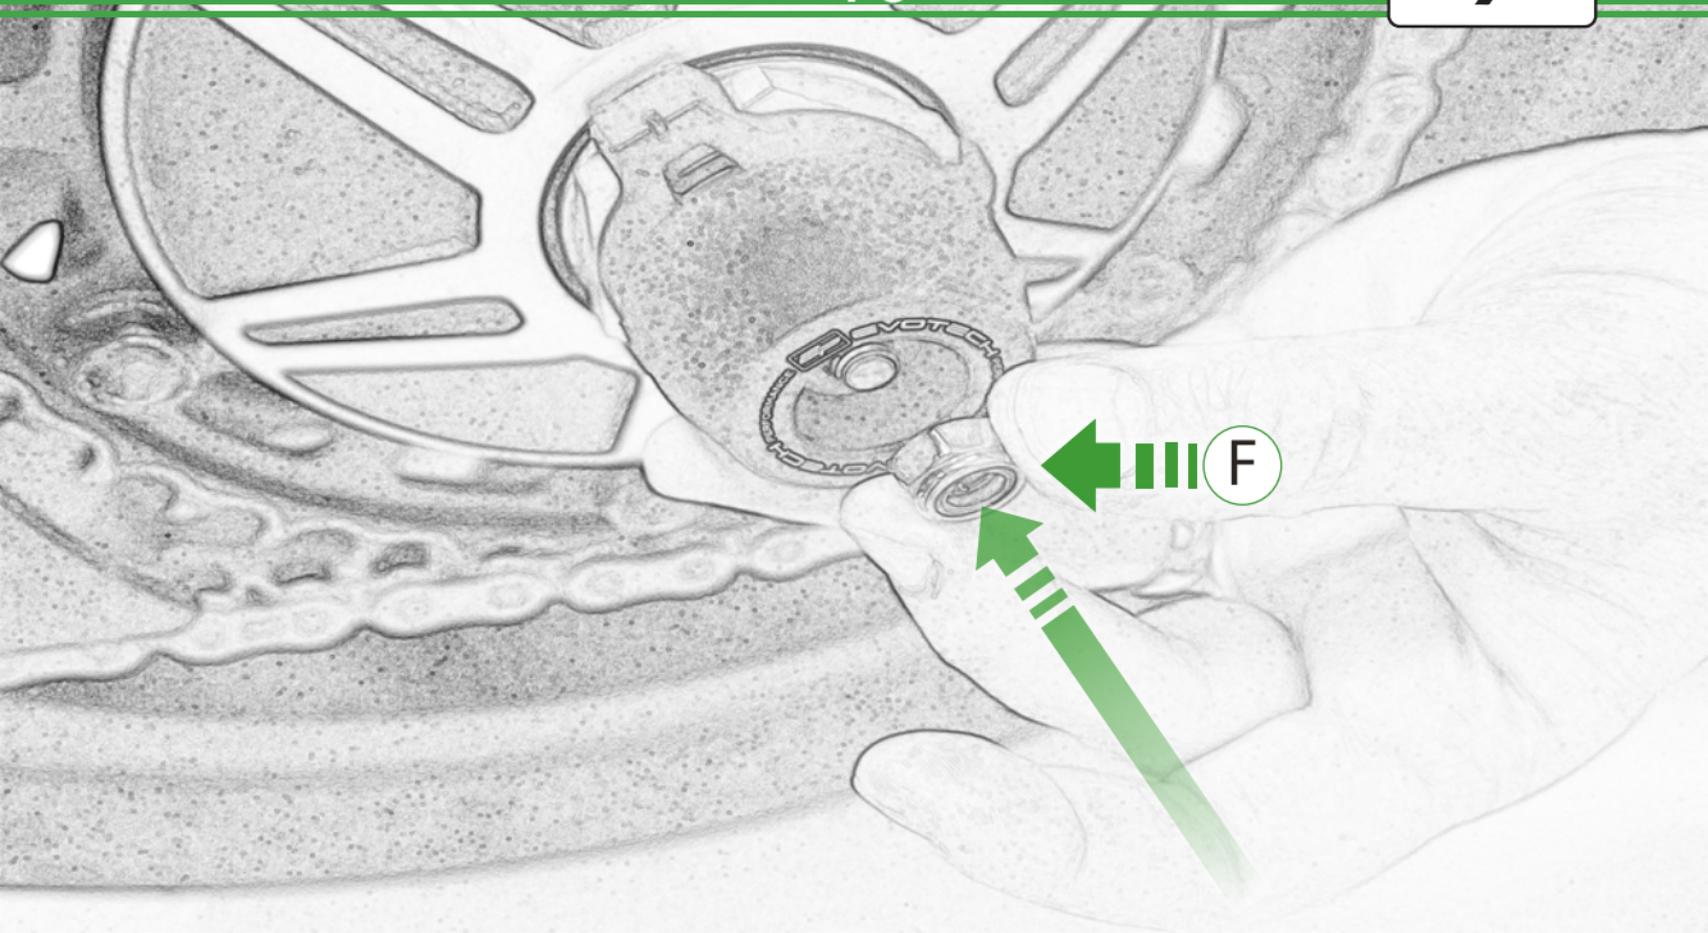

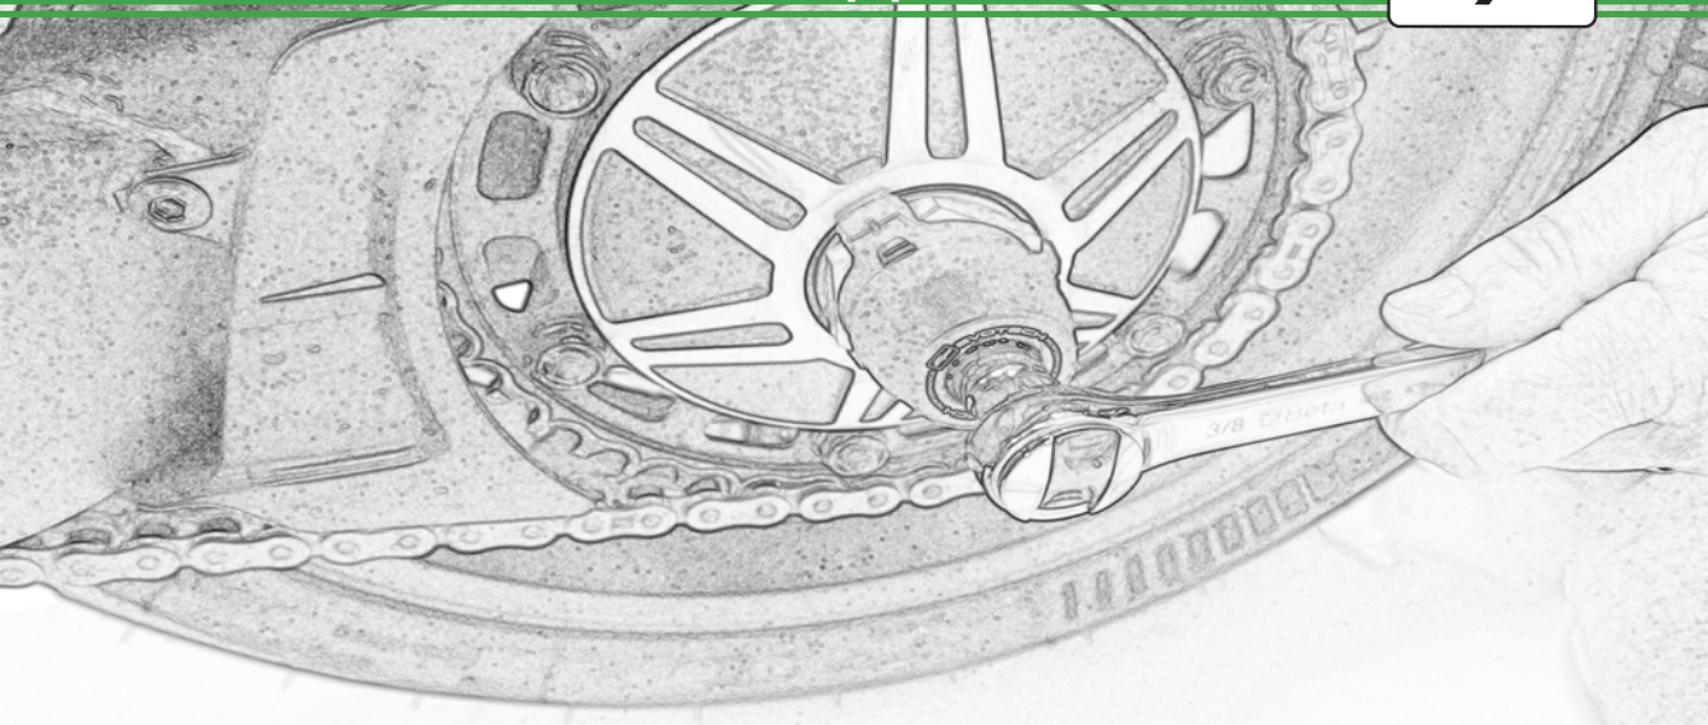

Caution

Fully Tighten
8Nm



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com