21577 Honda CB750 Hornet Belly Pan Fitting Instructions

Kit Includes:

1X	**C21577**	Belly Pan (2 parts)
2X	**CFK21577A + B**	Brackets (2 parts)
1X	**CFK21577C**	Centre Panel
4X	**CBOLM40002**	M4 x 12mm Bolt
4X	**CWASM40001**	M4 Washer
4X	**CNUTM40002**	M4 Nyloc Nut
4X	**CBOLM60008**	M6 x 16mm Bolt
4X	**CWASM60003**	M6 Washer
4X	**CPNUT0001** Pre-fitted by Pyramid	Aluminium Nut
1X	**CBRA2850**	Kardesign x Pyramid Decal (150mm x 25mm)

Note: do not overtighten the M4 fittings at the front of the belly pan assembly
The nyloc nuts supplied will not loosen once the nylon is engaged

Attach the brackets using the OEM bolts on the bike (see **Fig 1 & 2**).

Assemble the belly pan using the centre panel and M4 fittings provided (see **Fig 3**).

Attach the belly pan to the brackets using the M6 x 16mm bolts and M6 washers supplied.

Check fixings periodically.

Fig 1

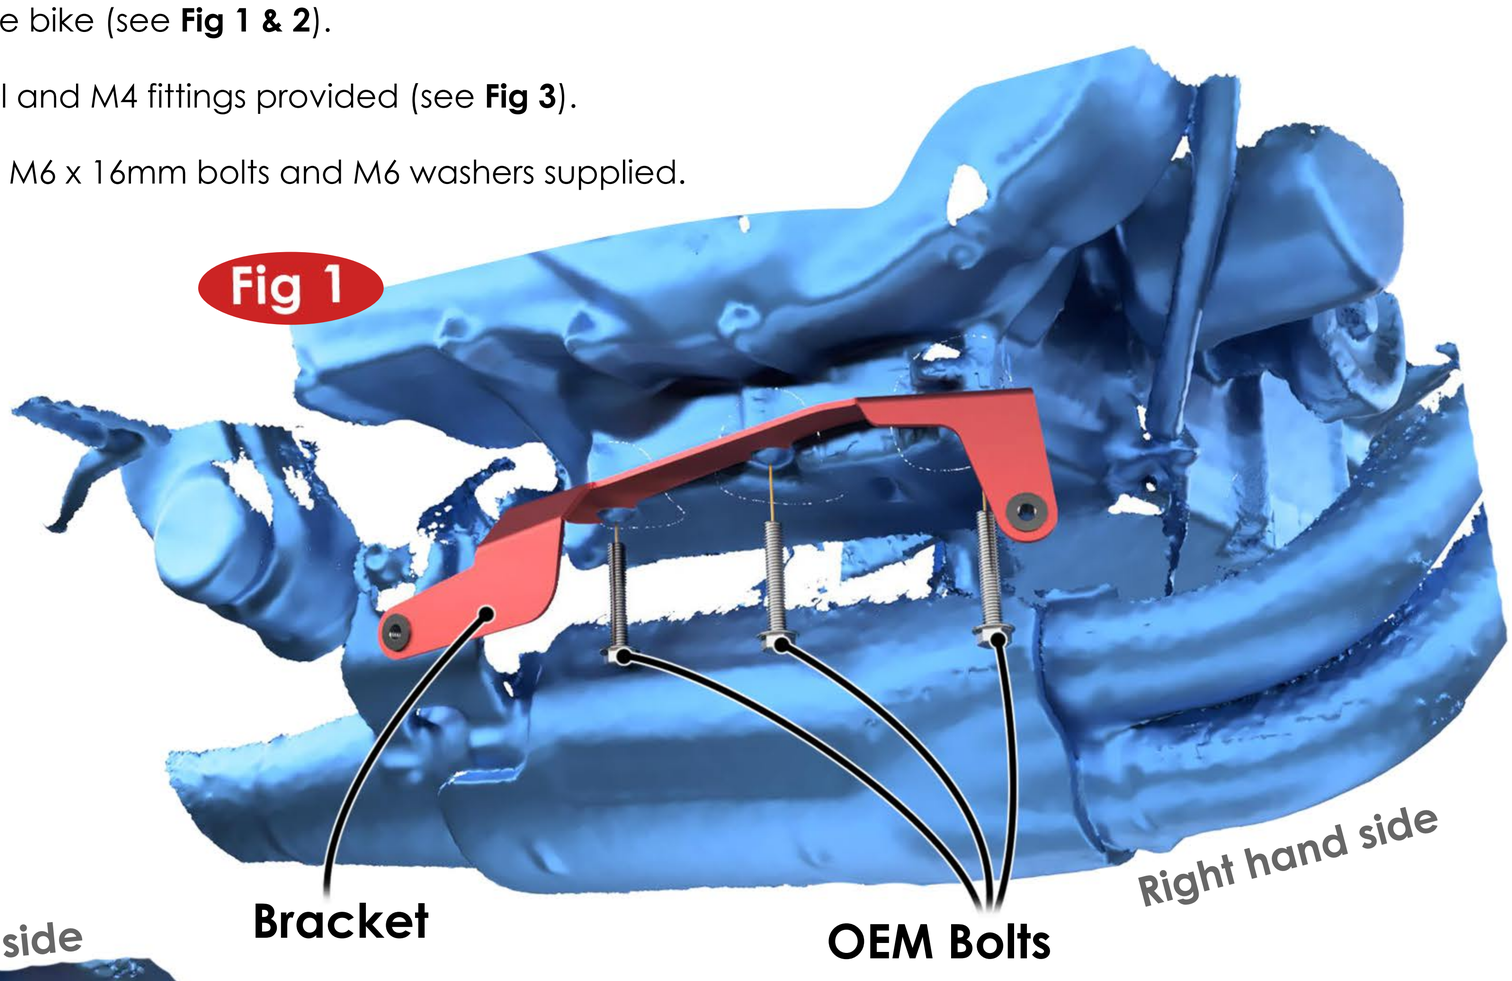


Fig 2


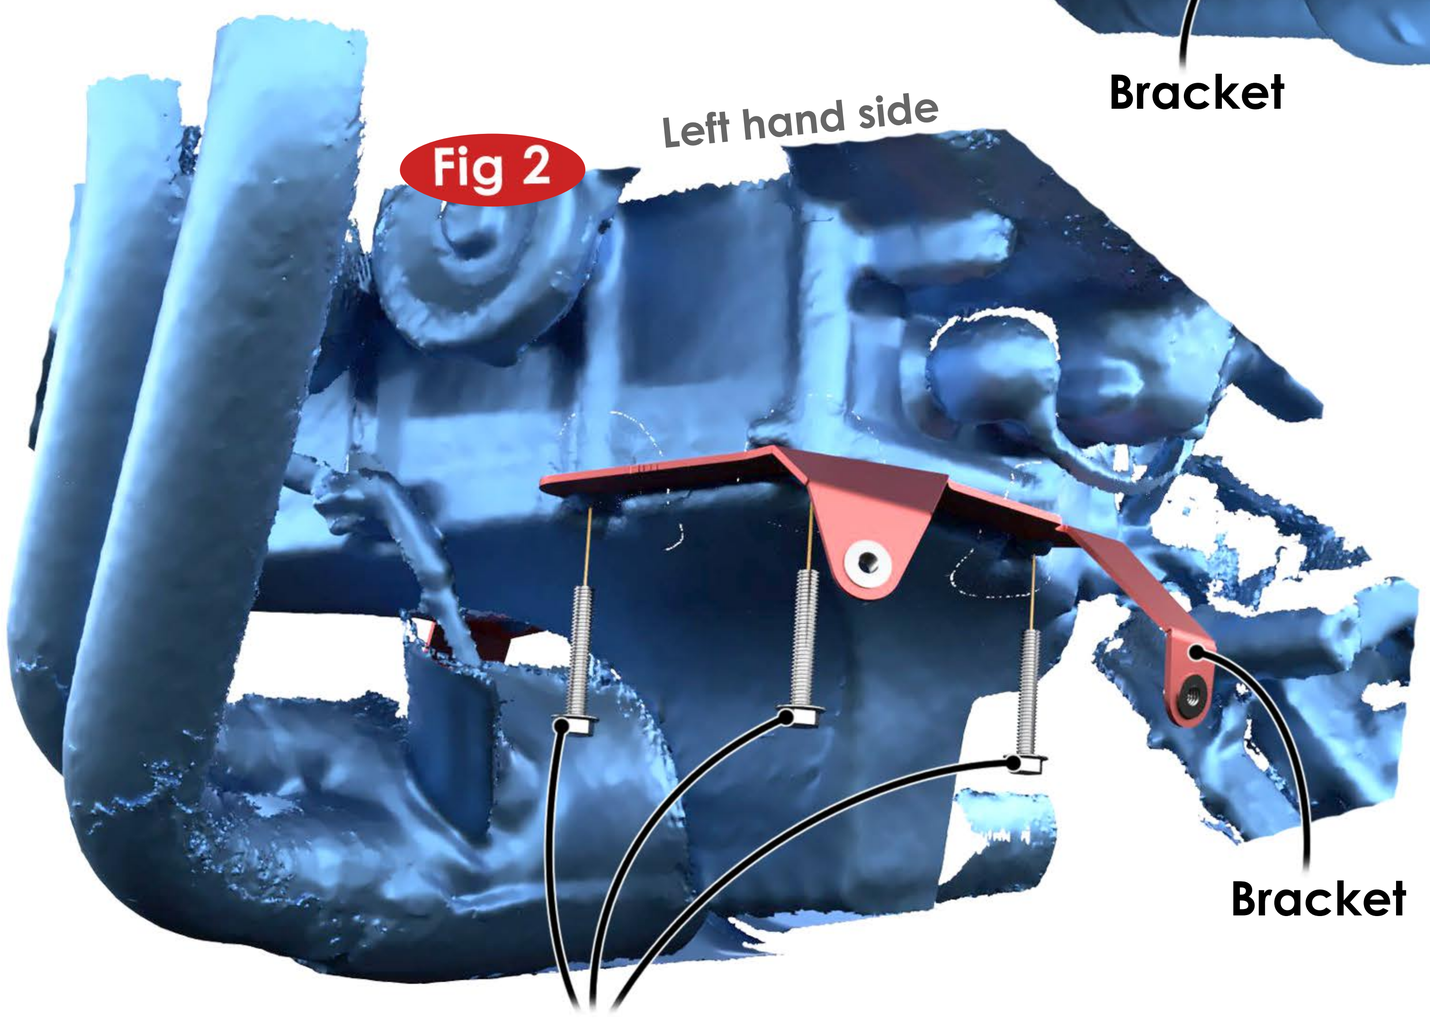


Fig 3

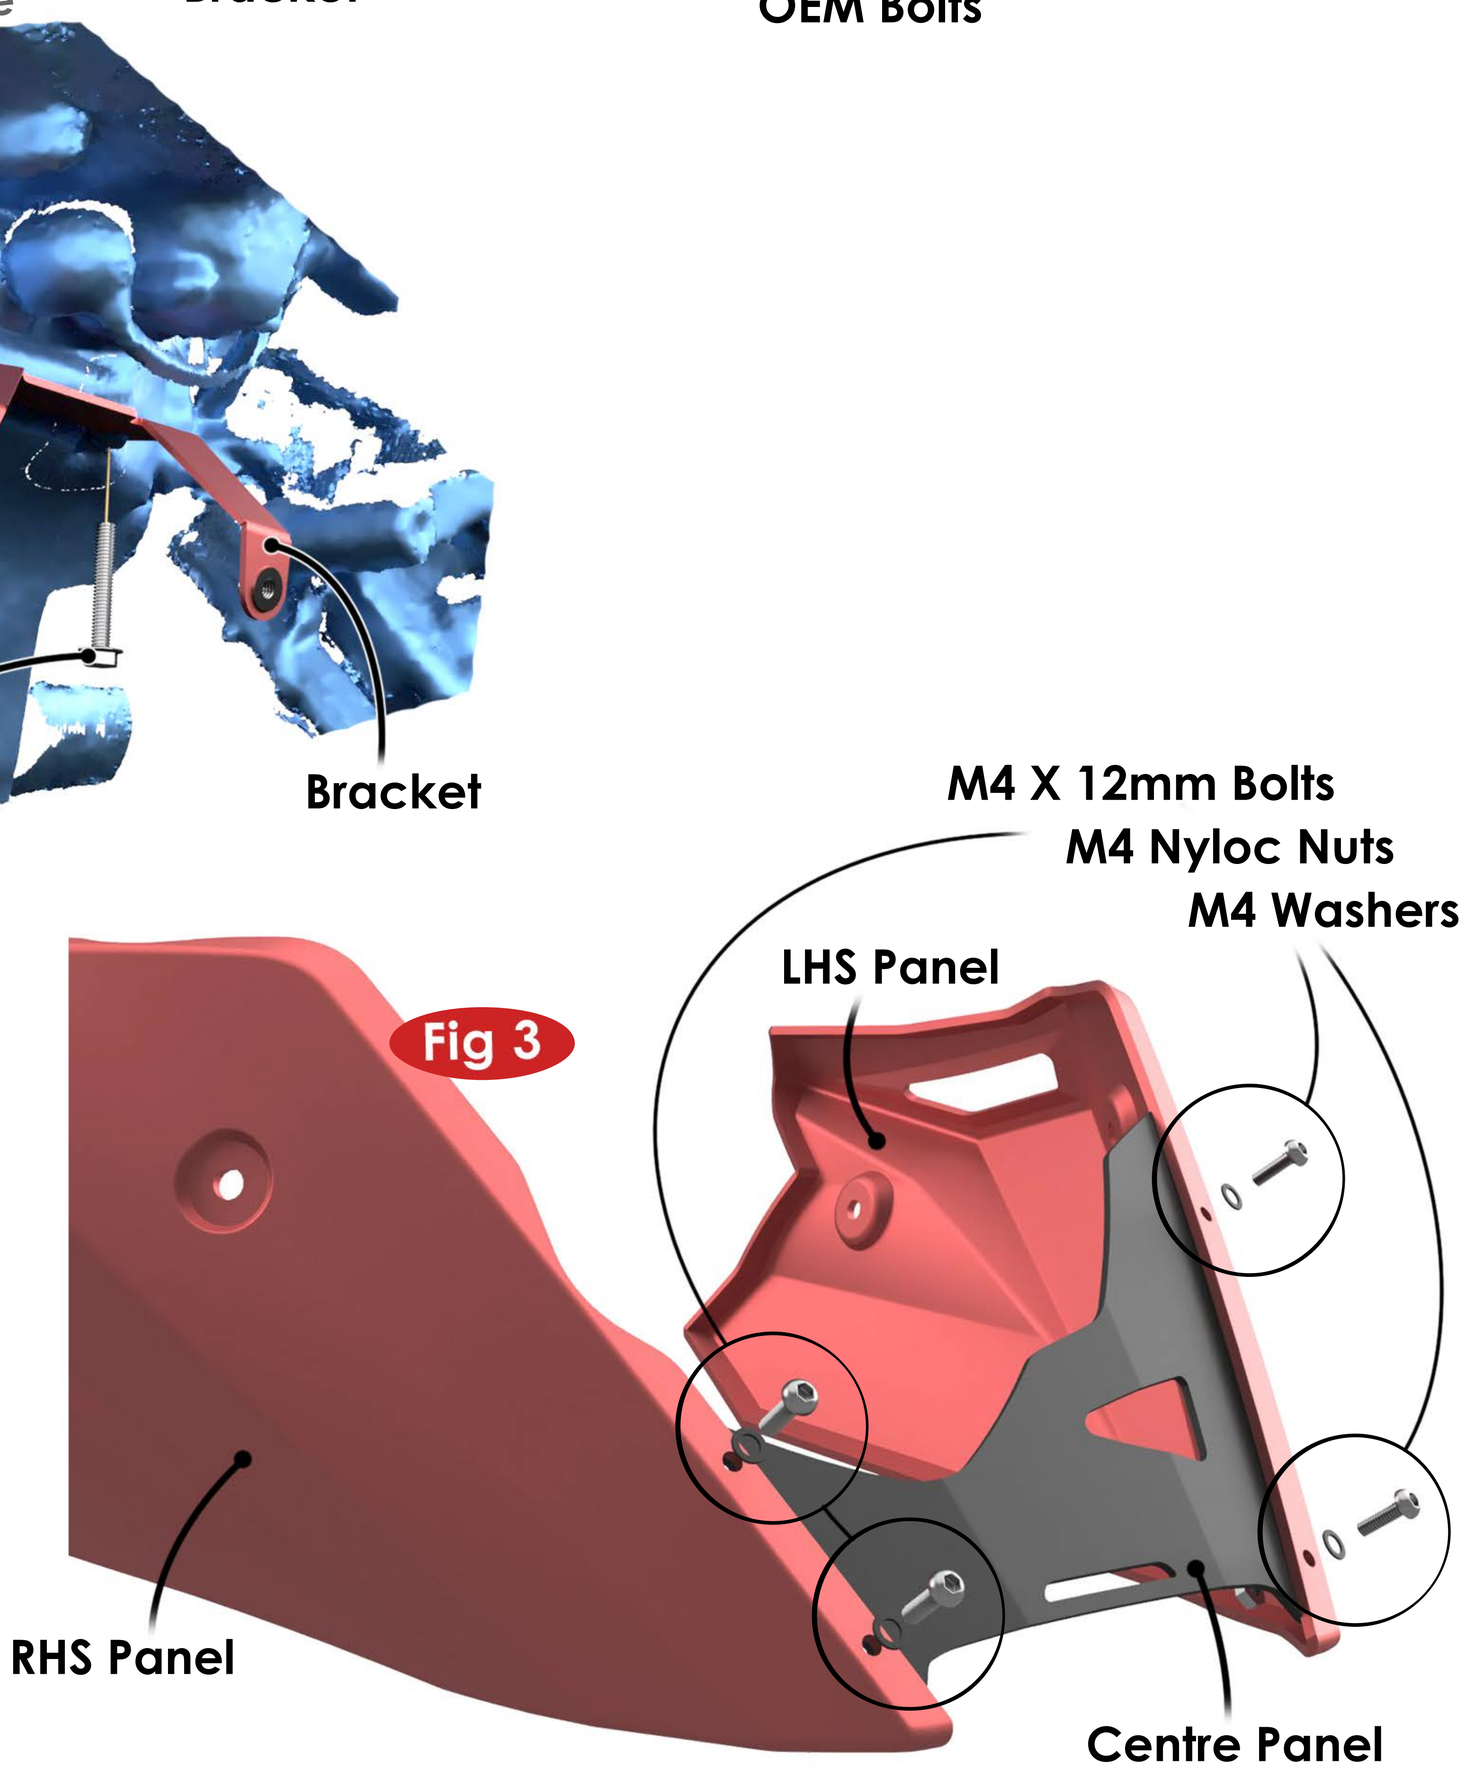

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!