22155G Yamaha MT-10 SP Belly Pan Fitting Instructions

Kit Includes:

1X	Panels (pair + centre part)
4X	Brackets
2X	Metal Netting 200mm X 80mm
2X	M6 Plastic Washers
2X	M6 Nyloc Nuts
3X	M6 X 20mm Bolts
2X	M6 X 15mm Bolts
1X	M6 X 35mm Bolt
1X	M6 X 15mm Plastic Spacer
2X	M6 Lugnut
4X	Grommets
150mm	3M Tape

- Metal Netting (optional) can be fitted using silicone as shown in **Fig 1**.


- Fit the brackets to the bike as shown in **Fig 2 & 3**.
  Don't tighten fully so that adjustments can be made during later steps.

- Fit the grommets to the Belly Pan. You will need to remove the steel collars temporarily in order to do this. Make sure the flange on the steel collar is facing outwards.

- Assemble the 3 pieces of the Belly Pan using the 3M Tape (pre-attached) and with the M6 X 15mm Bolts, M6 Plastic Washers & M6 Nyloc Nuts.

- The Belly Pan is mounted to brackets 1, 2 & 4 using the M6 X 20mm Bolts. To mount bracket 3, use the M6 X 30mm Bolt & the M6 X 15mm Black Spacer.

- Tighten up all mounting points and check clearance of the Belly Pan around the bike.

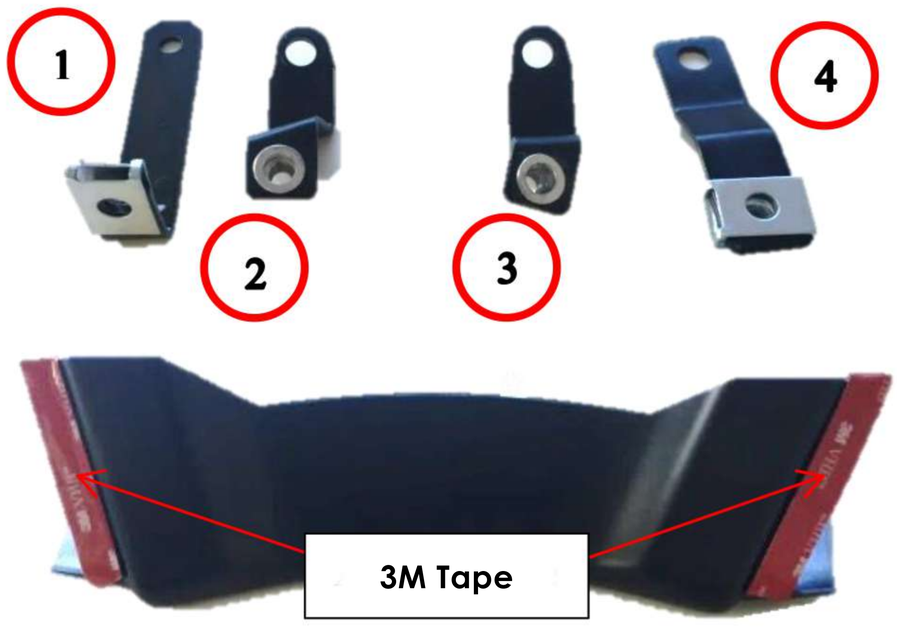

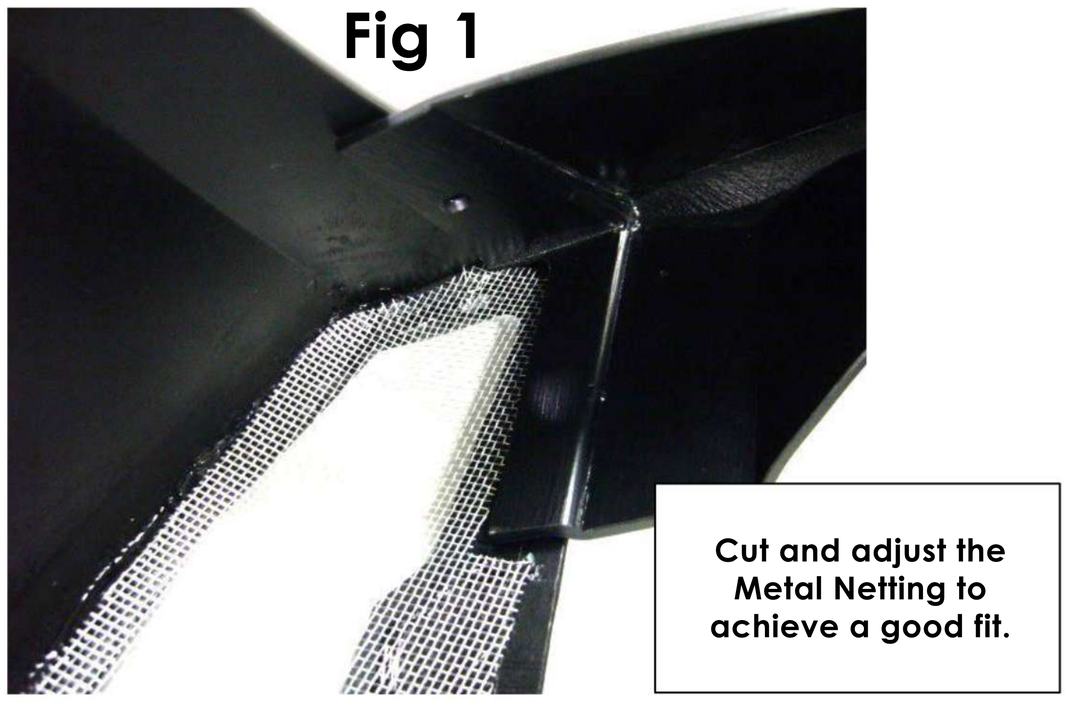


Fig 1

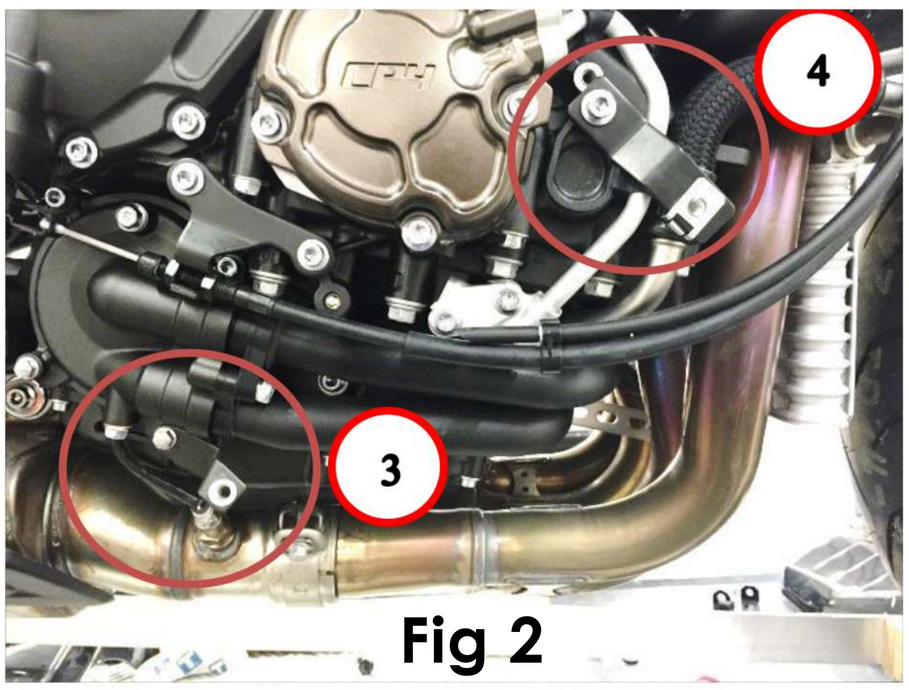


Fig 2

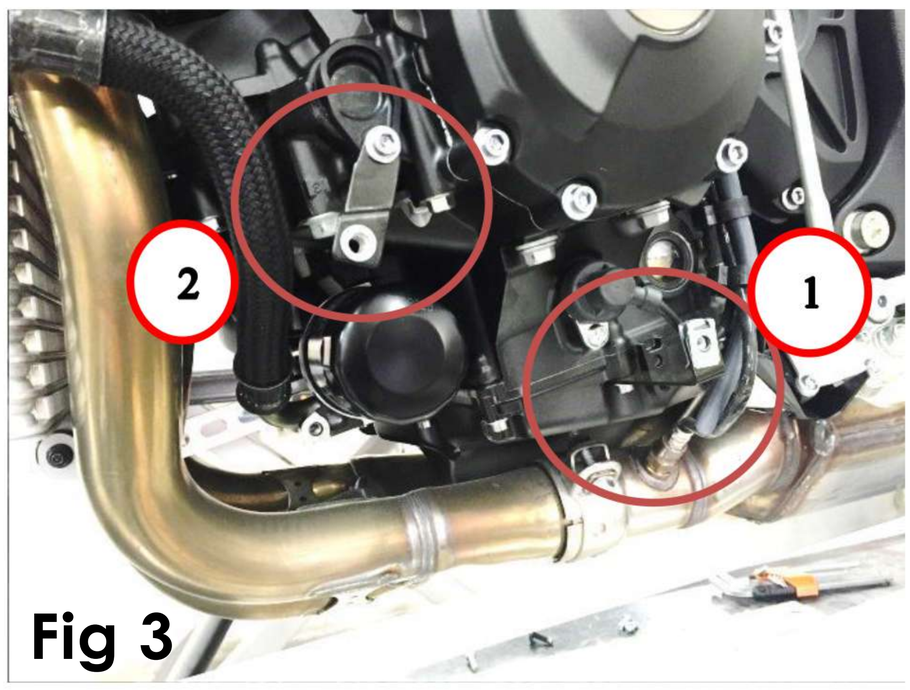


Fig 3

Got questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!