22170 Yamaha MT-10 Belly Pan Fitting Instructions

Kit Includes:

1X	**C22170**	Belly Pan
3X	**CFK22170**	Brackets (3 parts)
5X	**CBOLM60008**	M6 x 16mm Bolt
4X	**CWASM60003**	M6 Washer
4X	**CPNUT0001** Pre-fitted by Pyramid	Aluminium Nut
1X	**CTAP0004**	Heat Shield Tape (600mm length)
1X	**CBRA2850**	Kardesign x Pyramid Decal (150mm x 25mm)

Attach the brackets using the OEM bolts on the bike (see **Fig 1 & 2**).

Attach the Belly Pan to the brackets using the M6 x 16mm bolts and M6 washers supplied.

Check fixings periodically.

Fig 1


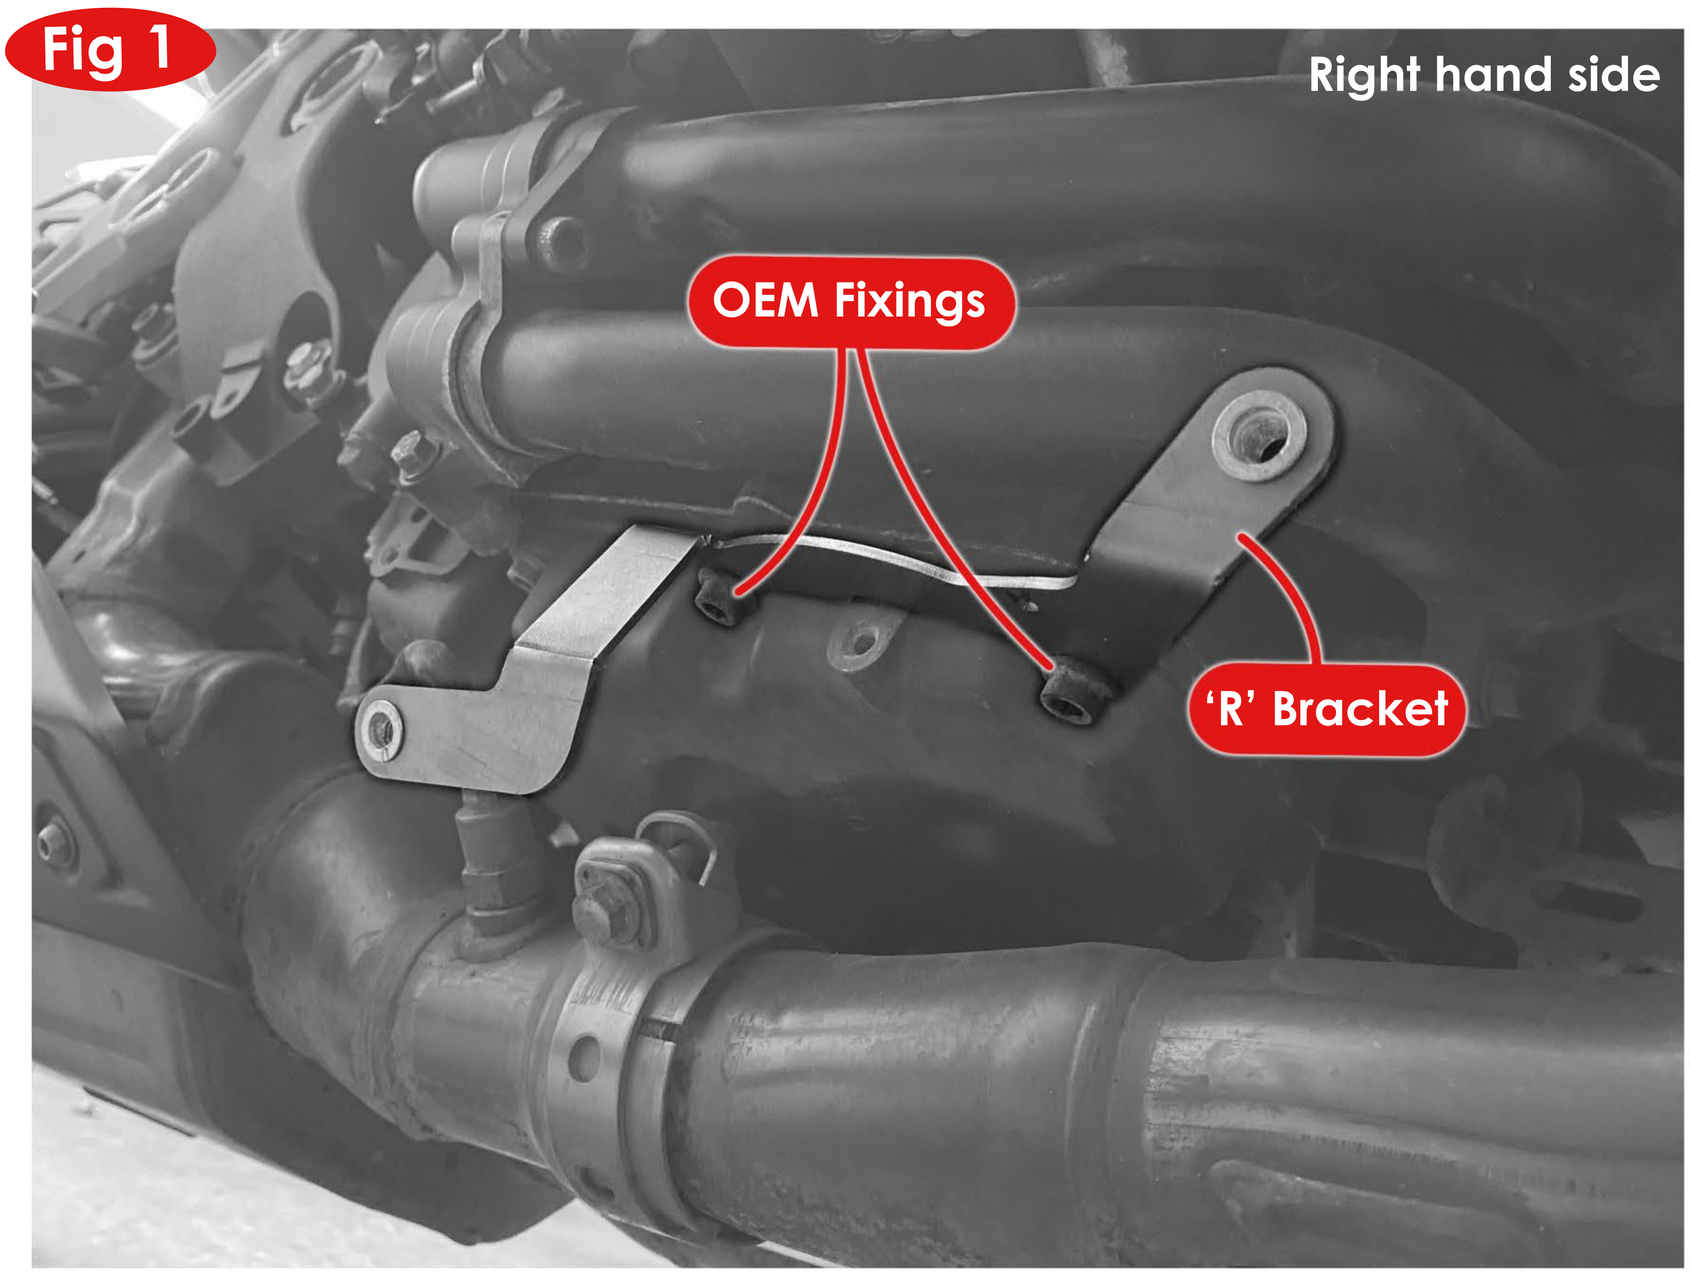




Fig 2

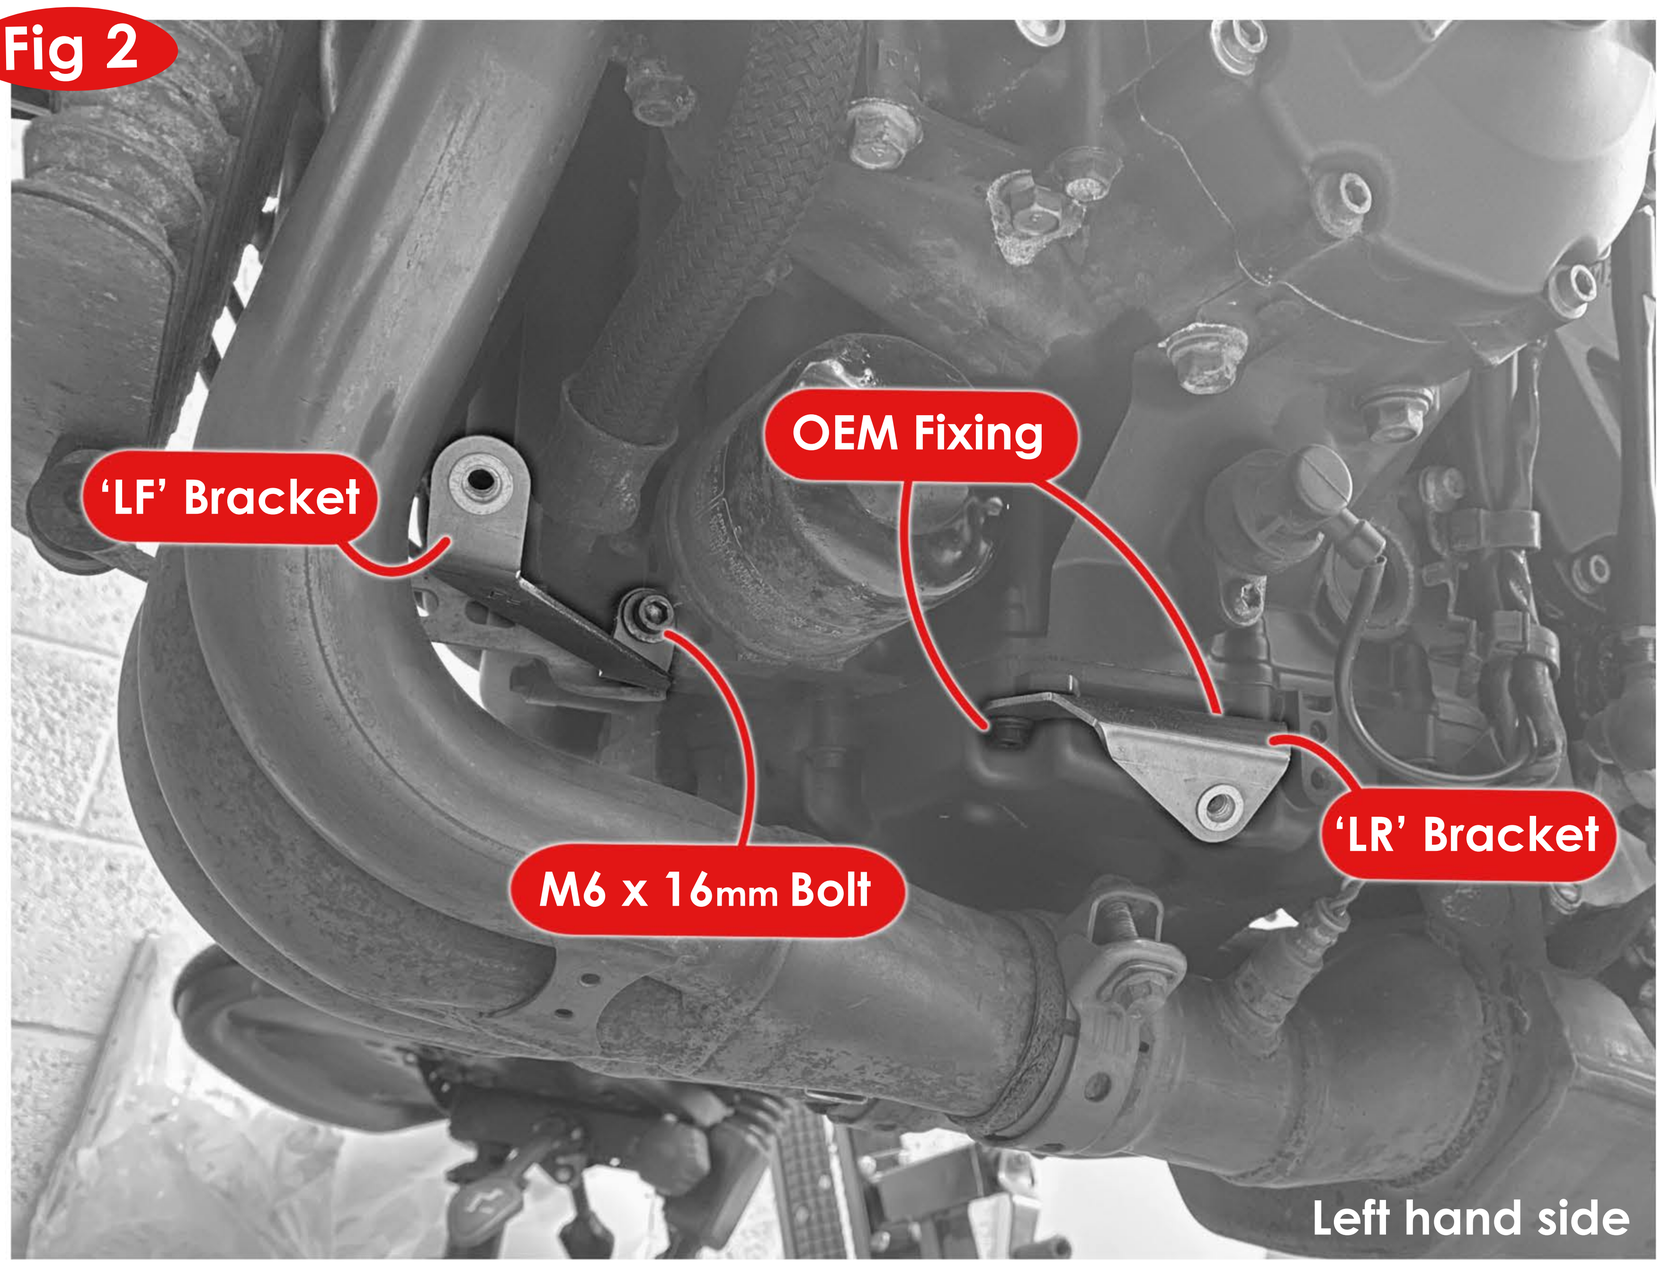

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

Follow us on social media and feel free to leave us a review!

Illustrations and pictures are always clearer on our web version!