


Item number: **HPS.08.084.10000/B**

Revision: **00** · Date: **05 - 2026**

Centerstand

 ~ 0.75 h.

EASY  DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION


 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.


 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. **IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!**

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



info@sw-motech.com
www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:

www.sw-motech.com























































Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.




Tighten/note the tightening torque information:

Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).

PARTS LIST - READ AND KEEP MOUNTING INSTRUCTIONS!

<p>1</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>1</p>  <p>HPS.08.084.001.11</p> <p> 1/1</p> </div>	<p>2</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>2</p>  <p>HPS.08.084.002.11</p> <p> 1/1</p> </div>	<p>3</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>3</p>  <p>M10 x 12; DIN 912 SC.ST.10.012.01.912.088</p> <p> 4/4</p> </div>	<p>4</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>4</p>  <p>HPS.22.822.003.11</p> <p> 1/1</p> </div>	<p>5</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>5</p>  <p>M6 x 25; ISO 7380 SC.ST.06.025.02.7380.109</p> <p> 1/1</p> </div>	<p>6</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>6</p>  <p>BB.180.090.062.090.060.01</p> <p> 1/1</p> </div>			
<p>7</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>7</p>  <p>Ø 20 / ø 6,4 / h 5 DB.ST.0200.0064.0050.48</p> <p> 1/1</p> </div>								
<p>2</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td data-bbox="150 804 359 1108"> <p>8</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>8</p>  <p>M8 x 30; DIN 7991 SC.ST.08.030.02.7991.088</p> <p> 2/2</p> </div> </td> <td data-bbox="375 804 587 1108"> <p>9</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>9</p>  <p>M8 x 25; DIN 7991 SC.ST.08.025.02.7991.088</p> <p> 1/1</p> </div> </td> <td data-bbox="603 804 815 1108"> <p>10</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>10</p>  <p>M8 x 20; DIN 7991 SC.ST.08.020.02.7991.088</p> <p> 1/1</p> </div> </td> </tr> </tbody> </table>						<p>8</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>8</p>  <p>M8 x 30; DIN 7991 SC.ST.08.030.02.7991.088</p> <p> 2/2</p> </div>	<p>9</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>9</p>  <p>M8 x 25; DIN 7991 SC.ST.08.025.02.7991.088</p> <p> 1/1</p> </div>	<p>10</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>10</p>  <p>M8 x 20; DIN 7991 SC.ST.08.020.02.7991.088</p> <p> 1/1</p> </div>
<p>8</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>8</p>  <p>M8 x 30; DIN 7991 SC.ST.08.030.02.7991.088</p> <p> 2/2</p> </div>	<p>9</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>9</p>  <p>M8 x 25; DIN 7991 SC.ST.08.025.02.7991.088</p> <p> 1/1</p> </div>	<p>10</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>10</p>  <p>M8 x 20; DIN 7991 SC.ST.08.020.02.7991.088</p> <p> 1/1</p> </div>						
<p>3</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td data-bbox="150 1131 359 1435"> <p>11</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>11</p>  <p>HPS.08.084.900.01.11</p> <p> 1/1</p> </div> </td> <td data-bbox="375 1131 587 1435"> <p>12</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>12</p>  <p>M10 x 20; ISO 7380 SC.ST.10.020.01.7380.109</p> <p> 2/2</p> </div> </td> <td data-bbox="603 1131 815 1435"> <p>13</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>13</p>  <p>HPS.01.536.002</p> <p> 2/2</p> </div> </td> </tr> </tbody> </table>						<p>11</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>11</p>  <p>HPS.08.084.900.01.11</p> <p> 1/1</p> </div>	<p>12</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>12</p>  <p>M10 x 20; ISO 7380 SC.ST.10.020.01.7380.109</p> <p> 2/2</p> </div>	<p>13</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>13</p>  <p>HPS.01.536.002</p> <p> 2/2</p> </div>
<p>11</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>11</p>  <p>HPS.08.084.900.01.11</p> <p> 1/1</p> </div>	<p>12</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>12</p>  <p>M10 x 20; ISO 7380 SC.ST.10.020.01.7380.109</p> <p> 2/2</p> </div>	<p>13</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>13</p>  <p>HPS.01.536.002</p> <p> 2/2</p> </div>						
<p>4</p> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>14</p>  <p>ZFD.00.150.011/ST</p> <p> 1/1</p> </div>								

1

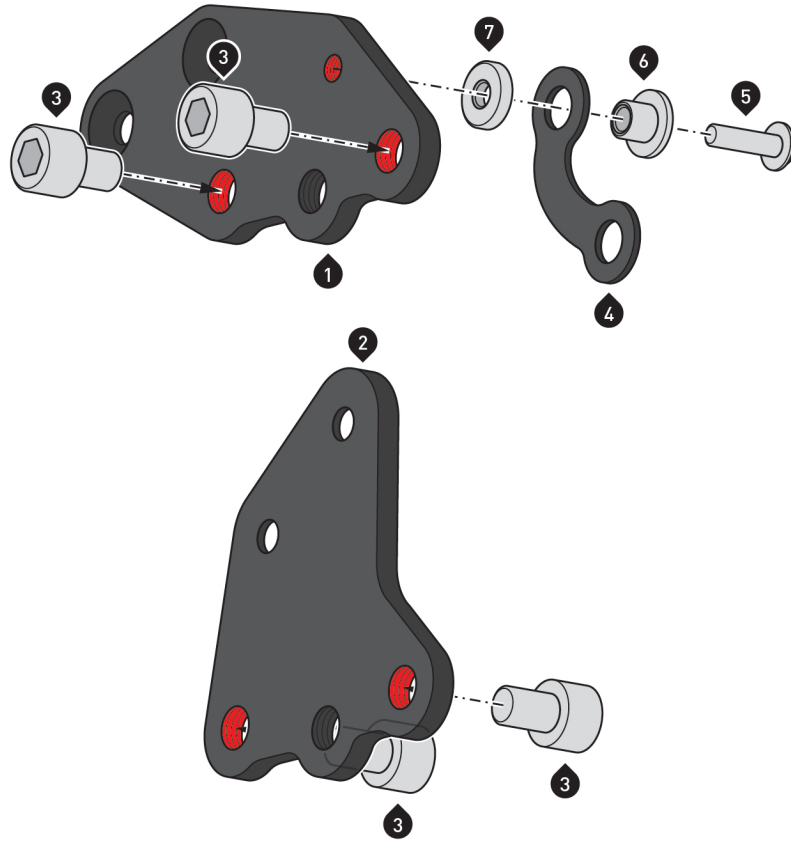






▲ WARNING: Always wear eye and hand protection!
▲ WARNING: Always use suitable tools!


Screw the screws (3) onto mounting brackets (1) and (2). Pay attention to the recesses in mounting brackets (1) and (2) with regard to which side to screw in the screws (2).

▲ WARNING: Use liquid threadlocker!
 Do not tighten the screw (3) yet.

Screw the spring clip (4) to the mounting bracket (1).

▲ WARNING: Use liquid threadlocker!
 Tighten the screw (5) as specified in the mounting instructions.

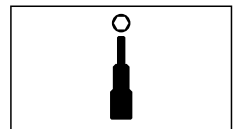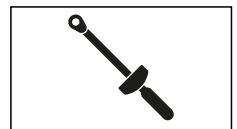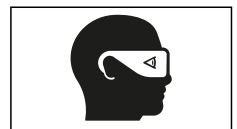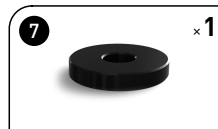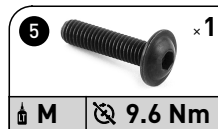


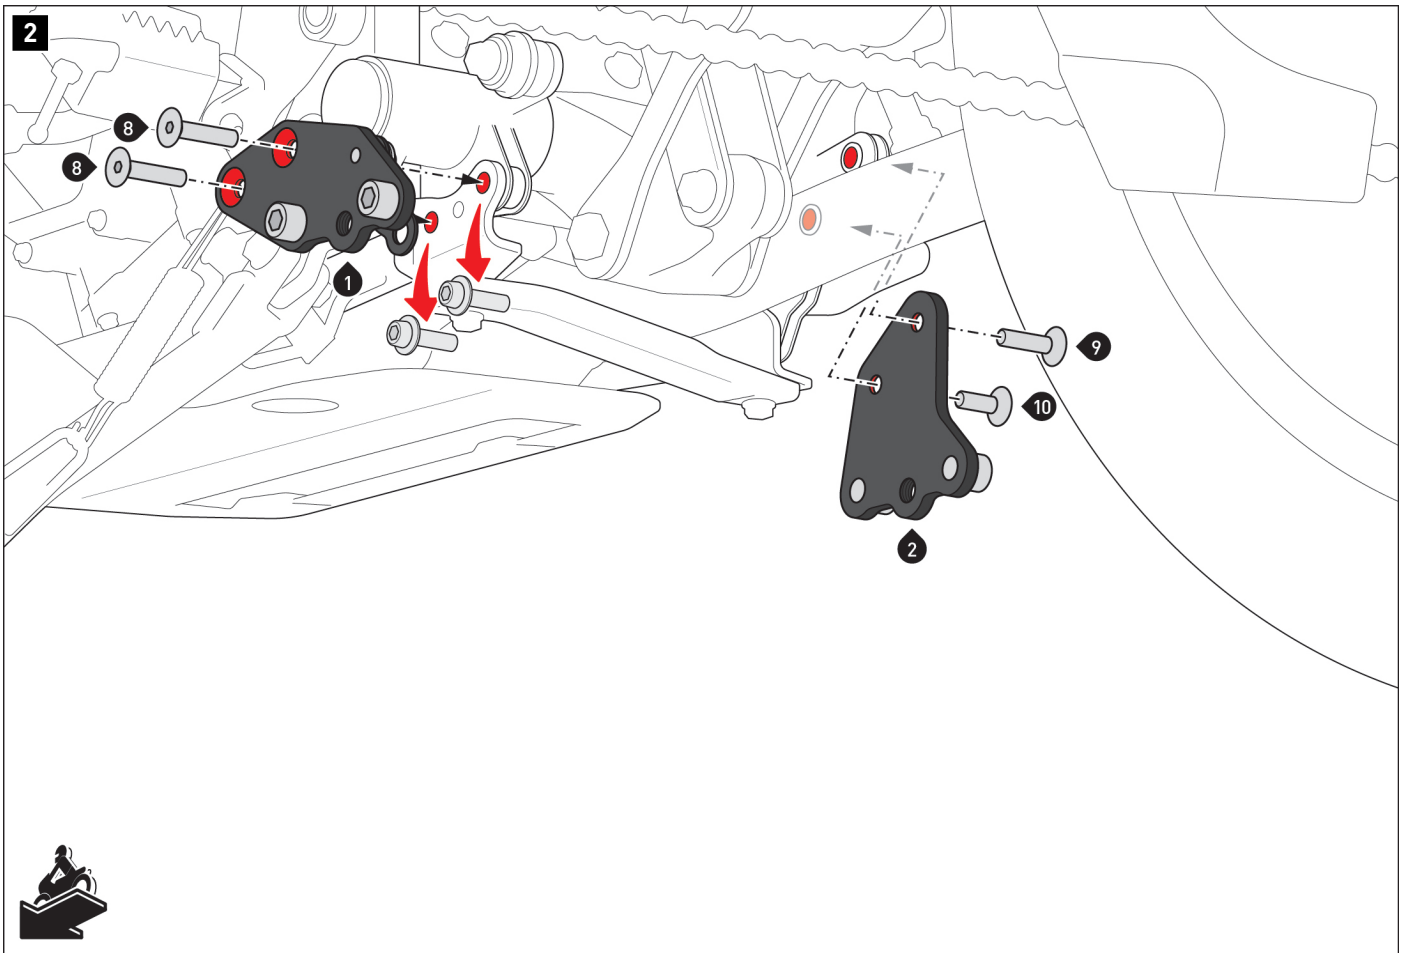



Remove the original screws from the **left attachment points**.

Screw mounting brackets (1) and (2) to the centerstand mounts on the vehicle frame.

▲ WARNING: Use liquid threadlocker!

Do not tighten screws (8), (9) and (10) yet.

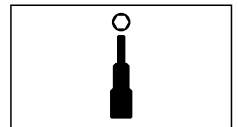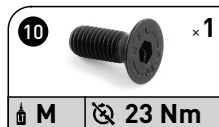



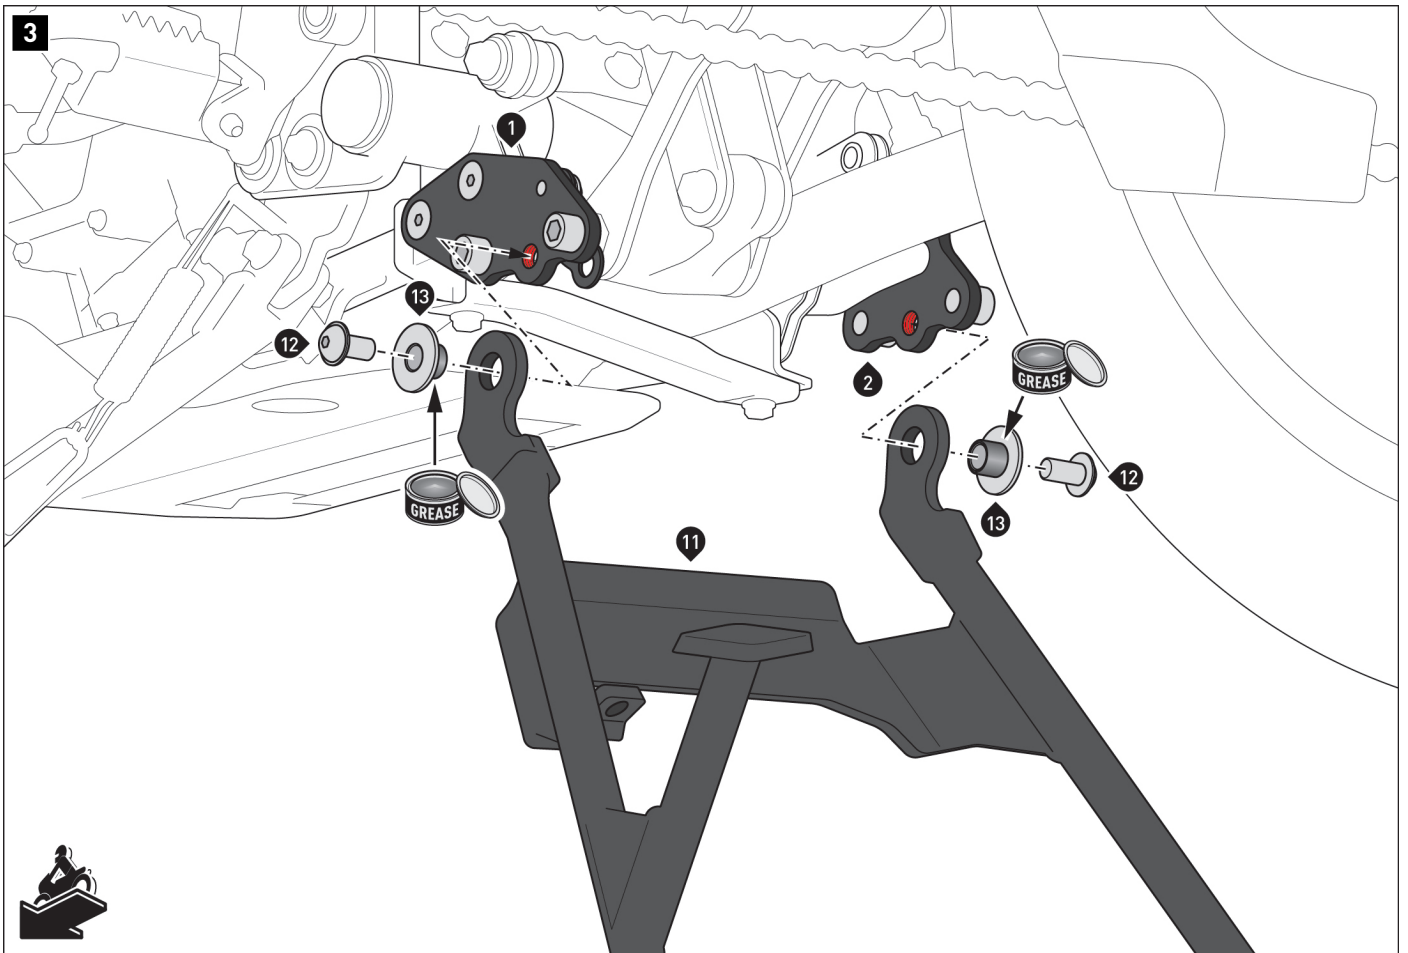



Grease the contact surfaces of the bushings (13) with grease.

Screw the centerstand (11) to mounting brackets (1) and (2) on **both sides**.

▲ WARNING: Use liquid threadlocker!

Then tighten screws (8), (9), (10), (12) and (3) in this order.

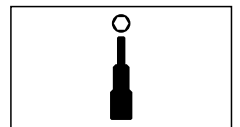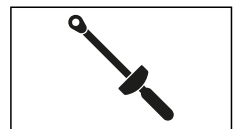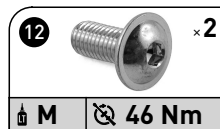


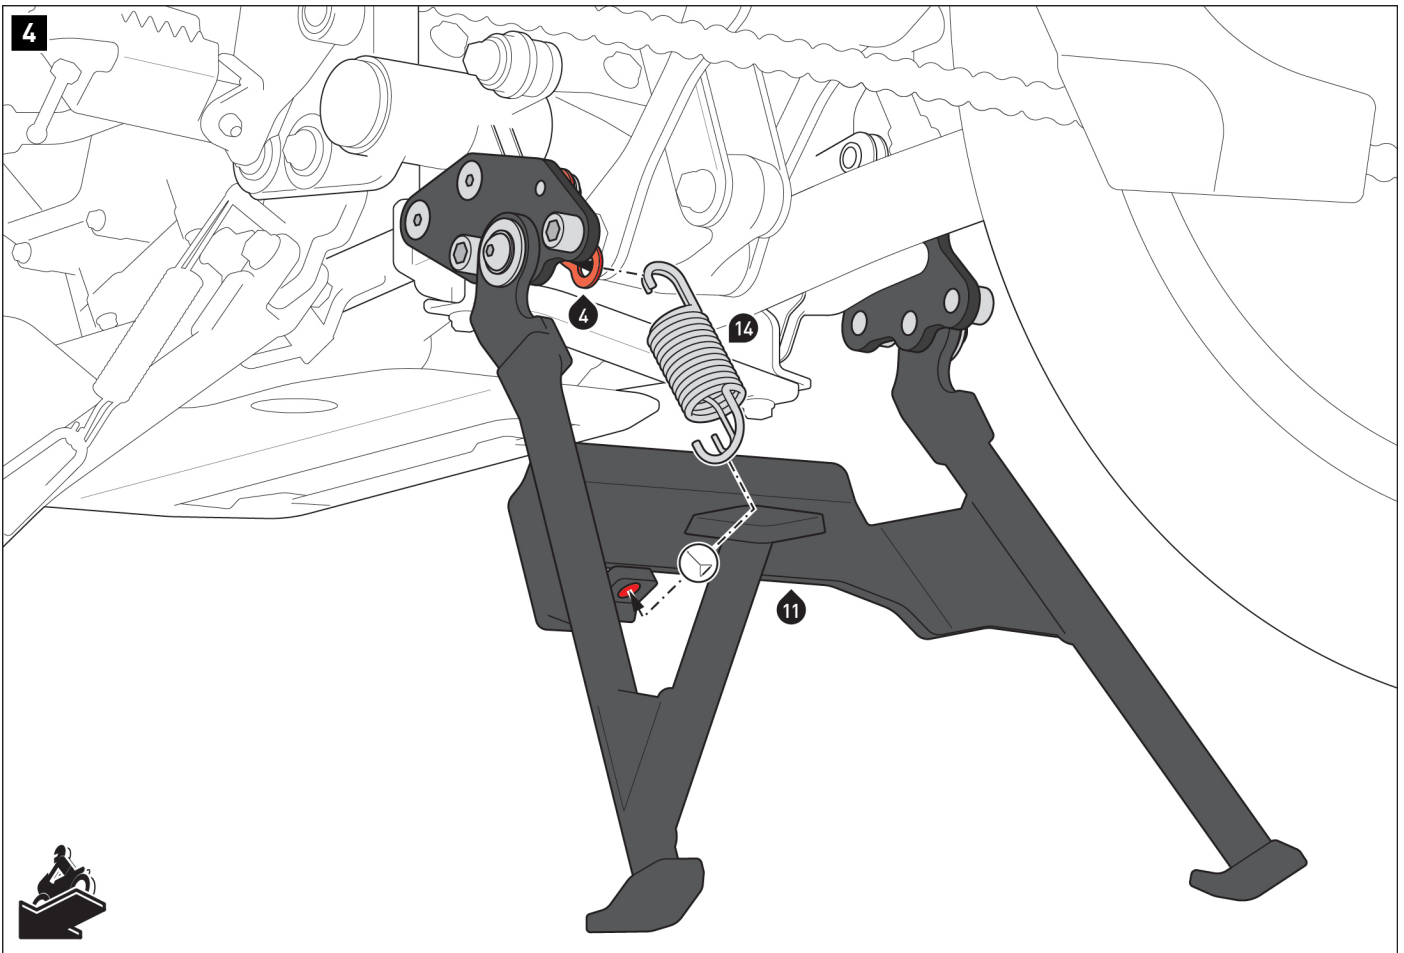

Fold up the centre stand (11), and hold it in position.
Now hang the tension spring (14) (see illustration for alignment) in the spring bracket (4).
Attach the lower end of the tension spring to the mounting tab on the centerstand using a tension spring mounting hook.

⚠ WARNING: Make sure to properly attach both springs on the tension spring (14)!

⚠ WARNING: Finally, carry out a comprehensive functional check of the centre stand.

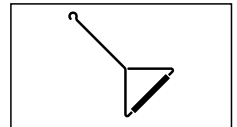

PRODUCT-SPECIFIC NOTES

▲ WARNING: Cornering and ground clearance may be restricted by the centerstand at extreme angles!

▲ NOTE: *Observe the country-specific regulations for the registration/operation of your vehicle or the applicable TÜV regulations. Have parts subject to registration entered in the vehicle documents by your inspection authority after installation.*

If a national type approval is issued for this product: the national type approval issued with the product must always be carried with you! This national type approval only applies to the models listed and must comply with all requirements! For use with a vehicle not listed here, the entry must be made in the vehicle documents!

The vehicle assignments in the national type approval document are expanded annually. As a result, the national type approval for a new product may only take place a few months after the market launch. If your model is not listed or if you no longer have the national type approval document, please visit the Download section of our web shop. The current version of the national type approval document will be available there.