

HTP9-2-1.1 YAMAHA SUPER TENERE SU RACK



HAPPY-TRAIL.COM

Thank you for purchasing Happy Trails products. Our products are proudly hand made in Boise Idaho, USA. If you have any questions or concerns about the installation of this product, please contact us directly at 1-800-444-8770 or e-mail installation@happy-trail.com.

Before you begin, place the bike on a hard level surface where you have room to work. Lay out the parts included in this kit and compare to the parts list on page 2 of these instructions. If any parts or hardware are missing, contact us immediately at the number or email listed above.

Step 1

Remove the factory bolts from the grab handles using an appropriately sized Torx wrench. The grab handle should remain in place for Step 2.

Step 2

Place a 3/8" flatwasher on each M10x75mm bolt and insert the bolt through the upper SU Rack attachment point as shown by the arrows in Fig 2. Place a 3/4"x3/4" spacer on each bolt and begin threading the bolts into the grab handle bolt holes from which the factory bolts removed in Step 1. Do not tighten these bolts more than finger tight.

Step 3

Notice that the SU Rack does not contact the passenger peg mount directly. Locate the two L shaped brackets in the hardware kit. Bolt the L shaped bracket to the base of the SU rack as shown by arrow 1 in Figure 3, using an M8x25SHCS. Place a 5/16" flatwasher on each side of the bolt and a Nylock nut behind the bolt as shown in Fig 3.

Bolt the L bracket to the empty hole in the passenger peg using an M8x25SHCS. Place a 5/16" flatwasher on each side of the bolt and a Nylock nut behind the bolt as shown in Fig 3.

Insert an M8x16SHCS into the threaded hole in the rear of the passenger peg as shown by arrow 3 in Fig 3.

Fig 1



Fig 2


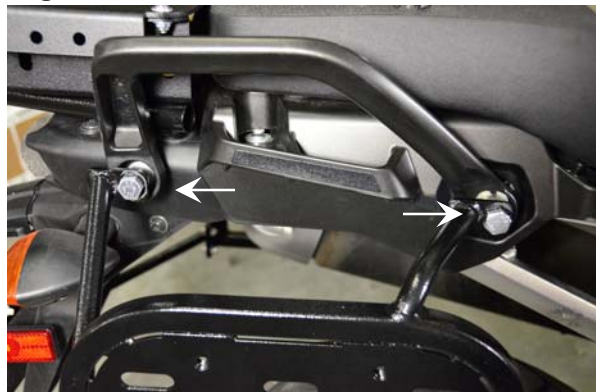


Fig 3

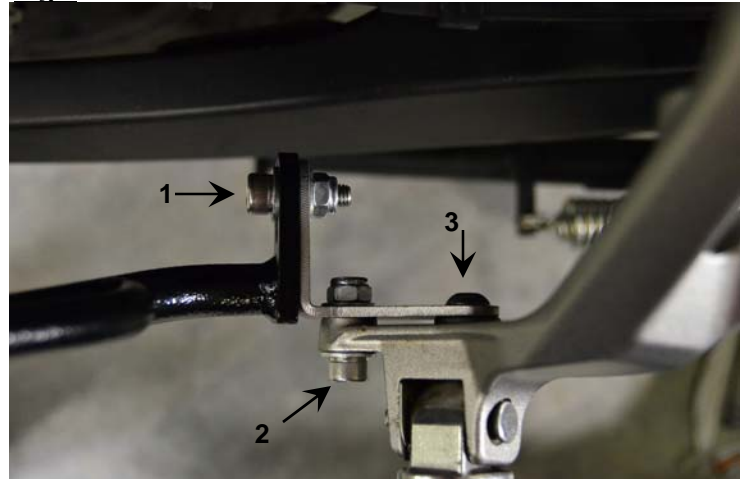

HTP9-2-1.1 YAMAHA SUPER TENERE SU RACK

Step 7

Attach the bumper to either side of the SU rack by threading each of the four M6x16mm bolts through the bumper and into the mounting holes at the back of the SU rack. Place one 3/16" washer on the front and on the back of each bolt and thread the bolts into the included M6 nylock bolts.

You may now tighten all bolts on the rack to the following torque specifications:

M6—8ft/lbs

M8—18 ft/lbs

M10—27ft/lbs

Fig 7



Hardware List:

- 4 M10x75MM 1.25 TP
- 4 M8x25SHCS
- 2 M8x16SHCS
- 4 M6x16SHCS
- 4 M8 Nylock Nuts
- 4 M6 Nylock Nuts
- 4 3/4"x3/4"x.509" spacers
- 4 3/8" flat washers
- 8 5/16" flat washers
- 8 3/16" flat washers

- Right side SU Rack
- Left side SU Rack
- Bumper
- 2 Passenger footpeg mounts

Recommended Tools:

- 6mm Allen Wrench
- 5mm Allen Wrench
- 10mm Box End Wrench
- 13mm Box End Wrench
- 17mm Box End Wrench



Happy Trails Products

11/7/11
Rev. 1
HH