
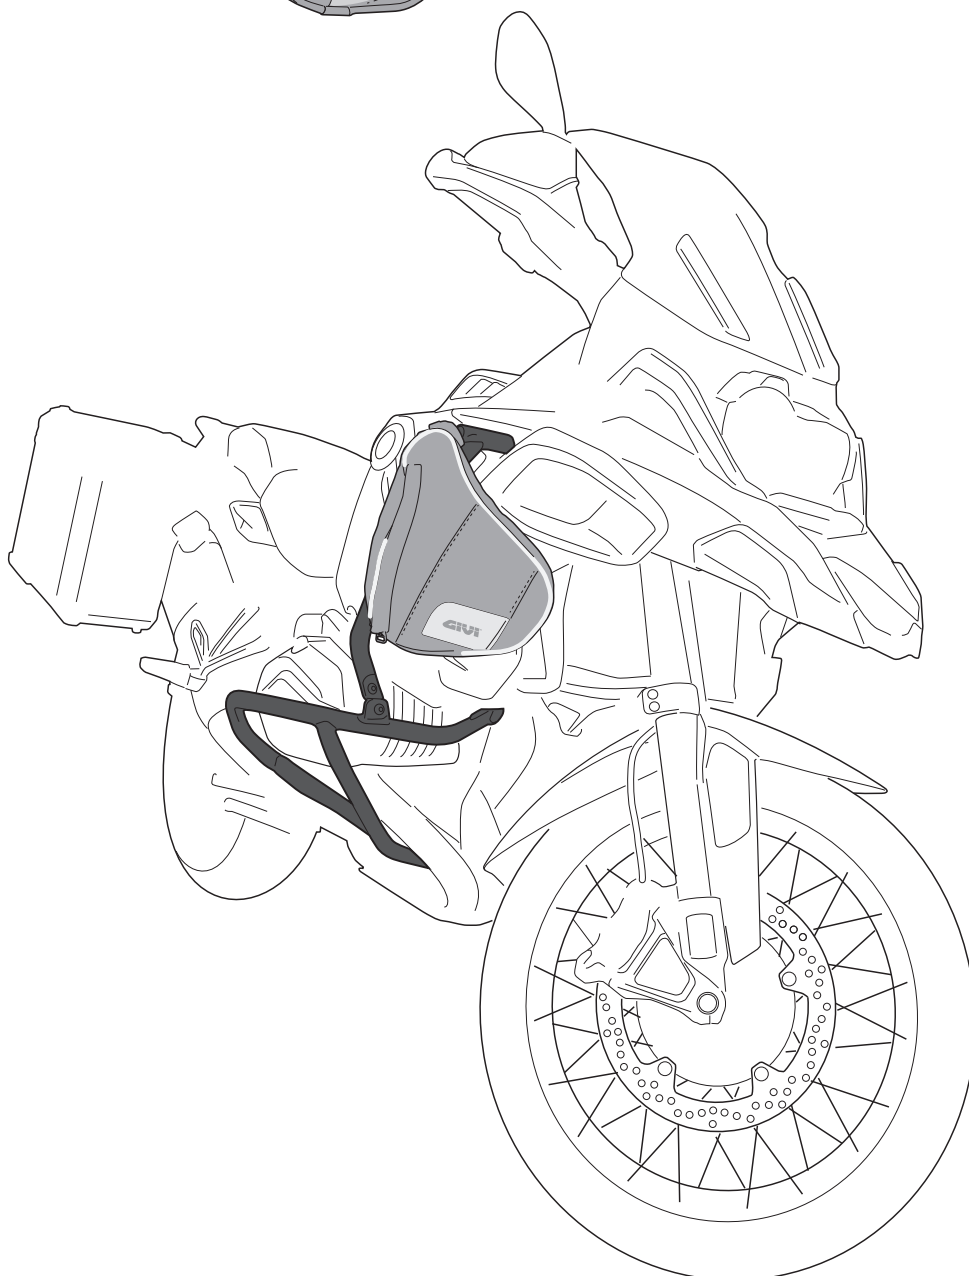


# XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD  
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE COTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

## BMW R1200GS ADVENTURE (2014)




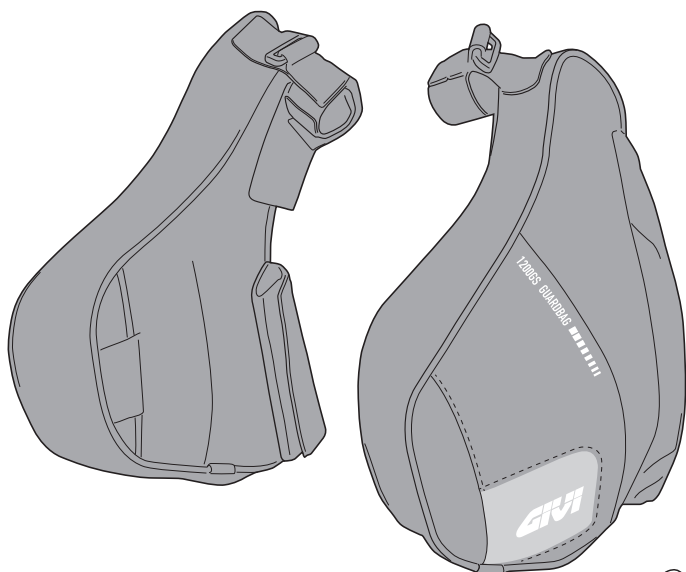


# XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD  
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE CÔTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

## BMW R1200GS ADVENTURE (2014)

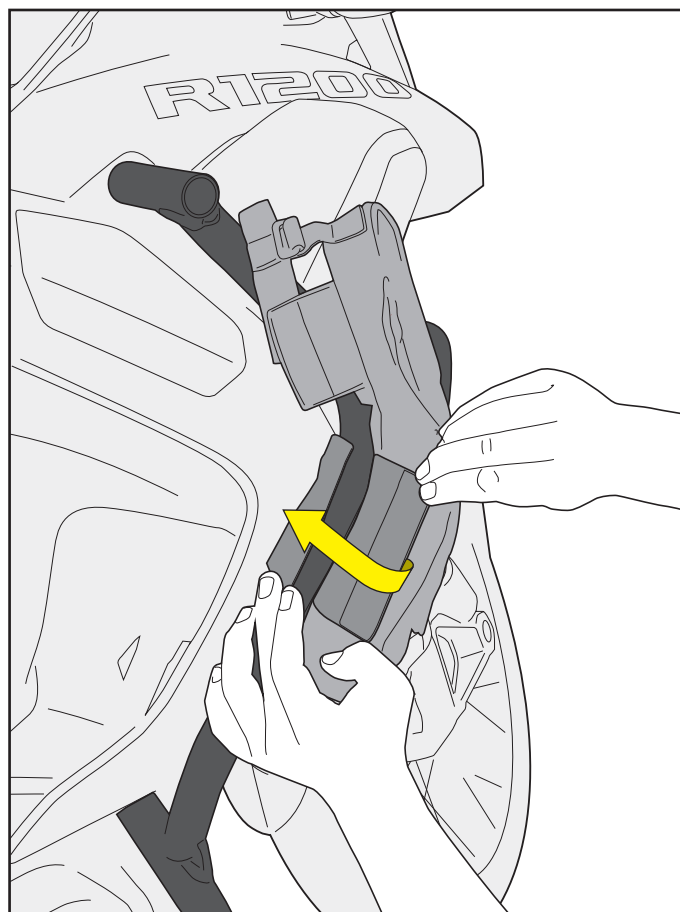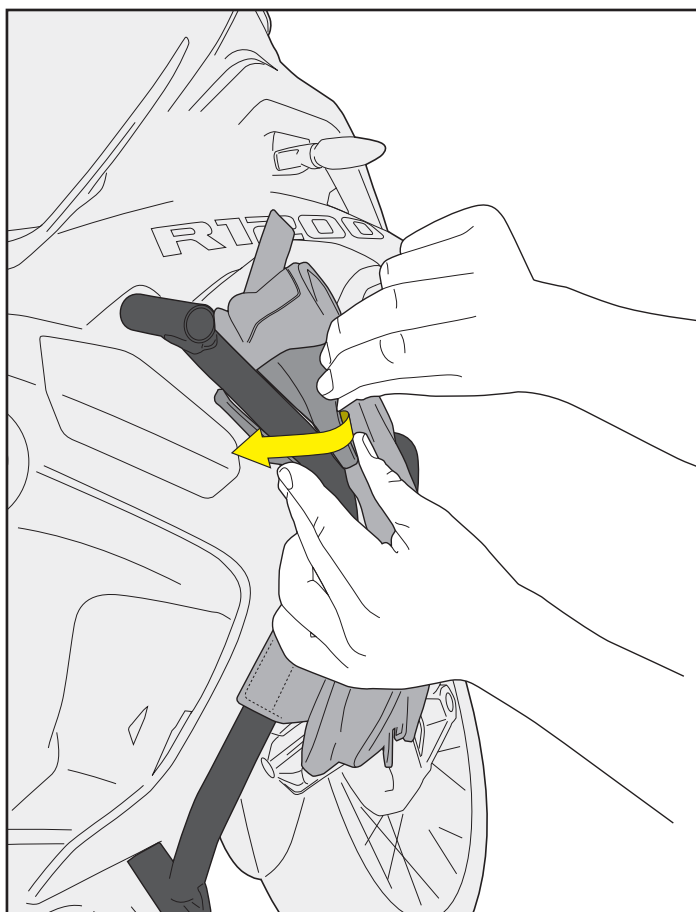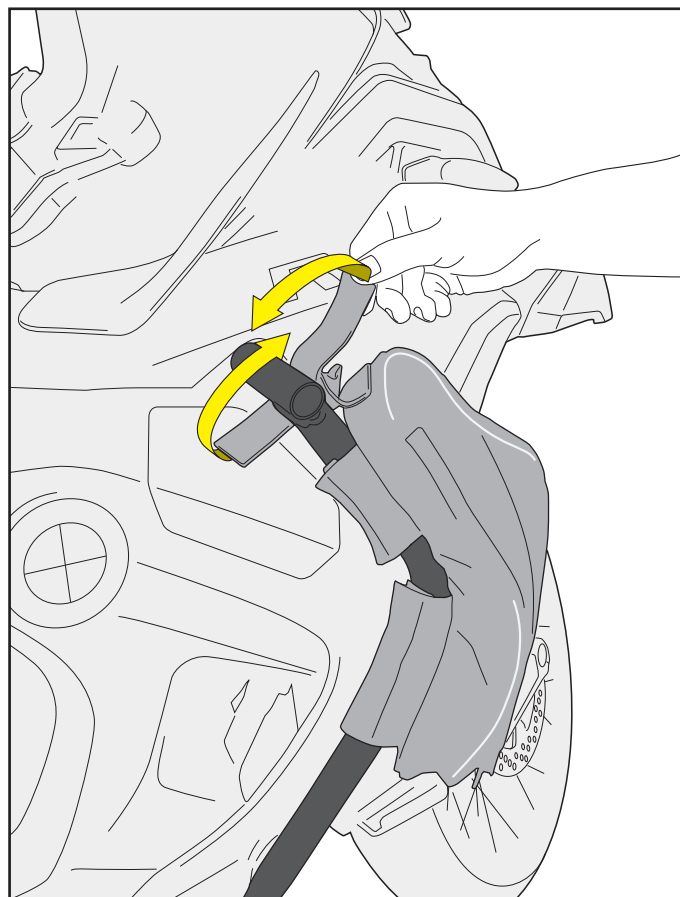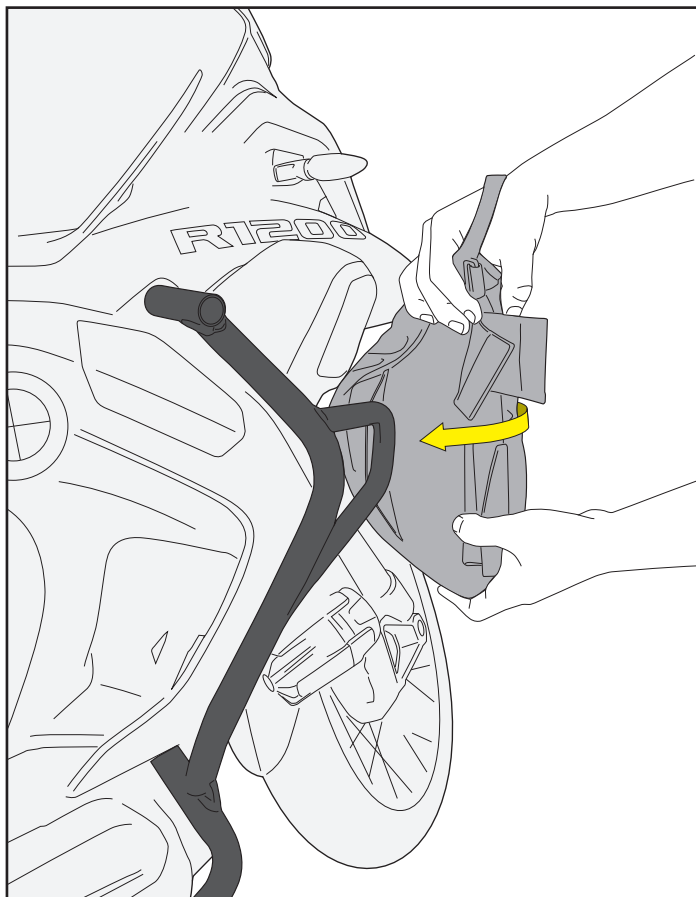

# XS5112E

COPPIA DI BORSE XSTREAM SPECIFICHE DA MONTARE SUL PARAMOTORE ORIGINALE - PAIR OF XSTREAM PANNIERS TO BE MOUNTED ON THE ORIGINAL ENGINE GUARD  
PAIRE DE VALISES XSTREAM, CONÇUE POUR ÊTRE MONTÉE SUR LE CÔTÉ DU MOTEUR - PAAR SPEZIFISCHE XSTREAM TASCHEN ZUR BEFESTIGUNG AN DEN ORIGINALEN STURZBÜGELN

ALFORJAS XSTREAM ESPECÍFICAS PARA COLOCAR SOBRE EL PARAMOTOR ORIGINAL

## BMW R1200GS ADVENTURE (2014)

