

Tour Performance®


FJR bar relocation adapters

03-05 instructions

A 6mm hex drive is required to torque the 8mm socket head cap screws.


1) Non ABS (For ABS models use step 2-4)

Before stock bars are removed, relocate the front brake hydraulic line from inside the factory wire stay to beside the right fork tube as shown. Use the cable tie provided to attach the line to the fork tube just below the top triple clamp

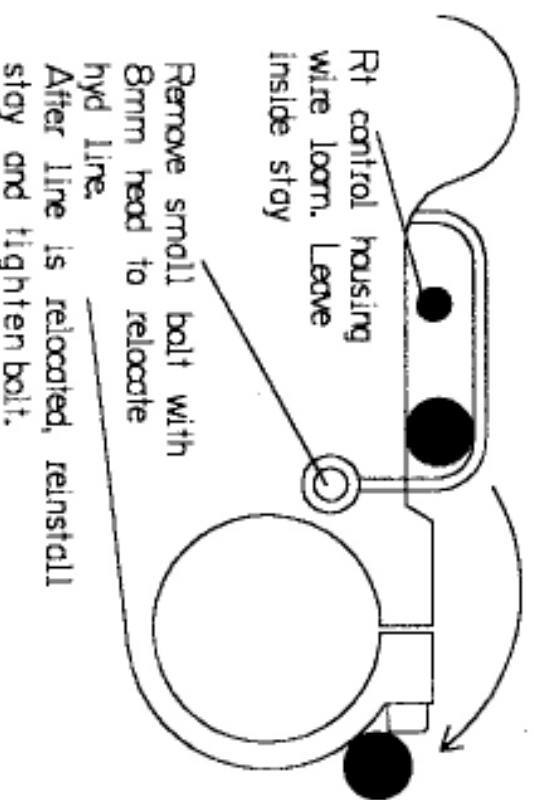

2)

Install original 8mm socket head cap screws in these locations and torque to 14 ft lbs

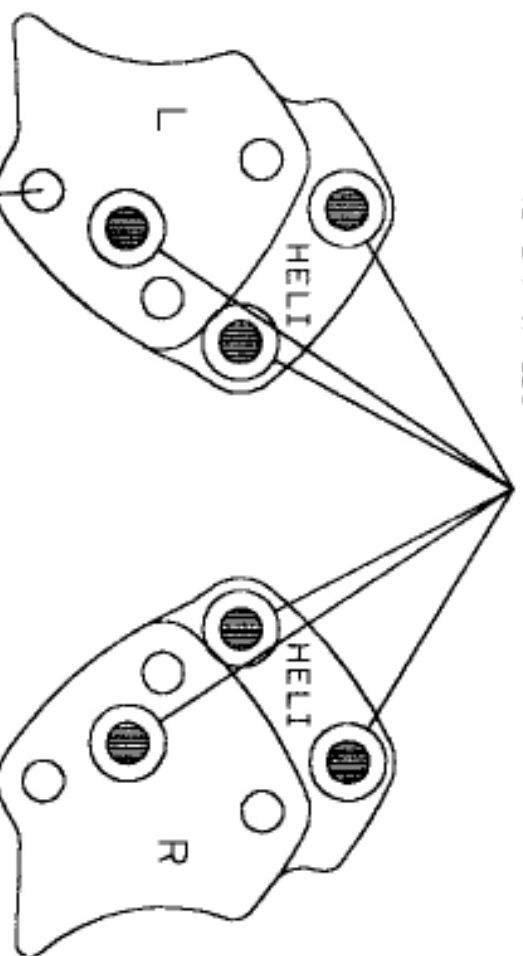

3)

Install the 6 8mmx20mm screws supplied to install bars to the Tour Performance adapters and torque to 14 ft lbs

4)

Check all work performed. With the engine running and with the machine in neutral, go to full left and right steering lock and make sure idle does not increase and that throttle action is smooth.