

Denali Horn Mount

Ducati Multistrada 1200 & 1200s
'10-'14

HMT.22.10000 Instructions Rev:01

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Distributed by:

Twisted Throttle LLC
570 Nooseneck Hill Rd
Exeter, RI 02822

phone: 855.255.5550
fax: 401.223.6955
www.twistedthrottle.com

Installation Instructions

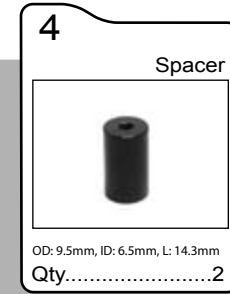

Step One: Remove the two OEM bolts shown from the right side engine case. Bolt the horn to the mounting bracket using the hardware that was supplied with the horn. Once the horn is bolted to the bracket, use the bolts (#2 & #3) and spacers (#4) to bolt the bracket (#1) to the motorcycle.

