

INSTALLATION

LOWER FRONT FRAME COVER

7772

FITS: ALL '91-UP ELECTRA GLIDES, STREET GLIDES, ROAD GLIDES, TOUR GLIDES, ROAD KINGS AND TRIKES

PARTS INCLUDED

- 1 Lower Front Frame Cover
- 1 Mount Bracket ('91-'08 models)
- 1 Mount Bracket ('09-up models)
- 1 Hardware Kit
 - 2 10-24 x 1/2" Button Socket Cap Screws
 - 1 3/18-16 x 1" Button Socket Cap Screw
 - 1 Spacer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE

CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR

SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein

can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein

may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

FOR '91-UP MODELS

STEP 2 Remove the screw and washer that secure the lower stabilizer link as shown in PIC. 1; they will be used again.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
 - Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



STEP 3 Place the mounting bracket ('91-'08 models) over the stabilizer and start the screw and washer as shown in PIC. 2; do not tighten yet.

STEP 4 Place the cover on the mounting bracket and line the holes in the cover up with the mounting holes in the bracket. Check for clearance between the cover and the frame; adjust the bracket as needed to achieve adequate clearance.

STEP 5 Remove the cover and tighten the screw; torque to 24 ft. lbs.

STEP 6 Place the cover on the bracket and secure with the two screws from the hardware kit. (See PIC. 3)

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

FOR '09-UP MODELS

STEP 1 Loosen the 2 screws shown in PIC 4.

STEP 2 As shown in PIC 5, slide the Mounting Bracket ('09-up models) behind the screw heads (and washer on rear screw). Press down on the Bracket and tighten the screws.


NOTE If there is no engine guard installed on the motorcycle, use the supplied $3/18-16 \times 1$ " Button Socket Cap Screw and spacer in the front hole. Place the Spacer behind the bracket and thread the screw in to the hole.


STEP 3 Place the Cover on the Mounting Bracket and line the holes in the cover up with the mounting holes in the Bracket. Check for clearance between the cover and the frame.

STEP 4 As shown in pic 3, secure the cover with the two $10-24 \times 1/2$ " screws from the hardware kit.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


Ride On!

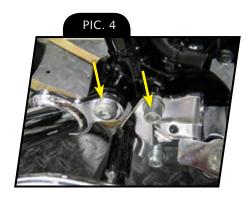

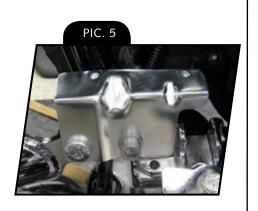





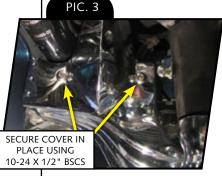

PAGE 2