



INSTALLATION

WILD BOAR FENDER ORNAMENT 9022

UNIVERSAL FIT; FOR ANY MODEL WITH A 12 VOLT POWER SOURCE

PARTS INCLUDED

- 1 Wild Boar Assembly
- 2 8-32 x 7/8" BSCS Fastener
- 2 8-32 Nylock Hex Nut
- 4 #8 Flat Washer
- 1 #10 Split Lock Washer
- 1 Ring Terminal, #18
- 1 Wire Protector
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches, 1/4" and #17 drill bits, drill, wire stripper/crimper, 1/2" wrench, sandpaper or steel wool.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

PROCEDURE

STEP 1 Remove the front fender; refer to your factory service manual for more information.

STEP 2 Determine the best location for the ornament; mask the area with tape to prevent scratching the surface. Using the base plate as a template, mark the location of the two mounting holes and the wiring through hole on the fender.

STEP 3 Use a #17 drill bit to drill the two mounting holes; use a 1/4" drill bit to drill the through hole. Install the rubber grommet into the 1/4" through hole.

STEP 4 On the underside of the fender, use sandpaper or steel wool to clean a small area around one of the mounting holes. This will be used as a chassis ground; be sure to clean down to bare metal.

STEP 5 Run the wire from the positive side of the bulb through the rubber grommet and along the inside of the fender to the exit point. Follow the existing fender tip light wiring, if so equipped. Use silicone or duct tape to secure the wiring to the fender so that it will not come in contact with the tire.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 6 Run the wire from the negative side of the bulb to the chassis ground. Cut the wire to fit, being sure to leave enough slack to allow installation of the ring terminal. Strip the end of the negative wire and crimp the supplied ring terminal to the end.

STEP 7 Install the base and gasket onto the fender and secure with the supplied hardware. See **PIC.1**. Be sure to secure the negative wire to the chassis ground. Refer to **FIG.1** for proper hardware sequence.

STEP 8 Place the chrome boar over the base and secure it with the supplied fastener.

STEP 9 Reinstall the fender; refer to your factory service manual for more information.

STEP 10 Connect the positive wire to the appropriate power source, such as the ignition switch, low beam power wire, or fender tip light power light, if equipped. Be sure to insulate the connection. The wire can either be soldered, or use crimp-type terminal connections (not included).

Kuryakyn

PIC.1




PIC.2



Ride On!

FIG.1

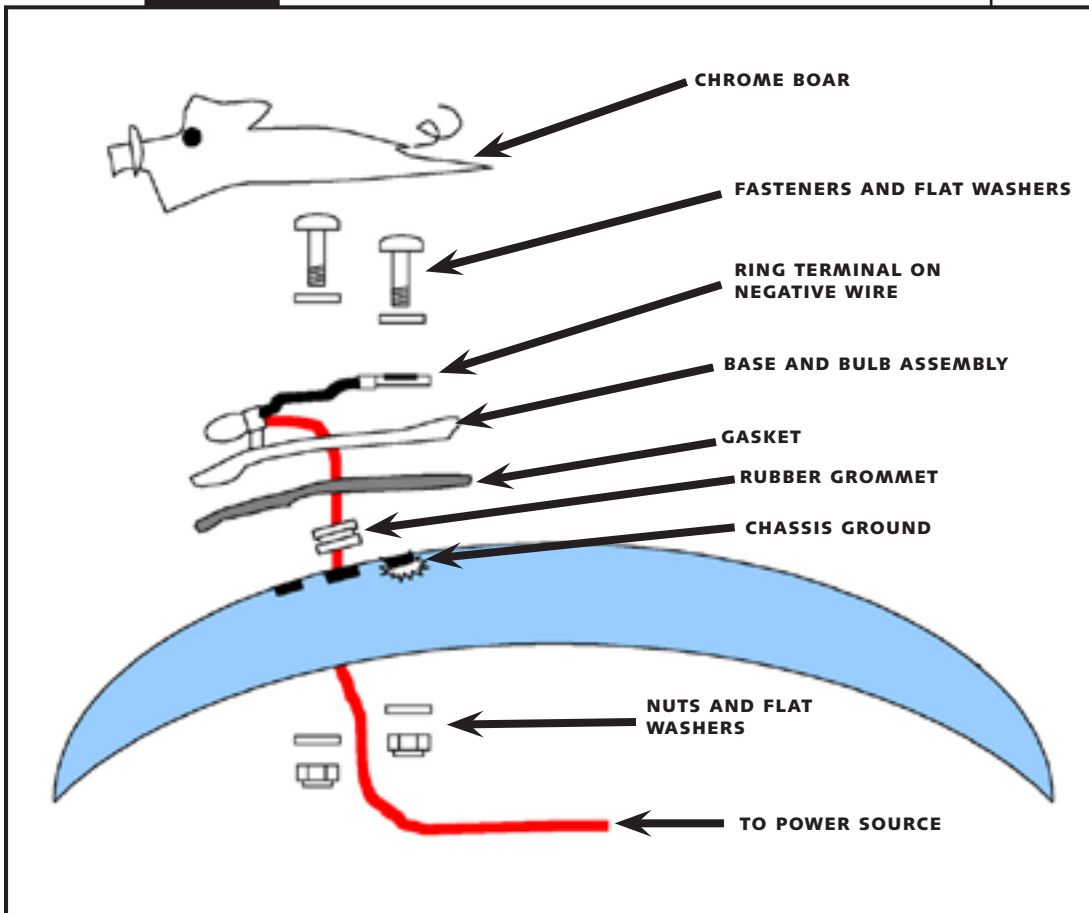

WILD BOAR FENDER ORNAMENT

INSTALLATION