# 21150 Honda CB1000 Hornet 2025> Front Infill Panels Fitting Instructions

**Kit Includes:**

| | | | |
|---|---|---|---|
| 1. | X1 | C21150A | Infill Panel 'A' (LHS) |
| 2. | X1 | C21150B | Infill Panel 'B' (RHS) |
| 3. | X1 | CFK21150A | Mounting Bracket 'A' (LHS) |
| 4. | X1 | CFK21150B | Mounting Bracket 'B' (RHS) |
| 5. | X6 | CBOLM60035 | M6x16mm Flanged-Button Bolt |
| 6. | X6 | CNUTM60011 | M6 Cage Nut (Pre-assembled) |
| 7. | X2 | CCAPM60002 | M6 Bolt Head Cap |

**OEM Parts (From the Motorcycle):**

| | | | |
|---|---|---|---|
| 8. | X2 | OEM CB1000 | M10 Bolt |

The installation process is replicated on both sides. This consists of the relevant panel and fixing bracket, together with an equal share of the supplied fixings. Please note: LHS denotes the left-hand side from the rider's point of view and likewise RHS denotes the right-hand side.

## Assembly Instructions

- Start the installation by working on the LHS of the motorcycle. You will need to remove the OEM panels to gain access to the mounting points in '**FIG. 2**'. Please refer to '**FIG. 1**' for reference.
- Remove the 2 x M10 OEM bolts (Item 8) from the side of the frame, marked in '**FIG. 2**'. Please be aware they are secured by nuts which will need loosening to remove the bolts.
- Place the LHS mounting bracket (Item 3) over the frame and secure with the OEM M10 bolts. Tighten the bolts enough to allow for minor adjustments to the position of the bracket but is able to remain in its place when not supported. See '**FIG. 3**' for reference.
- Place the LHS Infill Panel (Item 1) over the bracket and hand thread 3 x M6 bolts (Item 5) loosely to position the part. Adjust the bracket so that the part aligns with the frame as detailed in '**FIG. 4**'. Once positioned, carefully remove the Infill Panel and fully tighten the OEM M10 frame bolts to 45Nm.
- Re-fit the LHS Infill Panel but this time fully securing the M6 bolts. Please do not overtighten.
- Place the M6 bolt caps (Item 7) on the M6 bolts.
- Return the removed OEM panels by refitting them in reverse order to that illustrated in '**FIG. 1**'.
- Repeat the above steps for the RHS.
- The installation of your Pyramid Infill Panels for the CB1000 Hornet is now complete.

**FIG. 1**

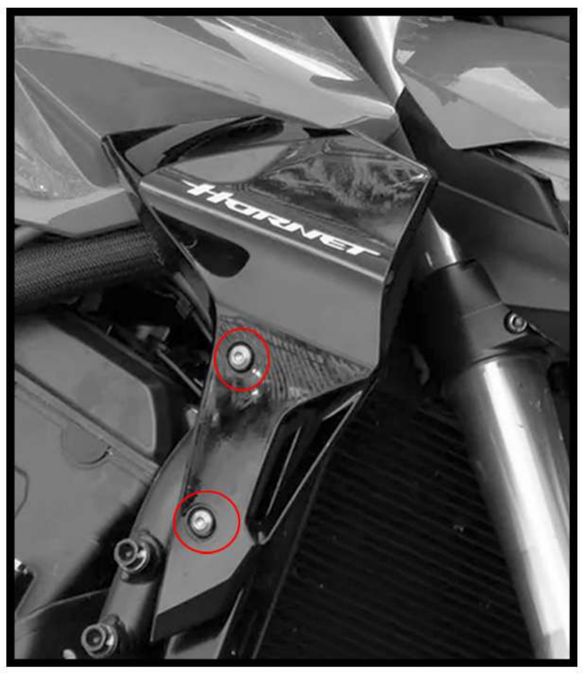


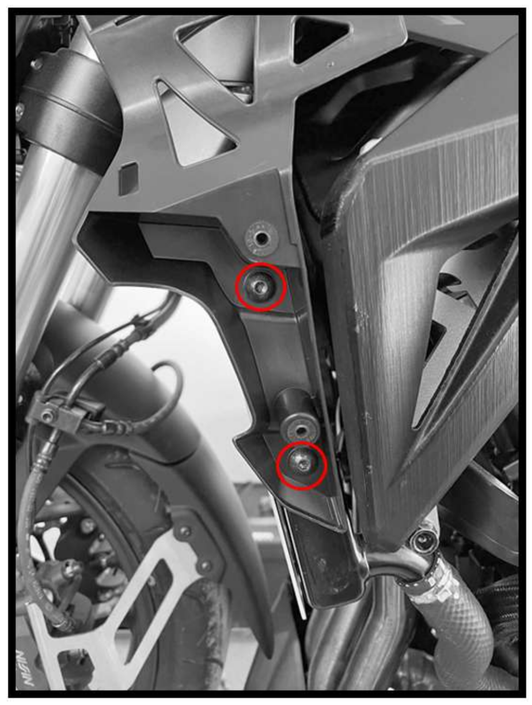

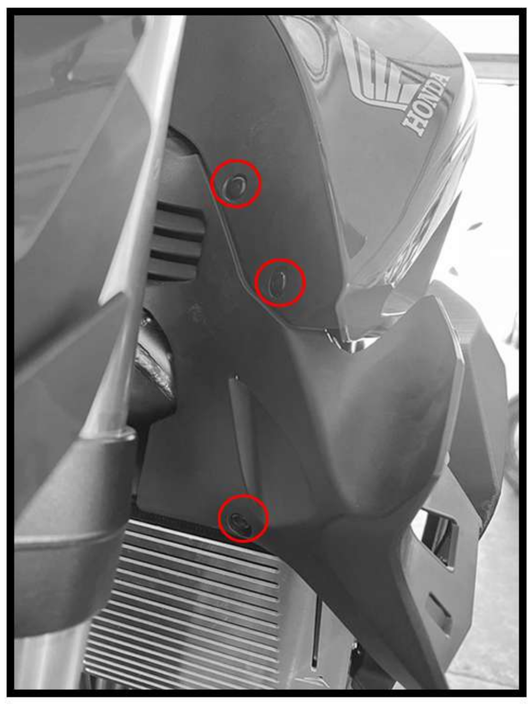


**Please Note:**

**We advise that all fixings are checked periodically.**

**Any questions?**
**sales@pyramidmoto.co.uk**
**+44 (0)1427 677990**
**www.pyramidmoto.co.uk**

**Follow us on social media and feel free to leave us a review!**

# 21150 Honda CB1000 Hornet 2025> Front Infill Panels Fitting Instructions

FIG. 2

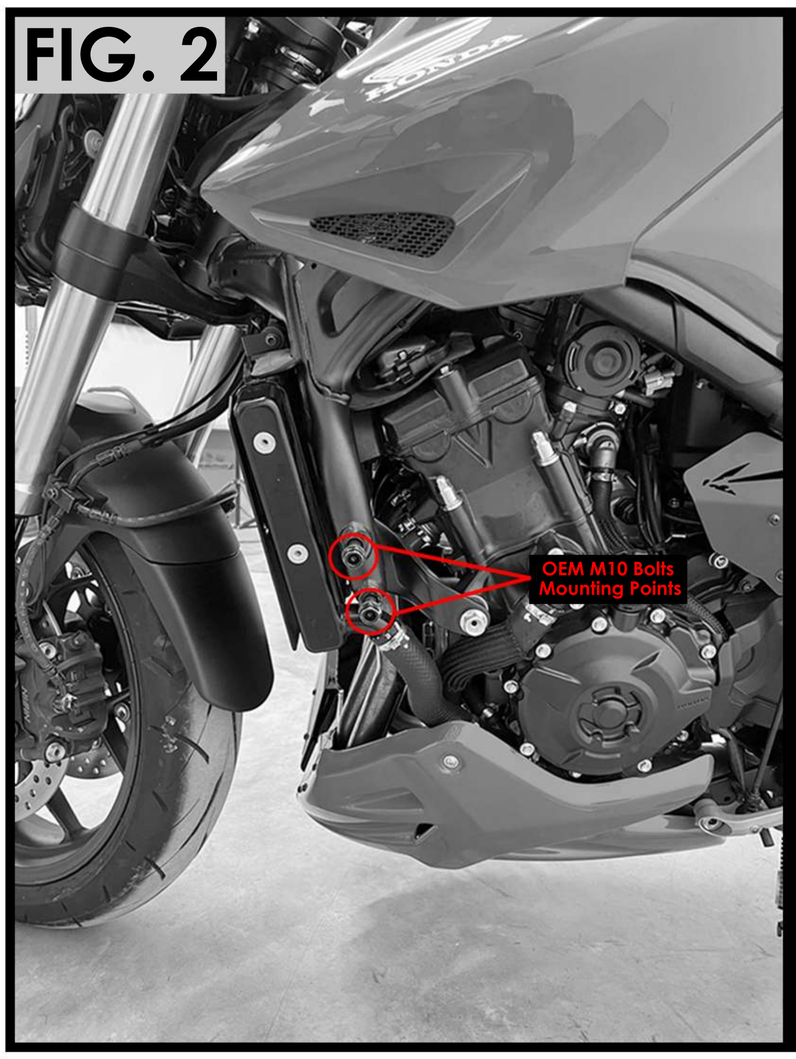


FIG. 3

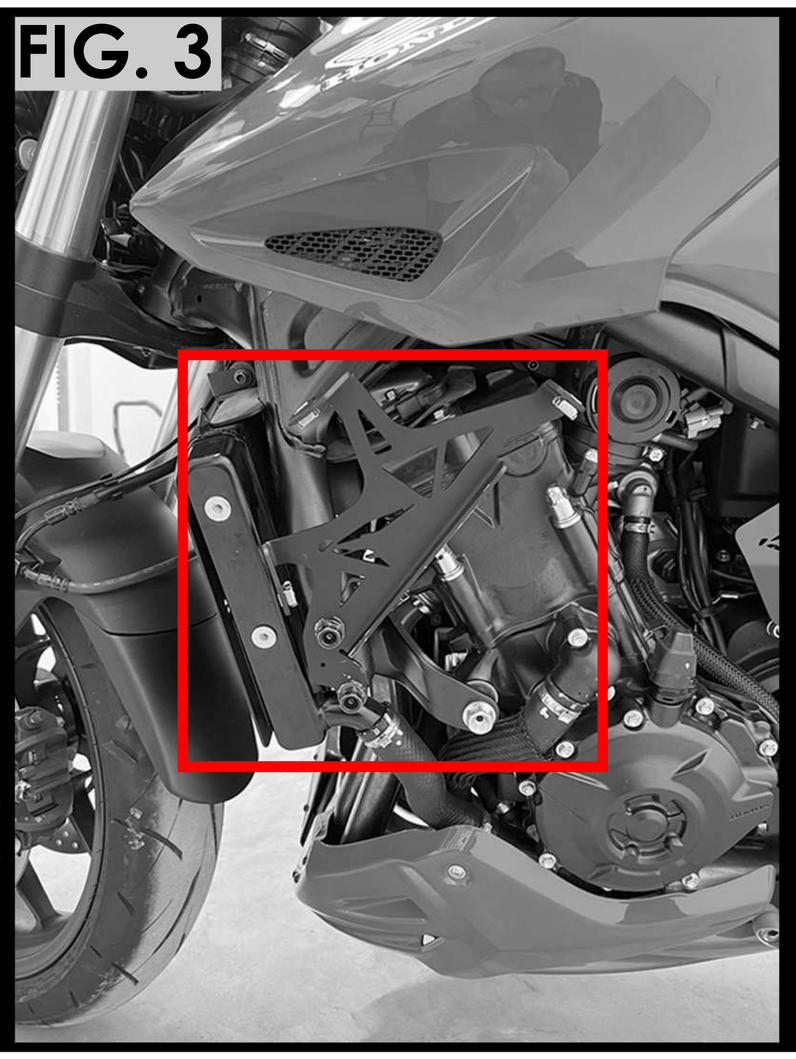

FIG. 4



FIG. 5

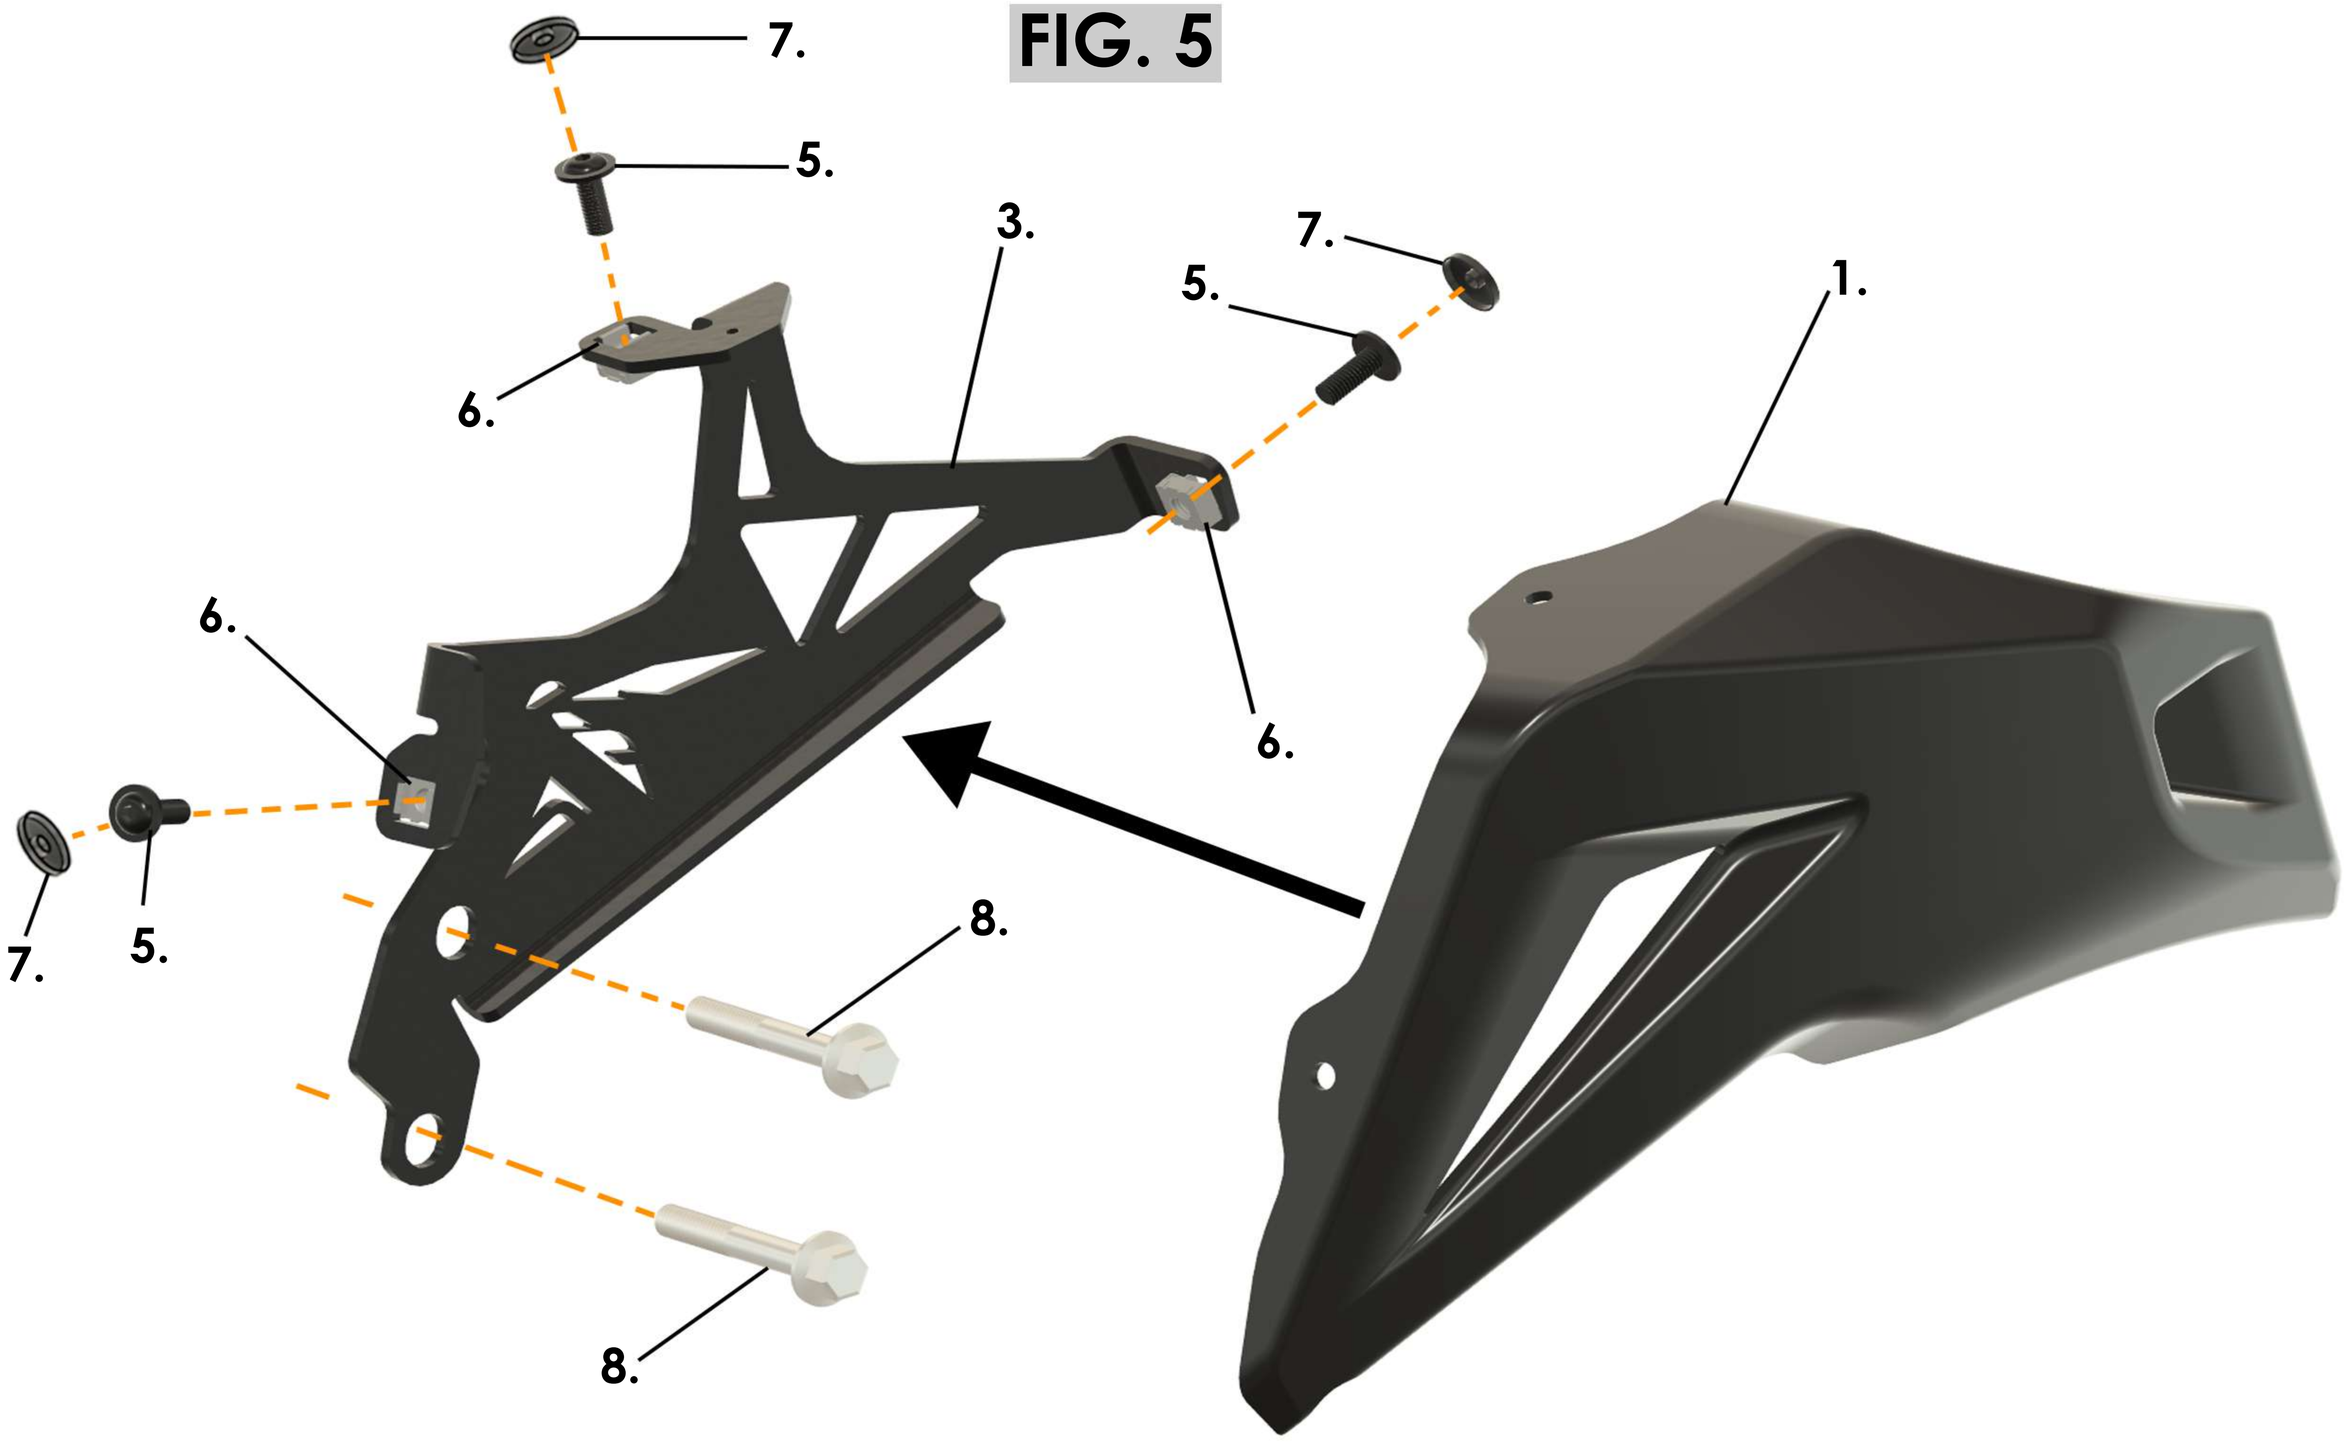


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

Follow us on social media and feel free to leave us a review!