21736 Honda CB1000 Hornet Rear Infill Panels 2025> Fitting Instructions

Kit Includes:

1.	1X	C21736A	Infill Panel LHS
2.	1X	C21736B	Infill Panel RHS
3.	1X	CFK21736A	Infill Panel Bracket LHS
4.	1X	CFK21736B	Infill Panel Bracket RHS
5.	1X	CFK21736C	Infill Panel Support Block LHS
6.	1X	CFK21736D	Infill Panel Support Block RHS
7.	4X	CBOLM50017	M5 x 12 Countersunk Torx Head Bolt
8.	4X	CWASM50002	M5 Stainless Steel Washer
9.	4X	CNUTM50002	M5 Nyloc Nut
10.	1X	CTAP0052	Adhesive Pad
11.	2X	CFOA0002	Foam Strip (70mm Length) (Pre-cut by Pyramid)

OEM Parts (From the Motorcycle):

12.	4X	OEM M8 Bolt

- Begin by removing the Pillion foot pegs to gain access to the mounting points. **Please Note:** Take care when removing the RHS Pillion peg as the exhaust will become loose. See '**FIG. 1**' for reference.

- Using the M5 fixings provided (**Items 7**, **8** and **9**), loosely attach the RHS Infill Panel Bracket (**Item 4**) to the RHS Infill Panel (**Item 2**). See '**FIG. 2**' for reference. Once the bracket is in the correct position, fully tighten the fixings.

- Attach **3** x Adhesive Pads and **1** x Foam Strip (**Items 10** and **11**) to the RHS Infill Panel Support Block (**Item 6**). See '**FIG. 3**' for reference.

- Practice aligning the Support Block with the Bracket. See '**FIG. 4**' for reference. Once the alignment matches the example, remove the protective layers from the Adhesive Pads and attach the Support Block to the Infill Panel.

- Using **2** x OEM M8 Bolts (**Item 12**), loosely attach the Bracket and Pillion foot peg to the mounting points referenced in '**FIG. 1**' making sure the Support Block is resting against the frame of the motorcycle. See '**FIG. 5**' for reference.

- Once in the correct position, fully tighten the fixings.

- Repeat the steps above for the LHS Infill Panel.

FIG. 1



FIG. 2

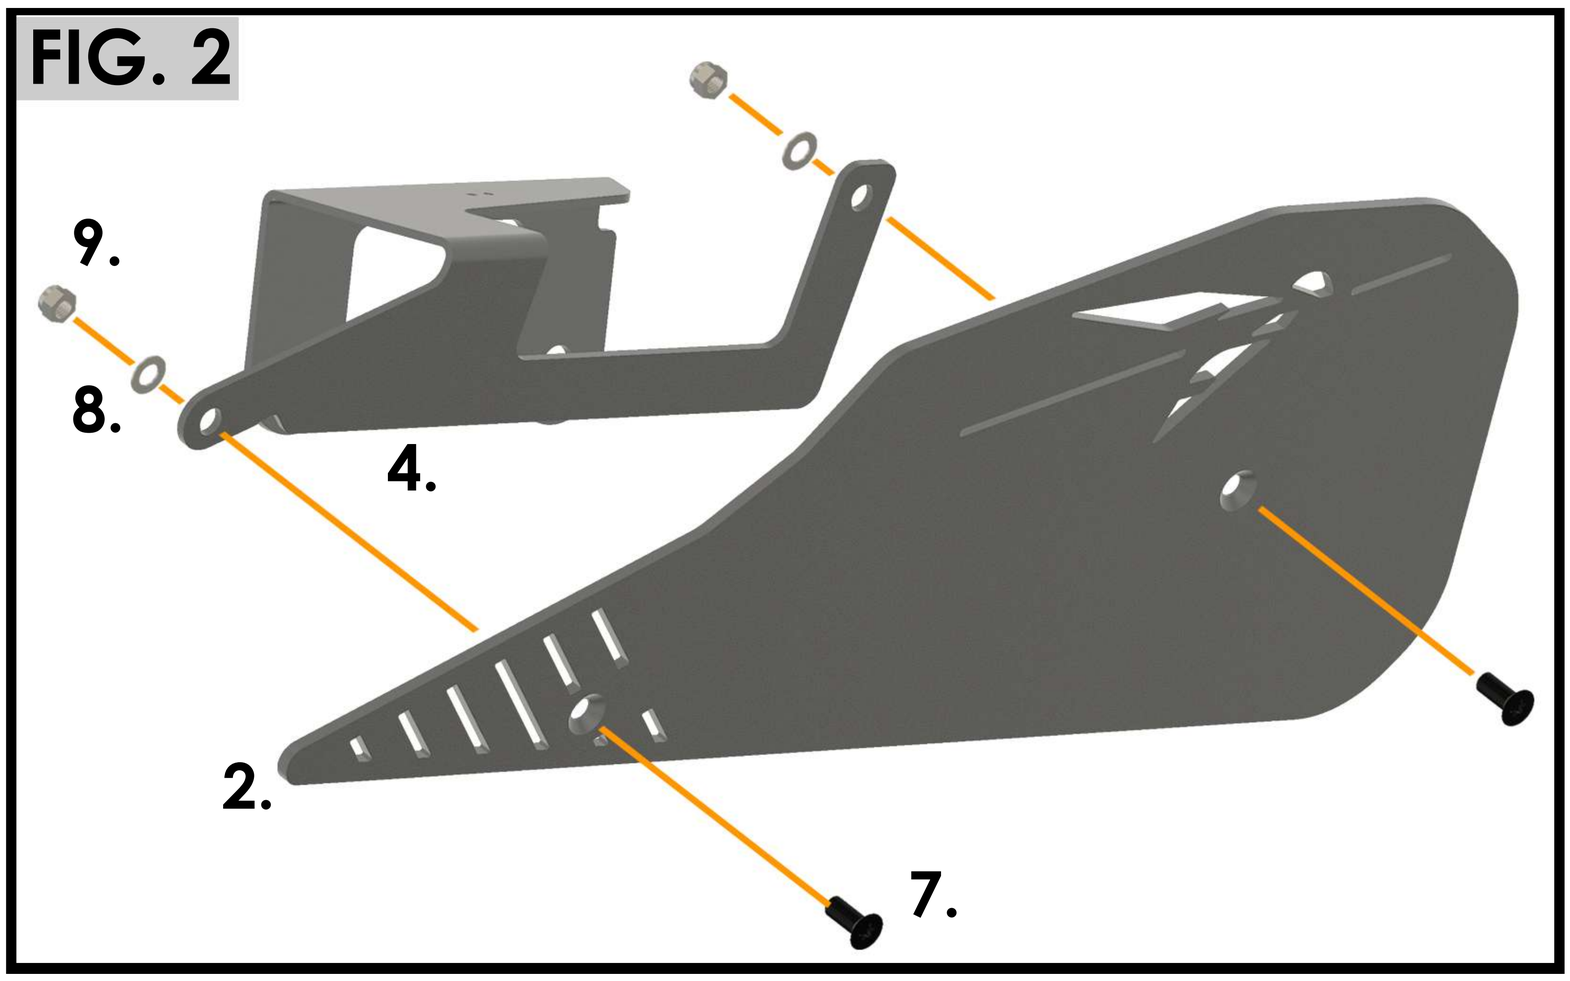

FIG. 3

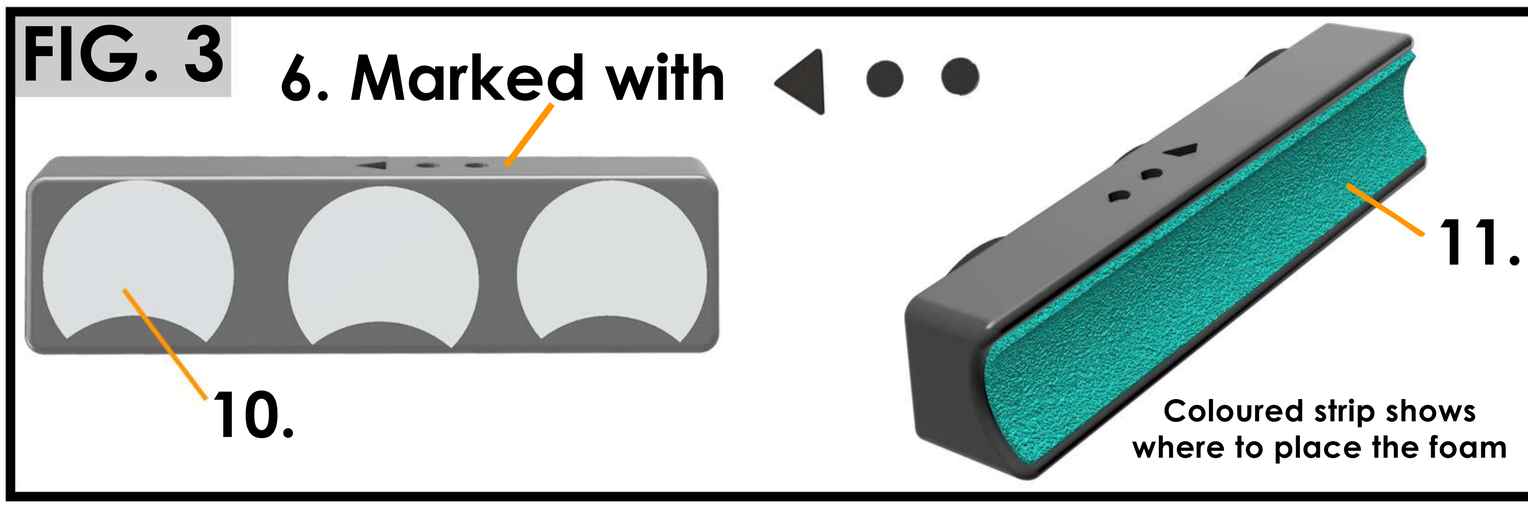

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

Follow us on social media and feel free to leave us a review!

21736 Honda CB1000 Hornet Rear Infill Panels 2025> Fitting Instructions

FIG. 4

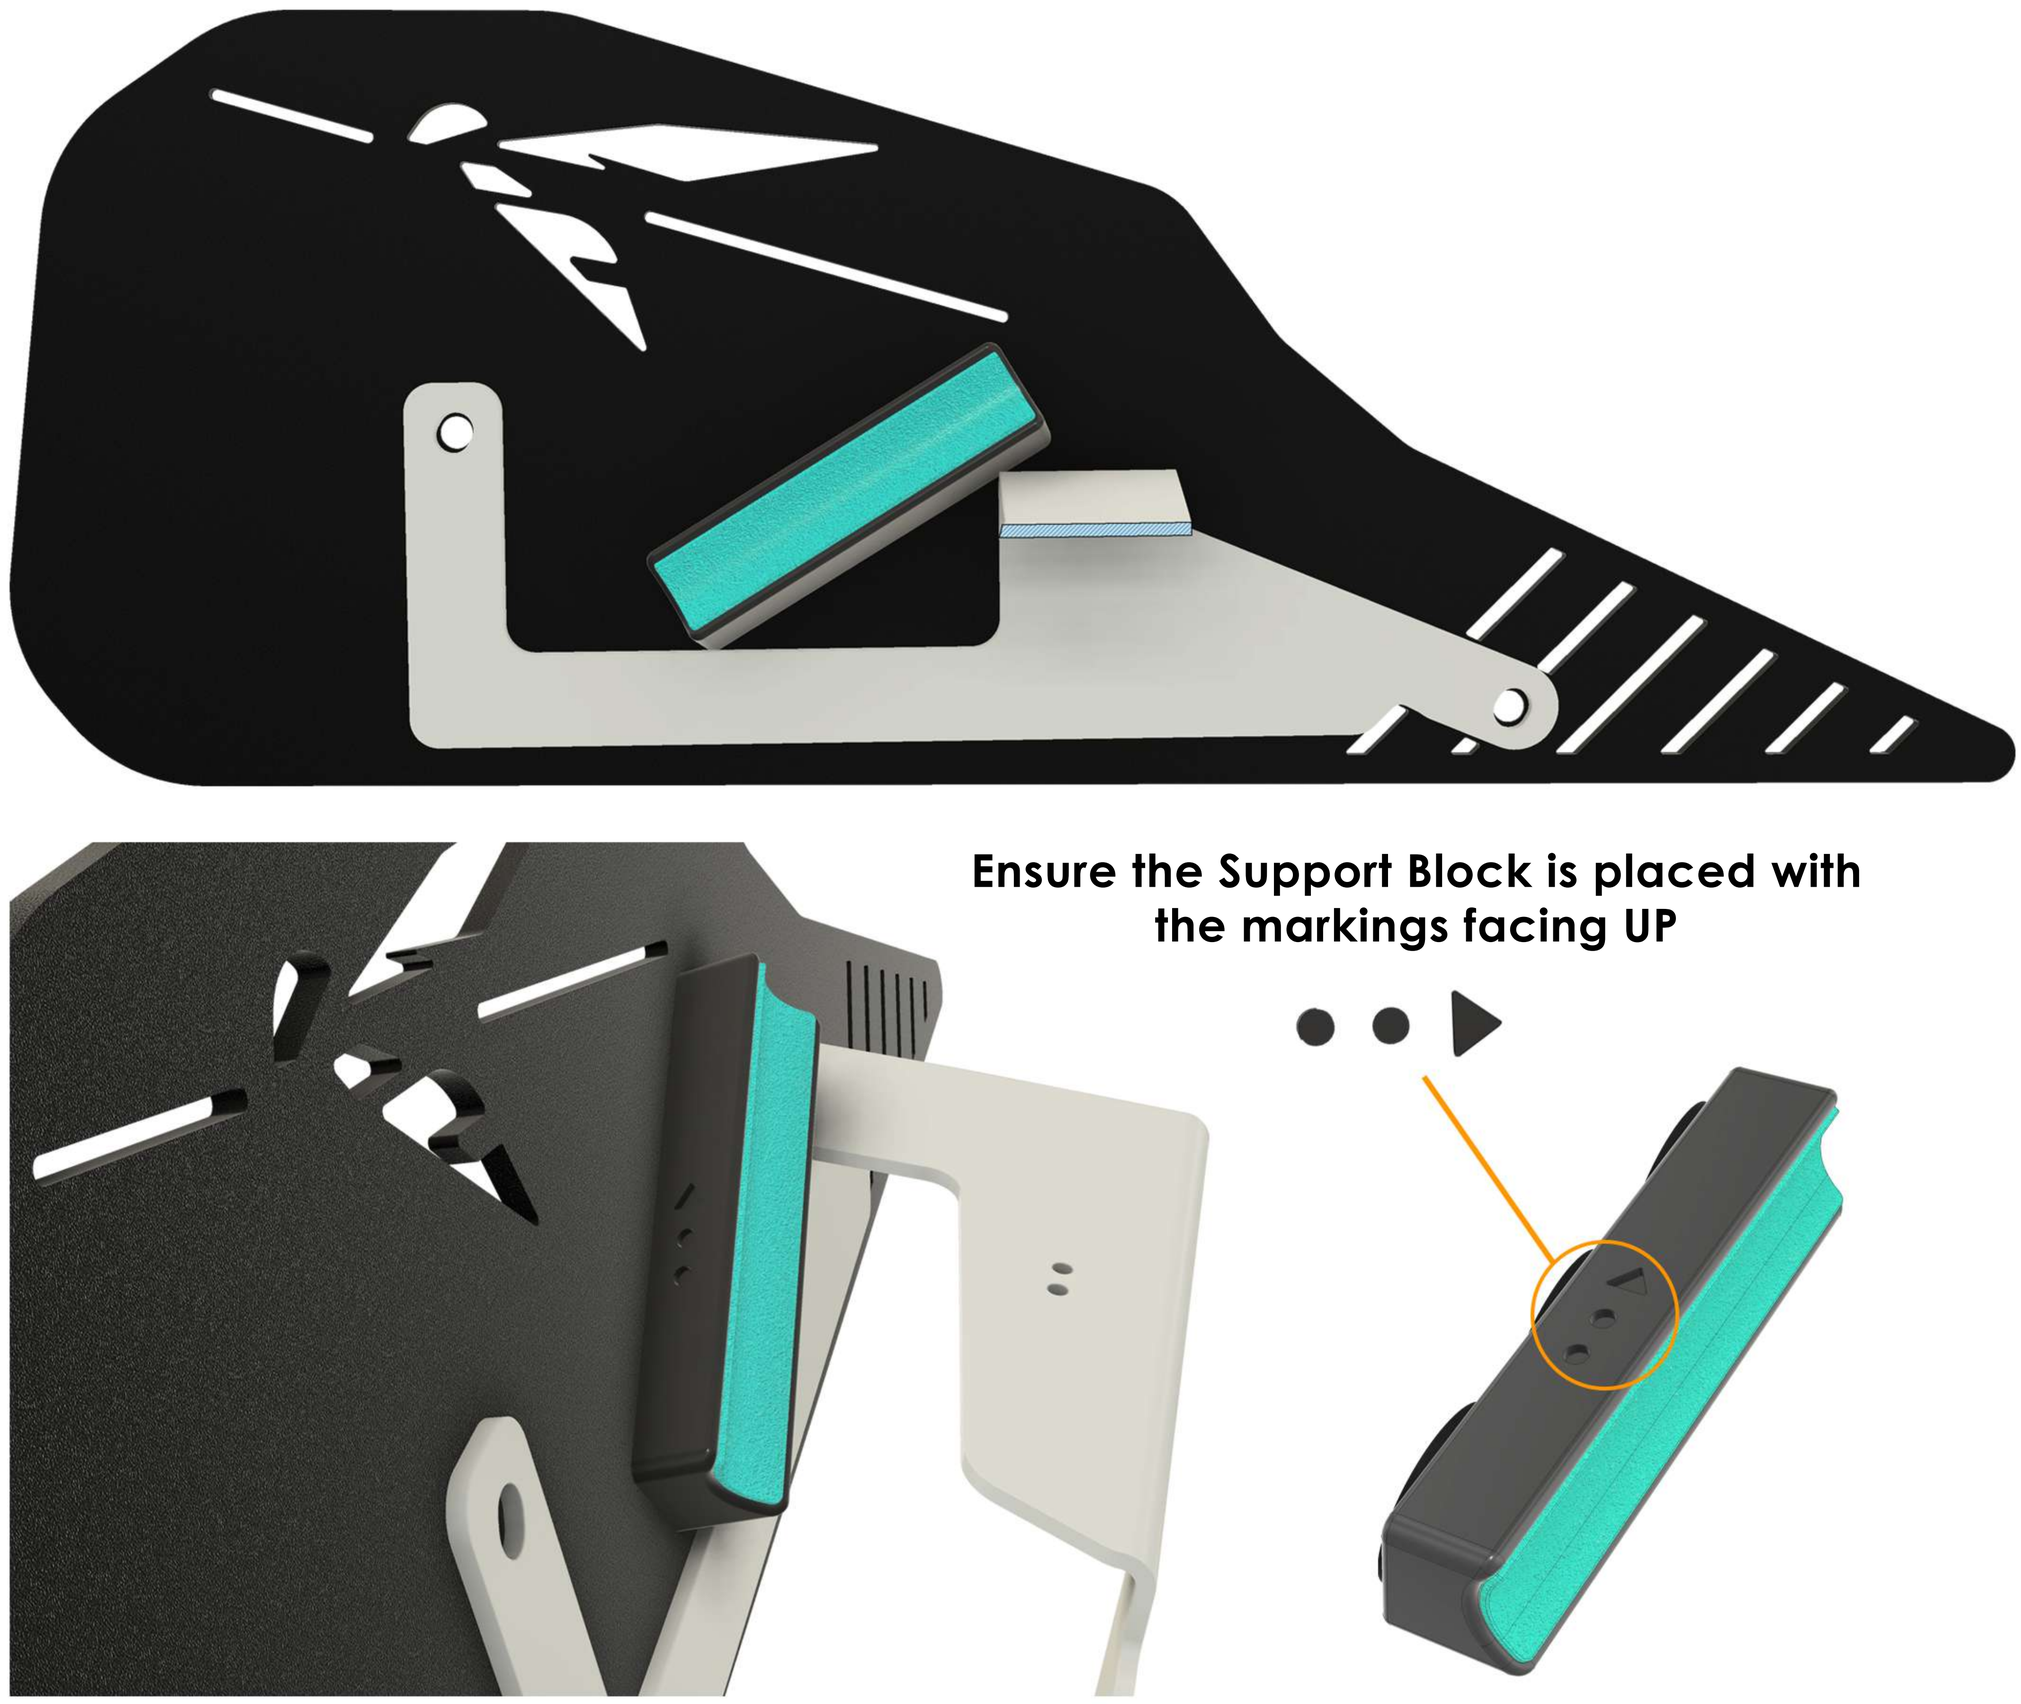

Ensure the Support Block is placed with the markings facing UP

FIG. 5

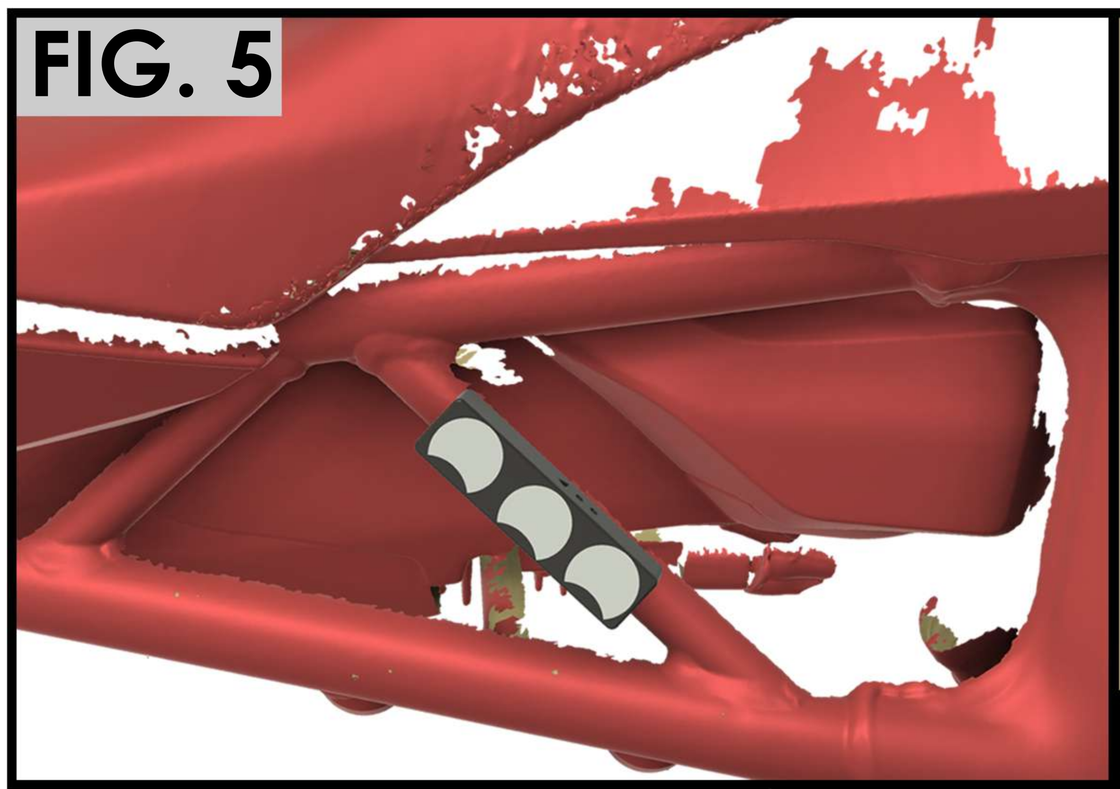



The Support Block is green for visual purposes only

This is a prototype fitted for visual purposes only



Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk

Follow us on social media and feel free to leave us a review!