SW-MOTECH

HP
R

uptstän
terstan

HON 00/600

ehinwei

M6	m
M8	Nm
M10	

Mounting Instr

Centersta
SW-M
and gr
on an un
to be compli
Use of any cen
or ground clearance

SW-MOTECH products shou
experienced motorcycle techn
of your ability to properly install
have the product installed by your l
dealer. SW-MOTECH takes no responsibility
caused by improper installation.

All screws, bolts, and nuts, including all replaceme
hardware provided by SW-MOTECH, should be tightened
to the torque specified in the OEM maintenance manual
for your motorcycle. If no torque specifications are
provided in
torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts, and nuts should be checked after
driving the first 50 km to ensure that all are tightened
to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite")
should be used to secure all screws, bolts, and nuts.

Kopf ohne Riffelung
M10 x 30 DIN 912
Anzahl/ Pcs. 1

HPS.01.276.001/B
Anzahl/ Pcs. 1

4
Mutter mit Bund,
selbstsichernd
Locking nut

6927

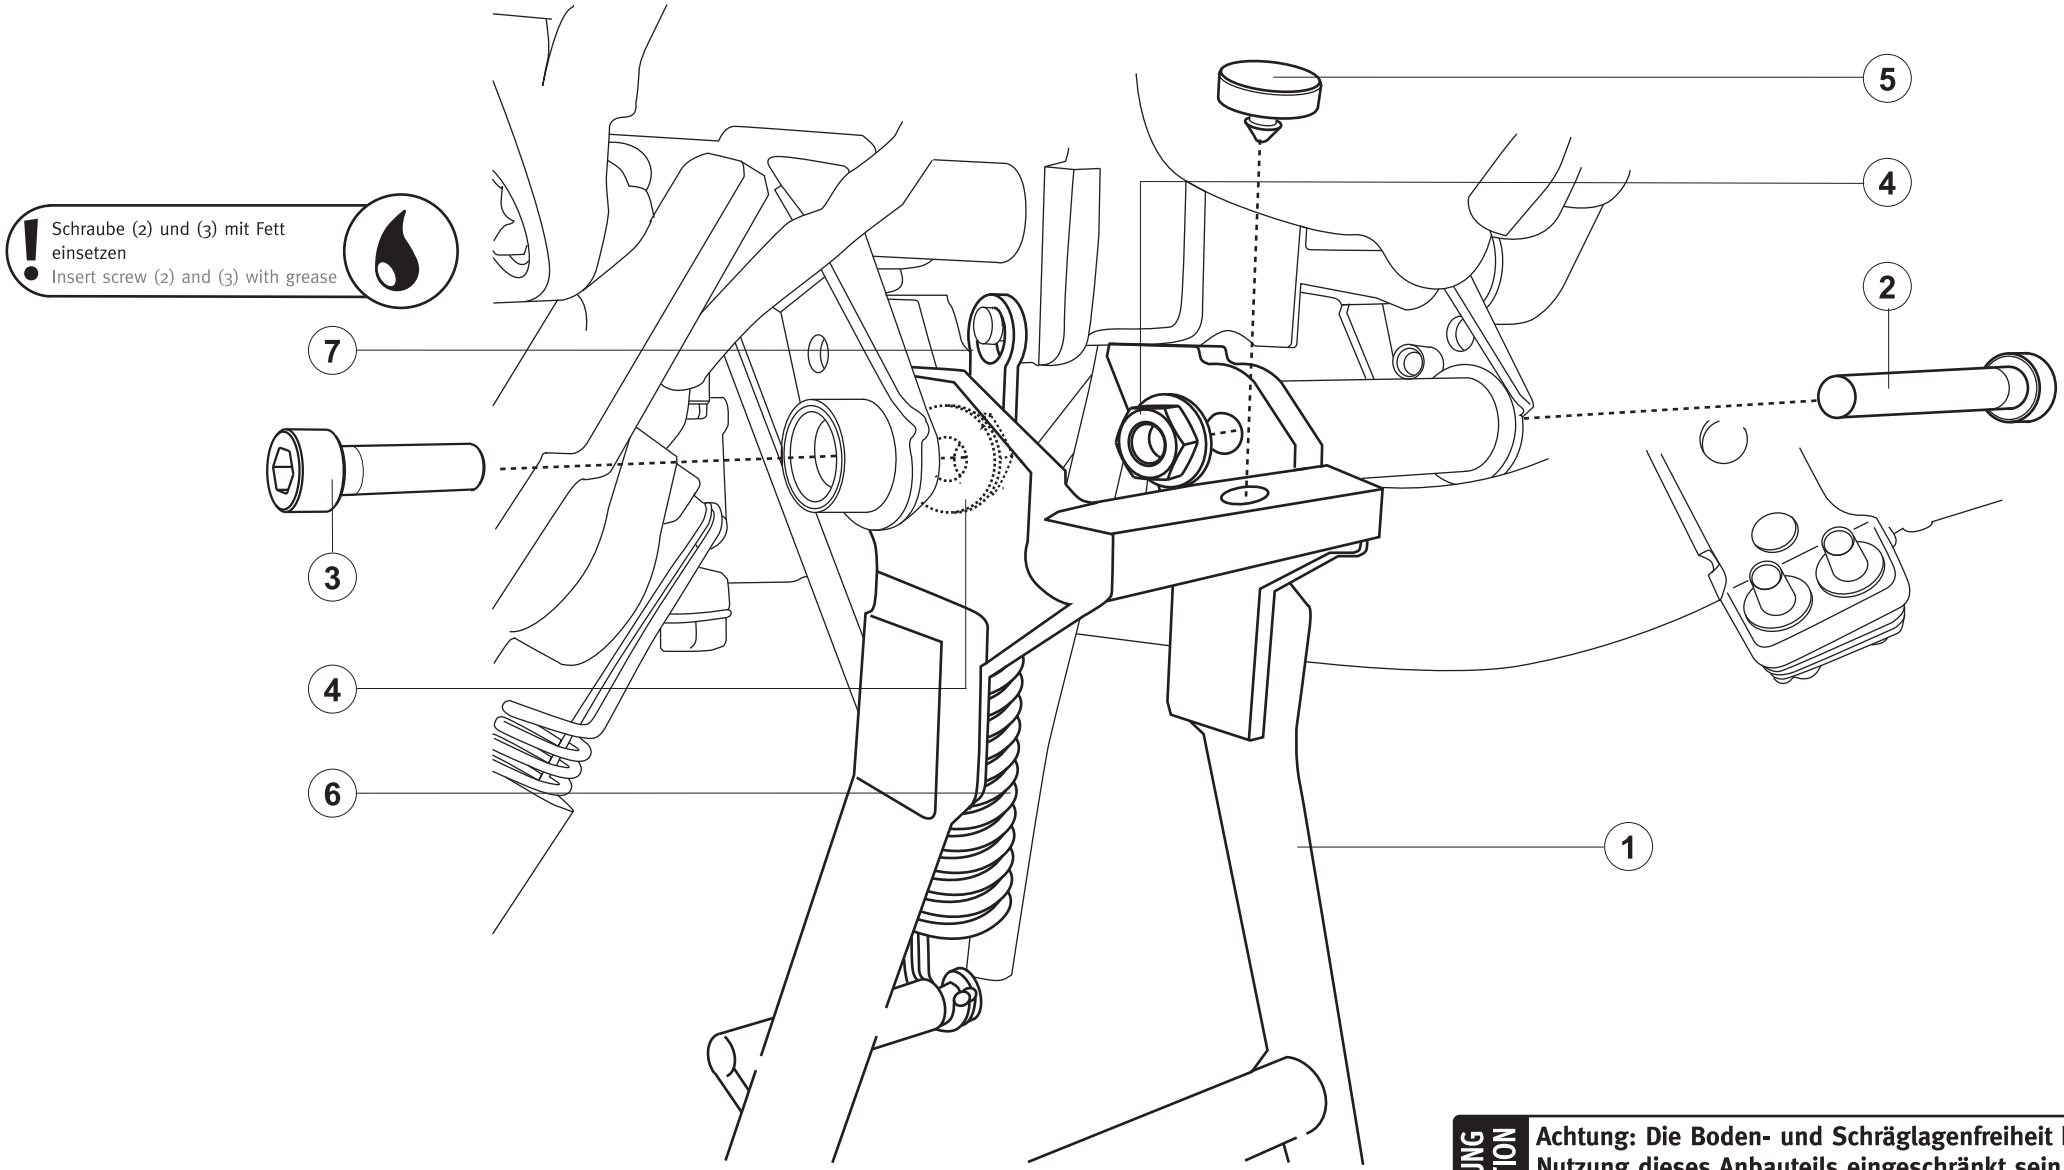

WARNUNG ATTENTION

Achtung: Die Boden- und Schräglagenfreiheit kann bei Nutzung dieses Anbauteils eingeschränkt sein.

Attention: Cornering and ground clearance can be reduced by using this accessory.